

R. S. ENO

Assistant Superintendent Salt Lake City

C. W. HEARN

Terminal Trainmaster Salt Lake City

W. E. CLAWSON

Terminal Trainmaster
Grand Junction

L. O. FICKLIN

Trainmaster Grand Junction

L. H. PENNINGTON

Trainmaster Helper

A. H. NANCE

Trainmaster Provo

E. R. HOUSE

Trainmaster - Road Foreman of Equipment Salt Lake City

M. McMULLEN

Assistant Trainmaster Ogden

L. P. URQUHART

Road Foreman of Equipment Grand Junction

B. H. WAGNER

Road Foremen of Equipment Salt Lake City

O. W. GEISLER

Chief Dispatcher Salt Lake City

Denver and Rio Grande Western Railroad Company

TIME TABLE

OF THE

UTAH DIVISION

No.



EFFECTIVE AT 12:01 A.M. MOUNTAIN STANDARD TIME Sunday, July 1, 1962

DESTROY ALL TIME TABLES
OF PREVIOUS DATE

For the exclusive guidance of Employes; not for the information of the Public

JOHN AYER, JR.
Vice President - Operations

C. V. COLSTADT
Chief Transportation Officer

C. E. McENANY
Superintendent

In case of emergency, at night when Salt Lake City switchboard is closed, or on Saturdays, Sundays and Holidays, the following offices may be reached by commercial telephones when there are no other means of communication available.

Location and Office	Number
Salt Lake City, Chief Dispatcher	DA 2-2079
Roper, Yard Office	DA 2-2307
Roper, Master Mechanic	DA 2-3839
Helper, Yard Office	GR 2-5871
Grand Junction, Dispatcher	CH 2-5153
Grand Junction, East Yard	

SIGNAL MAINTAINERS

	Signal District		
	From	То	
Grand Junction	MP 444.9	ABS 4561	
Mack	ABS 4561	ABS 4877	
Cisco	ABS 4877	ABS 5334	
Green River	ABS 5334	ABS 5824	
Price	ABS 5824	ABS 6240	
Helper	ABS 6241	ABS 6459	
Soldier Summit	ABS 6459	${f ABS}~6797$	
Provo	ABS 6797	ABS 7072	
Midvale	ABS 7072	ABS 7360	
Salt Lake City	ABS 7360	ABS 7798	

LOCAL WATCH INSPECTORS

Name	Location
George R. Parsons	Grand Junction
McKnight Bros	Delta
G. J. DeVinny	Montrose
Woody Jewelry Store	Helper
G. H. Heindselman	Ртоvо
H. B. Miller & Co	Salt Lake City
L. C. West & Sons	Ogden

AVOID DAMAGE — SWITCH CUSTOMERS' CARS CAREFULLY

OVERSPEED Couplings are DAMAGING—Here's what happens:

4 miles per hour □	SAFE COUPLING SPEED
5 miles per hour 🗆🕳	Damage begins
6 miles per hour □	2½ times as damaging as 4 MPH
7 miles per hour □	3 times as damaging as 4 MPH
8 miles per hour 🗆 💳 🕳	4 times as damaging as 4 MPH
9 miles per hour □	5 times as damaging as 4 MPH
10 miles per hour □	6 times as damaging as 4 MPH

Damage to freight or car can be avoided by always keeping coupling speed within the safe range—NOT OVER 4 MILES PER HOUR—A BRISK WALK.

HANDLE FREIGHT CAREFULLY AND KEEP OUR CUSTOMERS!

•	SPEED	TABLE	
TIME	MILES	TIME	MILES
PER	PER	PER	PER
MILE	HOUR	MILE	HOUR
36"	100	1'11"	50.7
37"	97.3	1′12″	50
38"	94.7	1′13″	49.3
39"	92.3	1'14"	48.6
40"	92.5	1'15"	48
40	9U	110	
41"	87.8	1′16″	47.4
42"	85.7	1'17"	46.8
43"	83.7	1'18"	46.2
43		1'19"	45.6
44"	81.8	1′20″	
45"	80	1'20"	4 5
46"	78.3	1′25″	42.4
40	76.6	1′30″	40
47"		1'35"	37.9
48"	75	1/40″	
49"	<u>73</u> .5	1'40''	36
50"	72	1′45″	34.3
51"	70.6	1′50″	32.7
52"	69.2	1′55″	31.3
59"	67.9	2'00"	30
54"	66.7	2′15″	26.7
55"	65.5	2′30″	24
56"	64.3	2 45"	21.8
57"	63.2	3′00″	20
58"	62.1	3′30″	17.1
59"	44	4'00"	15
1'00"	60	5′00″	12
1 00			
1′01″	59	6′00″	10
1'02"	58.1	7'00"	8.6
1'03"	57.1	7'30"	8
1'04"	56.2	8'00"	7.5
1 04	4	10'00"	6
1'05"	55.4	10 00	
1'06"	54 .5		i
410=22	53.7	1984	:
		:	1
1′08″		1	
1′09″	52.2	,	
1′10″	51.4	•	

4 W	ESTW	4RE)		MAIN LIN	E	EAS7	TWARD
EIRST	CLASS	SETS		Ī	Sub Division 5	f	FIRST	CLASS
17	7	Numbers	Sosts		Sub-Division 5 Stations	ity of	18	8
California Zephyr	Prospector	Station N	Mile Posts	1	'IME-TABLE No. 2	Capacity Siding	California Zephyr	Prospector
Leave Daily	Leave Daily	Stat		l	July 1, 1962	~	Arrive Daily	Arrive Daily
4 00PM	2 00	5000	449.6		GRAND JCT.	Yard	8 11 43 AM	12 O2AN
		2802		ı	DURHAM	96	· · · · · · · ·	
		ı	456.9	ı	RHONE	103		
		2808	460.5	1	FRUITA	129	11 29	11 41
2		!	468.9	4	MACK	148		
		2816	473.1		RUBY	145		
		2818	478.0	1	SHALE	85	<i>.</i>	
		9920	483.3		UTALINE	116	· · · · · · · <i>- ·</i>	
		9922	488.4		WESTWATER	98		
		9926	49 8.1		AGATÉ	150		
4 55	2 58	9928	504.4		CISCOwy	91	10 45	10 54
		9930	510.5	٥	WHITE HOUSE .	123	,	
		9932	515.6	Ė	ELBA	104		
		9934	520.7	g	SAGERS	149		
x 5 21	s 3 32	9938	528.1	9	7.4 THOMPSONwy	137	x 10 20	s 10 27
		9940	533.8	R	BRENDEL	96		
		9942	540.4	10	FLOY	112		
		9944	546.9	1ZE	SOLITUDE	150		
5 47	s 4 02	9950	555.2	FA	8.3 GREEN RIVER. 7	N133	9 53	a 951
		9003	561.5	Ĕ	SPHINX	S 98 116		
		9004	567.6	٦	DESERT	115		
		9006	574.2		CLIFF	115		
		9008	581.4		WOODSIDE	123		
		9010.	586.6		5.2 GRASSY	118		
		9012	593.1		6.5 ——— CEDARw	114		
		9014	599.3	l	6.2 VERDE	98		
		9016	603.2		3.9 MOUNDSy	111		
		9021	611.1		7.9 ———	185		
					WELLINGTON 1.9			
			613.0	Н	WELLINGTON	117		
6 52	s 5 19		619.1		PRICEy	E120 W 81	8 50	s 8 42
		9028	622.1		MAXWELL	E114 W114		
7 O5PM	5 35AM	9032	626.4	H	ELPÉR BK	Yard	8 38AM	8 27M
Arrive Daily	Arrive Daily				(176.8)		Leave Daily	Leave Daily

Except as otherwise indicated, dispatcher Grand Junction controls all positive ABS and dual controlled switches. Where ABS and dual controlled switches are controlled by operators, they do so as directed by Dispatcher.

AAAINI IINIE

EVCT/Y/YDD

WEST\	WARD		M	<u>AIN</u>	LINE	EA	<u>STWA</u>	<u>RD 5</u>
FIRST	CLASS	ers			Code Die		FIRST	CLASS
17	7	Numbers	Mile Posts	ity of ing	Sub-Di Stat		18	8
California Zephyr	Prospector	Station 1	Mile	Capacity Siding	Time-Ta	ble No. 2	California Zephyr	Prospector
Leave Daily	Leave Daily	Sta			July 1	, 1962	Arrive Daily	Arrive Daily
7 08PM	5 40M	9032	626.4	Yard	1001 1	PERBK	8 35M	8 2 2M
7 13	5 45	9038	628.8	68	UTAL JC	H RY.	8 29	8 14
,,		9044	630.4	Yard	l≥{CASĪ	LE CATE		
7 19	5 5 1	9046	631.6	Æ 75	E ROY	AĽ	8 23	8 08
		9050	638.9	102	≰ KYU	.3 NEw	. <u> </u>	
		9054	644.4	Yard	-1COLTOI	i.5 ———		
7 51	f6 22	9056	651.4	Yard E115		IMIT DNY	7 52	f7 30
8 08	6 42	9060	661.0	E115	GILLI	${ m ULYw}$	7 33	7 10
8 16	6 52	9062	665.6	E103	DETC		7 23	7 01
8 25	7 02	9066	672.2		NARE	ROWS	7 14	6 52
8 33	7 10	9068	676.5	E116 E108	RIO 4		7 05	6 44
8 39	s 7 17	9070	680.9	W117 E123	STHIS	TLE. Dnbfjkswy	6 58	s 6 37
		9078	688.6		ž≝ _{GOM} i	.7 EX	6 49	6 24
8 55	f7 33	9302	695.8		B SPRII	2 8.2 NG- LEJ	6 41	66 16
		ļ	698.9		¥	${f CROSSING}$		
s 9 05	s 7 44	9310	701.1	Yard E107	PROV	ONBFJKOSWY	s6 35	₅6 1O
			705.7		U.P.	$\frac{6}{\text{CROSSING}}$		
		9317	707.2		GENI			
		9319	708.4		PIPE	.2 MILL		
		9321	713.7	175	AMERI FORF			
		. 9325	720.3	150	6.6 MESA			
		. 9328	728.6	158	RIVER	TON		
		. 9329	732.6	ş	S ENI			
		. 9332	734.6	Yard	≥ MID	1.9 VALEdjwi 3.9		
		. 9336	738.4	E143 Yard	≥{mui	RRAY		
9 45	8 28	9350	740.7		EAS	2.3 T ROPER 1.8		
9 47	8 30	9350	742.	Yard	1 1 (BE	5 51	5 21
,			744.	2	U.P. CH	OSSING		
10 00P	8 40A	M 6000	745.1	Yard	SALT LÄ	KE CITY BE	5 454	
Arrive Daily	Arrive Daily				(119.		Leave Daily	Leave Daily
Trair	s operate	e by	Cent	ralized	Traffic	Control b	etween ":	Beginning

Trains operate by Centralized Traffic Control between "Beginning of CTC" and "End of CTC". Signs at the following locations:
East end Helper.
Between Lynn and East end Soldier Summit.
On Westward Main track East end Thistle.
On Eastward Main track West end Thistle.
Between Provo and East Roper.
Except as otherwise indicated, dispatcher Salt Lake City controls all positive ABS and dual controlled switches. Where ABS and dual controlled switches are controlled by Operators, they do so as directed by Dispatcher.

by Dispatcher.

ABS will be placed to left of tracks they govern at following lo-

cations:
Eastward on
Westward Track: 6336 W 6352 W 6372 W 6420 W 6442 W

Home Signal MP 705.8

Westward on westward on Eastward Track: 6335 E 6351 E 6371 E 6419 E 6443 E Eastward on Main Track: 7424 7434

W E 2 I A	<u>VARD</u>	MAIN LINE	<u>EASTWAR</u>
Station Numbers	Mile Posts	Sub-Division 7 Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
6000	745.1	SALT LAKE CITY	nk Yard
	745.5	GRANT TOWER	
9816	750.9	NORTH SALT LAKE	
9824	753.9	I WOODS CROSS	
9840	767.6	6 LAYTON	47
9847	770.8		. р 115
	771.3	U. P. CROSSING	· · · · · · · · · · · · · · · · · · ·
9854	775.1	CLEARFIELD. 0.5 U. P. CROSSING. 3.8 ROY. 6.0 TRANSFER.	70
9886	781.1	R TRANSFER	.в Yard
9886	782.0	OGDEN	

Trains operate by Centralized Traffic Control between "Beginning of CTC" and "End of CTC" signs located near 5th North St., Salt Lake City, and East end of Woods Cross.

MONTROSE BRANCH

WEST	WARD)		EAST	WARD
103 Freight			Sub-Division 16 Stations TIME-TABLE No. 2	Capacity	104 Freight
Leave Daily	Station Numbers	Mile Posts	Jujy 1, 1962	of Siding	Arrive Daily
	2 650	351.5	MONTROSEDBFKOSWY	Yard	
	2644	356.9	ROE	15	
• • • • • • • • • • • • • • • • • • • •	2638	362.2	OLATHEb	15	
	2634	367.5	CHIPETA	23	
7 12PM	2630	372.8	DELTA DBJEWY	Yard	6 10M
7 23	2624	377.5	ROUBIDEAU	60	5 59
7 56	2616	391.0	DOMINGUEZ	38	5 26
8 1 1	2614	397.7	BRIDGEPORT	89	5 09
8 45	2608	411.8	WHITEWATER	38	4 35
9 20N	5000	424.3	GRAND JCTBJK	Yard	4 OOM
Arrive Daily					Leave Daily

No. 103 is Superior to No. 104 Delta to Grand Jct.

NORTH FORK BRANCH

WESTWARD EASTWARD

TYLDIT	MAND			FUJI	** ^ \\
103 Freight Leave Daily	Station Numbers	Mile Posts	Sub-Division 16-A Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding	104 Freight Arrive Daily
	2740	415.3	SOMERSETw	Yard	
5 00M	2728	405.9	PAONIA	26	8 22M
5 32	2718	397.8	8.1 HOTCHKISSby	21	7 50
5 53	2714	392.5	7.0 ROGERS MESA	62	7 29
6 21	2712	385.5	PAYNE	28	7 01
6 35	2710	380.9	AUSTIN	14	6 47
6 38	2708	379.8	SAXTON	59	6 44
6 52M	2630	372.8	DELTADBJEWY	Yard	6 30#
Arrive Daily				_	Leave Daily

No. 103 is Superior to No. 104 Paonia to Delta.

SUNNYSIDE BRANCH

WESTWARD

EASTWARD

Station Numbers	Mile Posts	Sub-Division 5-A Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
9106	17.5	SUNNYSIDE	Yard
9104	13.2	COLUMBIA JCTr	120-120
9101	5.8	BANNING	85
9016		MOUNDS	Yard

8 WESTWARD

MARYSVALE BRANCH

EASTWARD

EASTWARD

SECOND CLASS Thistic Station Numbers Preight Station Numbers Sub-Division 6-D Stations Time Table No. 2 July 1, 1962 Freight Arrive Daily Except Sunday Except Sunday Except Sunday Except Sunday Except Sunday Except Sunday Except Except	******	***				MAKE
Teright Station Numbers Daily Except Daily Except Daily Except Except Dai				Cut Diulaia C D		
132.8 END OF TRACK 0.6 MARYSVALE Yard 11.0 MARYSVALE Yard 12.0 MARYSVALE Yard 14.0 MARYSVALE Yard 15.0 MARYSVALE Y	Freight Leave Daily Except		from	Stations TIME TABLE No. 2	Capacity of Siding	Freight Arrive Daily Except
	- Dunday		122 8	END OF TRACK		- Bunday
11.6 SEVIER 16 16 16 16 16 16 16 1		0207		0.6	Vord	
		ì		11.6		.,
111.7				4.1		
10.0 10.0				4.8		
108.7 CENTRAL 15 15				1.7		
				1.3		
100.1 3.6 100.1 3.6 100.1 3.8 100.1 3.8 100.1 3.8 100.1 3.8 100.1				5.0	1	
9279 100.1 KEMA 30 3.8 3.4 3.8 3.4 3.8 3.4 3.8 3.8 3.4 3.8 3				3.6		
9275 96.3 SIGURD 34 4.1 AURORA 51 5.8	• • • • • • • • • • • • • • • • • • • •	9279	100.1	KEMA	30	
7 45 PN 9262 86.4 SALINA DEFENT Yard 11 O1 PN 3.9 REDMOND 9 10 53 8 10 9259 79.2 AXTELL 18 10 46 8 20 9256 75.0 SPEARMINT 38 10 37 8 25 9254 72.9 GUNNISON D 26 10 32 8 40 9252 86.3 STERLING 17 10 18 9 15 9251 60.8 MANTI DY YARD 10 06 9 40 9228 53.4 EPHRAIM DY YARD 9 50 9 45102 9227 52.5 WEST EPHRAIM 61 9 45101 10 05 9222 44.1 SPRING CITY 19 9 20 10 25 9216 38.6 FAIRVIEW 29 8 50 11 15 9209 23.3 HILL TOP 28 8 25 11 39 9206 14.8 INDIANOLA 23 8 00 12 15 M 9070 THISTLE DNEFIESWY YARD 7 15 PM Ar. Daily		9275	96.3	SIGURD	34	
7 45 PN 9262 86.4 SALINA. DBFKWY 3.9 Yard 11 01 PN 8 02 9260 82.5 REDMOND. 9 10 53 8 10 9259 79.2 AXTELL. 18 10 46 8 20 9256 75.0 SPEARMINT 38 10 37 8 25 9254 72.9 GUNNISON D 26 10 32 8 40 9252 66.3 STERLING T 17 10 18 9 15 9251 60.8 MANTI DY Yard 10 06 9 40 9 40 9228 53.4 EPHRAIM DY Yard 9 50 9 50 9 45102 9227 52.5 WEST EPHRAIM 61 9 45101 10 05 9222 44.1 SPRING CITY 19 9 20 10 25 9216 38.6 MT. PLEASANT 90 9 6 10 50 9214 32.0 FAIRVIEW 29 8 50 11 15 9209 23.3 HILL TOP 28 8 25 11 39 9206 14.8 INDIANOLA 23 8 00 12 15 MI 9070 THISTLE DNBFJESWY Yard	• • • • • • • • • • • • • • • • • • • •	9271	92.2	AURORA	51	
8 02 9260 82.5 REDMOND. 9 10 53 8 10 9259 79.2 AXTELL. 18 10 46 8 20 9256 75.0 SPEARMINT. 38 10 37 8 25 9254 72.9 GUNNISON D 26 10 32 8 40 9252 66.3 STERLING. 17 10 18 9 15 9251 60.8 MANTI. DY Yard 10 06 9 40 9228 53.4 EPHRAIM. DY Yard 9 50 9 45102 9227 52.5 WEST EPHRAIM. 61 9 45101 10 05 9222 44.1 SPRING CITY. 19 9 20 10 25 9216 38.6 MT. PLEASANT. 9 06 10 50 9214 32.0 FAILL TOP. 28 8 25 11 39 9206 14.8 INDIANOLA. 23 8 00 12 15 M 9070 THISTLE. DNBFJESWY YARD 7 15 PM Ar. Daily	7 45 №	9262	86.4	SALINA DBFKWY	Yard	11 O1 PW
8 10 9259 79.2 AXTELL. 18 10 46 8 20 9256 75.0 SPEARMINT 38 10 37 8 25 9254 72.9 GUNNISON D 26 10 32 8 40 9252 66.3 STERLING 17 10 18 9 15 9251 60.8 MANTI DY Yard 10 06 9 40 9228 53.4 EPHRAIM DY Yard 9 50 9 45102 9227 52.5 WEST EPHRAIM 61 9 45101 10 05 9222 44.1 SPRING CITY 19 9 20 10 25 9216 38.6 MT. PLEASANT 9 06 10 50 9214 32.0 FAIRVIEW 29 8 50 11 15 9209 23.3 HILL TOP 28 8 25 11 39 9206 14.8 INDIANOLA 23 8 00 12 15 M 9070 TISTLE DNEFJESWY YARD 7 15 PM Ar. Daily	8 02	9260	82.5	REDMOND	8	10 53
8 20 9256 75.0 SPEARMINT 38 10 37 8 25 9254 72.9 GUNNISON D 8 40 9252 66.3 STERLING 17 10 18 9 15 9251 60.8 MANTI DY Yard 10 06 9 40 9228 53.4 EPHRAIM DY Yard 9 50 9 45102 9227 52.5 WEST EPHRAIM 61 9 45101 8.4 SPRING CITY 19 9 20 10 25 9216 38.6 MT. PLEASANT 9 06 10 50 9214 32.0 FAIRVIEW 29 8 50 11 15 9209 23.3 HILL TOP 28 8 25 11 39 9206 14.8 INDIANOLA 23 8 00 12 15 M 9070 THISTLE DNBFJESWY YARD 7 15 PM Ar. Daily Lv. Daily	8 10	9259	79.2	AXTELL	18	10 46
8 40 9252 66.3 STERLING	8 20	9256	75.0	SPEARMINT	38	10 37
8 40 9252 66.3 STERLING 17 10 18 9 15 9251 60.8 MANTI DY Yard 10 06 9 40 9228 53.4 EPHRAIM DY Yard 9 50 9 45102 9227 52.5 WEST EPHRAIM 61 9 45101 10 05 9222 44.1 SPRING CITY 19 9 20 5.5 MT. PLEASANT 9 06	8 25	9254	72.9		26	10 32
9 15 9251 60.8 MANTI	8 40	9252	66.3	STERLING	17	10 18
9 40 9228 53.4 EPHRAIM Dx O.9 945101 9 45102 9227 52.5 WEST EPHRAIM 61 9 45101 10 05 9222 44.1 SPRING CITY 19 9 20 10 25 9216 38.6 MT. PLEASANT 906 10 50 9214 32.0 FAIRVIEW 29 8 50 11 15 9209 23.3 HILL TOP 28 8 25 11 39 9206 14.8 INDIANOLA 23 8 00 12 15 M 9070 THISTLE. DNBFJESWY Yard 7 15 PM Ar. Daily Lv. Daily	9 15	9251	60.8	MANTI	Yard	10 06
9 45102 9227 52.5 WEST EPHRAIM 61 9 45101 10 05 9222 44.1 SPRING CITY 19 9 20 10 25 9216 38.6 MT. PLEASANT 9 06 10 50 9214 32.0 FAIRVIEW 29 8 50 11 15 9209 23.3 HILL TOP 28 8 25 11 39 9206 14.8 INDIANOLA 23 8 00 12 15 M 9070 THISTLEDNBFJESWY Yard 7 15 PM Ar. Daily	9 40	9228	53.4	EPHRAIM	Yard	9 50
10 05 9222 44.1 SPRING CITY 19 9 20 10 25 9216 38.6 MT. PLEASANT	9 45102	9227	52.5	WEST EPHRAIM	61	9 45101
10 25 9216 38.6 MT. PLEASANT	10 05	9222	44.1		19	9 20
10 50 9214 32.0 FAIRVIEW	10 25	9216	38.6	5,5 MT. PLEASANT		9 06
11 15	10 50	9214	32.0		29	
11 39 9206 14.8 INDIANOLA		9209	23.3	8.7 HILL TOP	28	
12 15 AM 9070 THISTLEDNBFJKSWY Yard 7 15 PM Ar. Daily Lv. Daily		9206	14.8		23	
Ar. Daily Lv. Daily		9070		14.8	Yard	
, , , , , , , , , , , , , , , , , , ,	Ar. Daily					Lv. Daily

No. 101 is Superior to No. 102 from Salina to Ephraim.

KENILWORTH BRANCH WESTWARD

	Station Numbers	Miles from Kenilworth Jct.	Sub-Division 6-A Stations TIME-TABLE No. 2 July 1, 1962	
	9112	6.2	KENILWORTH	
	9030		KENILWORTH JCT	

SPRING CANYON BRANCH 9 WESTWARD EASTWARD

Station Numbers	Miles from Spring Canyon Junction	Sub-Division 6-B Stations TIME-TABLE No. 2 July 1, 1962	
9136	7.2	MUTUAL	
9134	6.2	LATUDA	
9130	5.0	spring canyon	
9034		SPRING CANYON JCT	

PLEASANT VALLEY BRANCH WESTWARD EASTWARD

Station Numbers	Miles from Colton	Sub-Division 6-C Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
	21.5	END OF TRACK	•••••
9170	21.1	CLEAR CREEK	
9156	15.2	SCOFIELD Y	
9054		COLTON	Yard

WESTWARD TINTIC BRANCH EASTWARD

Station Numbers	Miles from Springville	Sub-Division 6-E Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
9475	39.1	EUREKA	Yard
9458	38.1	KNIGHTVILLE	17
9435	27.5	PEARL	8
9423	17.3	TOWNSEND	13
9420	15.4	SANTAQUIN	35
9418	10.8	PAYSON	28
9408	3.8	7.0 SPANISH FORK	23
9302		3.8 SPRINGVILLE	Yard

GOSHEN VALLEY BRANCH WESTWARD EASTWARD

Station Numbers	Miles from Dividend	Sub-Division 6-F Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
9439	,	DIVIDEND	16
9437	2.7	2.7 FLORA	
9438	5.2	IRON KING	9
9437	5.0	0.2 EUREKA STANDARD	19
9437	2.7	FLORA	•••••
9435	6.5	3.8 PEARL	8

10 PROVO CANYON BRANCH WESTWARD EASTWARD

Station Numbers	Miles from Provo	Sub-Division 6-G Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
9544	27.9	HEBER	Yard
9542	24.2	CHARLESTON	13
9541	17.2	7.0 WALLSBURG	24
9512	5.8	11.4 HALE	13
9310		5.8 PROVObnbfjkowy	Yard

WESTWARD OREM BRANCH EASTWARD

Station Numbers	Miles from Provo Jet.	Sub-Division 6-H Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
	6.4	END OF TRACK	
9570	6.2	0.2 OREM	Yard
9564	4.8	1.4 SNOW	Yard
9561	4.2	LINCOLN	16
9558	3.8	CURTIS	23
9313		PROVO JCT	Yard

LITTLE COTTONWOOD BRANCH WESTWARD EASTWARD

Station Numbers	Miles from Midvale	Sub-Division 6-1 Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
	1.6	END OF TRACK	17
9602	1.0	STATE STREET	
9332		MIDVALEbwy	Yard

WESTWARD LARK BRANCH EASTWARD

Station Numbers	Miles from Dalton	Sub-Division 6-L Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
9628	4.0	LARK	Yard
9626		DALTON	15

WESTWARD HOOPER BRANCH EASTWARD

Station Numbers	Miles from Roy	Sub-Division 7-A Stations TIME-TABLE No. 2 July 1, 1962	Capacity of Siding
9876	4.0	HOOPER	
9864	1.1	BARTON	30
9854		ROΥ	

BINGHAM BRANCH

EASTWARD

٨	'ES	T۱	W	Α	R	D

SECOND CLASS 211 Freight Leave Daily Except Sun.	Station Numbers	Sub-Division 6-J Stations TIME-TABLE No. 2 July 1, 1962	Miles from Midvale	Capacity of Siding
	9633	BINGHAM	14.1	Yard
,	9632	COPPERTON	11.9	
	9626	DALTON	9.0	15
7 15™	9624	3.9 WELBY	5.1	47
7 29	9622	WEST JORDAN	2.0	23
7 37 PM	9332	MIDVALE		Yard
Arrive Daily Except Sun.				

WESTWARD GARFIELD BRANCH EASTWARD

SECOND CLASS 211 Freight Leave Daily Except Sun.	Station Numbers	Sub-Division 6-K Stations TIME-TABLE No. 2 July 1, 1962	Miles from Welby	Capacity of Siding
	9684	GARFIELD SMELTER	17.0	Yard
6 30 PM	9680	GARFIELD	15.0	77
6 34	9676	EAST JUNCTION	13.8	
6 38	9676	1.0 MAGNA	12.8	
6 45	9674	EAST MAGNA	10.7	Spur 8
7 00	9670	4.7 KEARNS	6.0	9
7 15 M	9624	6.0 WELBY		47
Arrive Daily Except Sun.				

Special Time-Table Rules

SUPERSEDING RULES AND REGULATIONS WHICH ARE INCONSISTENT THEREWITH

SUPERIORITY AND MOVEMENT OF TRAINS (See also Time-Table Rule 4)

- 1. EASTWARD TRAINS ARE SUPERIOR TO WESTWARD TRAINS OF THE SAME CLASS EXCEPT:
- 1-A. Schedule time of passenger trains apply at Passenger Depot Grand Junction.
- 1-B. Rule 91 is modified to the extent that trains being operated between Union Depot Salt Lake City and U. P. crossing 9th South are required to keep only five (5) minutes apart.
- 1-C. Westward Freight trains leaving Soldier Summit must keep at least ten (10) minutes apart.
- 1-D. Schedule and train order time for trains at **Provo** apply at Passenger Station.
- 1-E. Schedule and train order time for westward trains at East Roper apply at "End of CTC" sign.

CLEARANCE CARDS

2. Trains will leave following stations without clearance card:

Sub- Division	Station	
5	Grand Junction, West Yard or passenger station	When verbally authorized by dispatcher
5	Green River	When no operator on duty
16-16-A 6-J	Delta and Paonia Welby	When no operator on duty

2-A. There are no train order signals at **Delta** or **Salina**. Westward trains must not leave **Salina** without clearance card unless otherwise provided, except:

No. 101 may leave Salina without a clearance card when no Operator is on duty.

- 2-B. When no operator on duty at Midvale trains to or from Sub-Division 6-J may leave Midvale without clearance card.
- 2-C. No. 211 may leave Garfield without clearance card when no operator is on duty.
- 2-D. Roper-Provo: Yard engines may leave Roper or Salt Lake City without a clearance card when turning in C.T.C. limits and eastward trains turning in C.T.C, limits may leave Roper without a clearance card,

Trains originating **Provo**, turning in C.T.C. limits, may leave **Provo** without a clearance card.

Conductors will inquire before departure if any slow orders are in effect.

Register stations are shown in body of the Time-Table in full-faced type, except:

Thistle. Sub. Divn 6-Helpers will register at Thistle.

3-A. At stations listed below trains designated will register with registering ticket.

Register Station

Trains

Helper

Regular westward first-class and No. 18.

No. 7 and No. 17 will receive Form T train order at Helper.

- 3-B. Use of Form 3948 (Train Register Check) discontinued between **Grand Junction** and **Helper** when operating under C.T.C. rules. Rules 83 and 83-D of the rules and regulations of the Operating Department, 1948, are modified accordingly.
- 3-C. Trains on Sub-Divisions 6 and 7 arriving at and departing from Salt Lake City will be registered at Roper by the Train Dispatcher through the Operator.

Only trains originating or terminating Salt Lake City will register at Salt Lake City.

Freight Trains, Sub-Division 7, will register at Roper.

- 3-D. Trains from Sub-Division 7 terminating at Roper may occupy main track at Roper on the time of first-class trains and will be protected by train order if necessary.______
- 3-E. Train order register check, Form T, or time on first class trains, Train Order Form E, will be issued to Yardmaster Roper after which trains, yard and light engines may occupy main track between East Roper and Salt Lake City on verbal authority of such Yardmaster.

YARD LIMIT STATIONS

Spring City Ephraim-West Ephraim Grand Junction (Subdivn. 16 only) Moroni Spur Delta Manti Olathe Gunnison Montrose Montrose-Ridgway Spearmint Austin Redmond Rogers Mesa Salina-Marysvale Springville (Sub-Division 6-E)-Eureka Hotchkiss Paonia-Somerset Pearl-Dividend-Iron King Mounds (Sub-Divn, 5-A only) Provo to Sunnyside inclusive (Joint D. & R. G. W. R. R. Provo-Heber Provo Jct.-Orem Co. and Carbon County Railway-at Columbia Midvale-West Jordan Sugar Junction) Works Helper-M.P. 632.02 Welby-Bingham Kenilworth-Kenilworth Dalton-Lark Kearns-Bacchus Junction East Magna-Garfield Smelter Spring Canyon Junction-Mutual including Sands Spur East Roper-Roper-Salt Lake Colton (Sub-Division 6-C)-Clear Creek City Sugar House Spur Soldier Summit Clearfield Gilluly Roy-Hooper Narrows Thistle Ogden-Transfer Midvale-End of Track Sub-Fairview Division 6-I. Mt. Pleasant

4-A. Trains have no time table superiority within limits described below and Rule 93 governs all trains. Trains, yard and other engines occupying these tracks must make way for passenger trains without unnecessary delay:

Sub-Division Location Limits		
5 and 6	Helper	End of CTC East end Helper and M.P. 627.6.
6	Soldier Summitt	Eastward Main track, End of CTC and Train Order Signal.
6	Provo	Westward Main track, A.B.S. 7007

4-B. Yard limit board is located 3000 feet east of Carbon County Railway connection switch, Columbia Junction, on Carbon County Railway. Rule 93 governs in these limits.

4-C. Trains originating or terminating at **Grand Junction** West Yard may occupy main track without flag protection.

AIR BRAKE AND RETAINER OPERATION AND INSPECTION STOPS

- 5. When retainers are in use, trainmen and enginemen must keep close watch while train is in motion for indications of excessively heated wheels, and when observed, the retainer on such car or cars must be placed in normal release position until wheels have had sufficient time to cool.
- 5-A. Conductors will arrange for tracks behind last car to be observed at intervals while moving out of tracks and between stations for fresh wheel or other marks that may have been made by the train or cars being handled and take such action as circumstances may warrant.
- **5-B.** At all times the number of operative air brakes in a train must not be less than 85 percent of the total number of cars in the train.
- **5-C.** Passenger trains must make running tests of air brakes as prescribed by Air Brake Rule 11 before passing over the summit of grade at **Soldier Summit**.

From Soldier Summit to Thistle and from Kyune to Helper, passenger trains handled by locomotives having dynamic brakes inoperative, locomotive brakes must be allowed to apply when brakes are applied on train.

- 5-D. Trains consisting of more than one-third ore, rock, slag, coal or similar heavy loads will be considered coal trains.
- 5-E. Utah Ry. engines, 300 series, when consisting of 3 units, will be considered the equivalent of 4 units and when consisting of 2 units will be considered the equivalent of 3 units, in the application of rules pertaining to use of retainers on freight trains.
- 5-F. When doubleheading, engineman on second locomotive will not use to exceed 300 amperes on dynamic brake. Engineman on leading locomotive will use train air brakes with the maintaining system of braking, together with whatever dynamic brake necessary to control speed, in the same manner as would be done in handling a single locomotive train.
- 5-G. SUNNYSIDE BRANCH. On trains handled by locomotive consisting of four or more units having dynamic brake operative on entire locomotive, retainers on all loaded cars in the forward one-half of train will be used in 20-lb. position, Sunnyside to Columbia Junction.

On trains handled by less than four unit locomotive, or if dynamic brake is inoperative, retainers will be used in 20-lb. position on all loaded cars Sunnyside to Columbia Junction.

On Westward trains before departing Sunnyside, application and release test of air brakes must be made. This test will not be made until train brake system is charged to at least seventy-five pounds pressure, as indicated by caboose gauge or portable air gauge attached to hose coupling at rear end of rear car.

Train crew must know that the above brake tests are made and that train brakes apply and release properly.

On westward trains from Columbia Junction, if actual tonnage per unit with operative dynamic brake exceeds:

FT, F-7, GP-7, GP-9, F-9, RS-3	1500 tons
SD-7, SD-9	
ML-4	.2400 tons
GP-30	
	

retainers on loaded cars in forward one-fourth of train will be used in 20 pound position. When dynamic brake is inoperative, retainers on loaded cars in forward one-half of train will be used in 20 pound position.

Standard brake pipe pressure on eastward trains of empty cars **Helper** to **Sunnyside**, is 70 pounds.

Standard brake pipe pressure on westward trains Sunny-side to Helper is 90-pounds.

Engineman must know that feed valve on leading unit of locomotive is adjusted to 70-pounds before coupling to empty trains at **Helper**, and adjusted to 90-pounds before coupling to loaded cars at **Sunnyside** or **Columbia Junction**.

Before making a terminal brake test on eastward Sunnyside Branch trains at Helper, the train brake system must be charged to 60-pounds, as indicated by caboose gauge. Air Brake Rules 8-H and 9-B are hereby modified accordingly.

Sub-Division 6:

5-H. Standard brake pipe pressure on eastward trains consisting of not more than one-fourth loaded cars is 70 pounds. Standard brake pipe pressure of other freight trains will remain at 90 pounds.

Engineman must know that feed valve on leading unit of locomotive is properly adjusted in accordance with above before coupling to train.

Before making brake test on eastward trains consisting of not more than one-fourth loaded cars, the train brake system must be charged to 60 pounds as indicated by caboose gauge. Air Brake Rules 8-H and 9-B are modified accordingly.

FREIGHT TRAINS—SOLDIER SUMMIT TO HELPER

5-I. If actual tonnage per unit with operative dynamic brake exceeds:

	Coal Trains	Other Train:
FT, F-7, GP-7, GP-9, F-9, RS-3	1300 tons	1400 tons
SD-7, SD-9ML-4	2000 tons	2400 tons
ML-4	1900 tons	2200 tons
GP-30	1600 tons	1800 tons

beginning at head end of train place ten retainers in 10 pound position, plus one retainer in 10 pound position for each additional 50 tons.

When dynamic brake is inoperative, retainers will be used in 20 pound position on all heavily loaded cars and in 10 pound position on other loaded cars and every other empty car.

Retainers will be turned up before leaving Soldier Summit, unless it is known that train will stop at Colton or Kyune, but retainers must be turned up before leaving Kyune.

FREIGHT TRAINS—SOLDIER SUMMIT TO THISTLE

5-J. If actual tonnage per unit with operative dynamic brake exceeds:

	Coar Trams	Other Train
FT, F-7, GP-7, GP-9, F-9, RS-3	. 1400 tons	1500 tons
SD-7, SD-9	2400 tons	2900 tons
ML-4		$2700 ext{ tons}$
GP-30	2000 tons	2200 tons

beginning at head end of train place ten retainers in 10 pound position, plus one retainer in 10 pound position for each additional 50 tons.

When dynamic brake is inoperative, retainers will be used in 20 pound position on coal trains, Soldier Summit to Gilluly, and in 10 pound position, Gilluly to Thistle. On other trains, retainers will be used in 10 pound position on loaded cars and every other empty car. Inspection stop will be made at Gilluly and Thistle, and if consisting of coal, will also stop at Narrows.

Sub-Division 6-A:

5-K. On descending grades, retainers on all loads must be used in 20 pound position and on all empties in 10 pound position and handle not to exceed 60 loads Kenilworth to Kenilworth Jct.

Sub-Division 6-B:

5-L. On descending grades Mutual to Spring Canyon Junction, retainers on all loads must be used in 20 pound position and on all empties in 10 pound position; 30 loads may be handled with one unit FT, F-7, F-9 or ML-4; 60 loads may be handled with one unit GP-7, GP-9, SD-7, SD-9, GP-30 or with two units FT, F-7, F-9 or ML-4.

When one unit helper is used this unit is to remain coupled to rear of caboose on descending grade movement, Mutual to Spring Canyon Yard.

Before loads are pulled from mine tracks, an application and release test of air brakes must be made, then retainers on all cars placed in 20 pound position.

Test as prescribed by Air Brake Rule 9-B must be made after each cut of cars is coupled to train.

Train crew must know that the above brake tests are made and that train brakes apply and release properly.

Sub-Division 6-C:

5-M. Forward one-half of retainers will be used in 20 pound position Clear Creek to Scofield, and forward one-third of retainers will be used in 20 pound position Scofield to Colton.

Sub-Division 6-E and 6-F:

5-N. On descending grades between Knightville and Pearl and between Dividend and Pearl, not to exceed 30 loads will be handled.

Retainers on all loads must be used in 20 pound position and on all empties in 10 pound position, Knightville to Goshen.

Westward trains must stop at M.P. 30.8 to cool wheels and inspect train, except when dynamic brake operating.

Retainers on all loads must be used in 20 pound position and on all empties in 10 pound position on descending grades Goshen Valley Branch and Iron King Spur. Trains from Goshen Valley Branch must stop at Pearl to cool wheels and inspect trains, except when dynamic brake operating.

Sub-Division 6-G:

5-O. From M.P. 17 to M.P. 15.6 the grade is two and one-half percent descending in the westerly direction. Retainers will be used when requested by engineman.

Sub-Division 6-J and 6-L:

5-P. If actual tonnage per unit with operative dynamic brake exceeds:

,coup.	
FT, F-7, GP-7, GP-9, F-9, RS-3	$900 ext{ tons}$
SD-7, SD-9	
ML-4	1500 tons
GP-30	

beginning at head end of train, place ten retainers in 20 pound position, plus one additional retainer in 20 pound position for each additional 100 tons Lark-Bingham to Welby.

When dynamic brake is inoperative, retainers on all loaded cars will be used in 20 pound position, Lark-Bingham to Welby.

RAILROAD CROSSINGS AT GRADE, ABS, CTC AND OTHER SIGNALS

6. Railroad crossings at grade protected by signals or signals

and d	erails:	. v. v. v. v. g.	and Protection of Signature of Signature
Sub- Division	M.P. Location	Tracks Governed	Remarks
6	698.9	D. & R. G. W. main tracks and U. P. switch tracks.	Semi-automatic color light signals. Each Road governed by own Rules and Special instructions. D&RGW movements to and from Ironton Steel plant will be made from West pass to Steel plant track through hand-throw switch normally lined, and locked for U.P. movement.
6	705.7	D. & R. G. W. main tracks and U. P. main track.	Automatic signals. Color light signals without derails. Each road governed by own rules and special instructions. Automatic release section has been installed 500 feet west of eastward Interlocking Home Signal on eastward main track and will be designated by a sign reading: "RELEASE SECTION." Eastward trains occupying section of track between eastward Distant Signal and release section sign for a period of eight (8) minutes or more will automatically release the Interlocker, and the Home Signal will change to Stop indication. To again clear Home Signal, eastward trains will proceed into Release Section and Home Signal should change to Approach or Proceed indication after time interval of two (2) minutes has elapsed. If Home Signal does not change to Approach or Proceed indication after a time interval of two (2) minutes, train and engine-

running track. and

744.2 D. & R. G. W. Main track and U.P. Main track.

744.2 D. & R. G. W. Automatic Interlocking. Color light signals. Each road governed tracks and by own rules and Special instruc-U. P. Main tions. Time release and U. P. dispatcher's phone are located in box at crossing. If signal does not clear within 8 minutes after release is operated, trainman or engineman must notify dispatcher, and movement over crossing be governed by D&RGW Operat-ing Rule 667. Indicator lights are provided inside housing for time release. Lights are designated as "U.P." and "D&RGW." When such indicator lights are illuminated, they will denote that signals on route designate stop. Trains or engines desiring to

men will be governed by Rule 667.

make reverse movement over crossing after having cleared the home signal limits will depress pushbutton in box on home signal

Sub- Division	M.P.	Tracks Governed	Remarks
H	I	GOVERNEU	and hold for 5 seconds, then release, in order to receive signal for movement over crossing. In addition to being an Interlocking Home Signal, ABS 7442 is a positive ABS and governs beyond Interlocking Limits. When it displays STOP indication and will not clear after complying with above, operating Rule 509-A applies.
7	745.5	Main track and U.P. Switch track. W.P. running track and D. & R. G. W. running tracks.	Interlocking: Color light signals for normal and reverse movements. U. P., W. P., and D. & R. G. W.— each railroad governed by own rules and special instructions. Eastward home signal located just north of 4th North Street, and westward home signal located just south of 2nd South Street are controlled to eliminate the blocking of important street crossings when continuous movement cannot be made through interlocking. All switches in connection with signals governing routes are remote controlled. All other switches are hand operated. D.&R.G.W. switch crews will when necessary to perform switching movements within interlocking limits, communicate with leverman and be governed by his instructions.
7	748.9 750.4	D. & R. G. W. main track. and U. P. switch tracks.	Semi-Automatic signal protection. Color light signals. Normal position of derails and signals against U. P. Each road governed by own rules and special instructions. See instructions posted in phone booth. ABS governing movements from Standard Oil Spur, Cudahy Spur, and Ogden Sugar Works M.P. 779.5 have two signals. Upper signal governs route to D. & R. G. W. main track, lower signal governs route to U.P. or to O.U.R. & D. Bee Line Spur leads from Cudahy Spur track and is equipped with pipe connected mechanical lock. Normal position of switch is to Bee Line Spur. Before movement is made to or from D.&R.G.W. main track and Cudahy Spur, main track switch must be reversed. Bee Line Spur switch will then be unlocked to permit lining. When restoring switches to normal, Bee Line Spur switch must be normal before main track switch is placed normal. Lower signal governing movement from Cudahy Spur will display lunar indication for movement to Bee Line Spur or yellow for movement to U.P. track.

Sub Divisi	M.P Locati	Tracks Governed	Remarks
			Train or engine stopped by semi- automatic signals on main track governing movements over main track electric locked switches at these locations will proceed when signal changes to proceed or when flagman has stopped all conflict- ing movements and gives proceed signal. Train or engine will then proceed in accordance with Rule 509.
7	771.3	D. & R. G. W. main track and U. P. branch track.	stop. Normal position of derails and signals against U. P. Each
7	779.5	D. & R. G. W. main track and O. U. R & D. yard track.	Semi-Automatic signal protection. Color light signals. Normal posi- tion of derails and signals against O. U. R. & D. See instructions for M.P. 748.9.
7	781.3	D. & R. G. W. freight main track and S. P. main track and O. U. R. & D. yard tracks.	tion of signals and derails against D. & R. G. W. See instructions
7	781.7	D. & R. G. W. yard track and U. P. main track.	Color light signals. Normal position of signals against D.&R.G.W. See instructions posted on inside of door on release mechanism.
6-K	16.5	D. & R. G. W. Sands Spur and U.PW.P. main tracks.	Semi-Automatic crossings. Color light signals. Derails. Normal position of signals and derails against D.&R.G.W. Instructions for operation of interlocking plant are posted inside time lock boxes 9, 11, and 12.
Salt	South Lake ity	D. & R. G. W. Yard track and U. P. main track.	Color light signals and derails on D. & R. G. W. Color light home and distant signals and no derails on Union Pacific. Instructions for operation of derails on D. & R. G. W. are posted inside of electric lock case.
		ents thru gaunt ivision 6-I, will	let track over State Street under- be as follows:

pass, Sub-Division 6-I, will be as follows:

D. & R. G. W. trains will use detour track across State Street, distance of 1800 feet, about 600 feet of which is gauntlet track with Union Pacific R. R., over highway underpass. Movements thru this gauntlet track will be governed by Union Pacific special rules, as follows:

"Automatic Block Signals governing train and engine movements over gauntlet track, U. P. Mile Post 47.74 between Cushing and Sandy, Utah, are in service.

The normal position of home signals is STOP and signal will change to PROCEED indication on approach of train if block is clear.

If the signal indication does not change to PROCEED due to train or engine on conflicting route having received but not accepted proceed indication, and if train or engine has stopped and is being delayed for any reason; or, if the signal indication does not change to proceed and no conflicting train or engine movements are evident, train or engineman will proceed to instrument case, located 100 feet south (by compass direction) of street crossing overpass and operate the time release assigned to his road.

When time release has been operated, if after an elapse of two minutes signal indication does not change to proceed the train or engineman at the instrument case, after making certain no conflicting train movements are evident, may signal his train or engine to proceed and engineman, after sounding two long blasts on whistle (Rule 14-b) will proceed following flagman carefully to end of gauntlet track.

If a signal, permitting a train to proceed after being accepted, is changed to a stop-signal before it is reached, the stop must be made at once.

In the event of signals failing to give proceed indication on approach and failing to give such indication in response to time release operation, D. & R. G. W trains will protect by flagman full distance in both directions before occupying gauntlet track."

Trains approaching the following crossings at grade, which are not protected by signals:

Sub-	M.P.	Railroad	Remarks
Division	Location	Crossed	
Sugar House Spur	0.7	D. & R.G. W. spur and U.P. main track.	D. & R. G. W. trains and engines must stop clear of crossing and after ascertaining that no conflicting movement is approaching may then hand operate and lock gate against movements on U. P. track. After movement is completed and crossing cleared gate must immediately be restored to normal position and locked. Gate is equipped with two lights, one of which is in center of gate and one on pivot post, these lights will display red when gate is lined against approaching movement and green when gate is lined for approaching movement. At night, if both lights are not burning, stop must be made before fouling crossing.

3rd West and Van Buren St., Salt Lake City D. & R.G. W. spur and U.P. spur track.

The gates will normally be lined against the Union Pacific and for Rio Grande movement. Signal will show green for approaching movement and red against approaching movement. Rio Grande crews may use crossing without stopping provided it is seen to

be clear. Union Pacific crews will stop and line for their movement if no Rio Grande movement is in evidence.

UTAH STATE LAW: Every locomotive shall be provided with a bell which shall be rung continuously from a point not less than 80 rods from any city or town street or public highway grade crossing until such city or town street or public highway grade crossing shall be crossed, but, except in town and at terminal points, the sounding of the locomotive whistle or siren at least one-fourth of a mile before reaching any such grade crossing shall be deemed equivalent to ringing the bell as aforesaid; during the prevalence of fogs, snow and dust storms the locomotive whistle shall be sounded before each street crossing while passing through cities and towns. All locomotives with or without trains before crossing the main track at grade of any other railroad must come to a full stop at a distance of not exceeding 400 feet from the crossing, and must not proceed until the way is known to be clear; two blasts of the whistle or two sounds of the siren shall be sounded at the moment of starting; provided, that whenever interclocking signal apparatus and derailing switches or any other crossing protective device approved by the public utilities commission is adopted such stop shall not be required.

Provided, that local authorities in their respective jurisdiction may by ordinance approved by the Public Service Commission provide more restricted sounding of bells or whistle or sirens than is provided herein and may prescribe points different from those herein set forth at which such signals shall be given and may further restrict such ringing of bells or sounding of whistles or sirens so as to provide for either the ringing of a bell or the sounding of a whistle or of a siren or the elimination of the sounding of such bells or whistles or sirens or either of them, except in case of emergency.

The term locomotive as used herein shall mean every selfpropelled steam engine, electrically propelled interurban car and so-called diesel operated locomotive.

Every person in charge of a locomotive violating the provisions of this section is guilty of a misdemeanor, and the railroad company shall be liable for all damages which any person may sustain by reason of such violation.

OPERATION GRAND JUNCTION TO HELPER

6-A. Trains and engines must not pass Signals D-2, D-3, D-5, D-6, D-10, D-12, D-14, or D-16 (all located in the vicinity of the hump at **East Yard** and to which A.B.S. and C.T.C. Rules do not apply) when displaying stop indication, without authority from yardmaster.

These signals are operated from retarder tower. Signals D-2 and D-5 do not control the movement of yard engines when such yard engines are governed by trimmer signal located on west side of humpmaster building.

Unless otherwise instructed, Signal D-5 will govern eastward trains departing from Tracks 1 to 3, inclusive, and Signal D-2 will govern eastward trains departing from Tracks 4 to 8 inclusive.

6-B. Dual-controlled switch point derail on middle track, 10th Street, Grand Junction, located between opposing Positive A.B.S. 4487-FE and 4488-F, normal position for derail. Westward trains or engines must occupy release section approaching Positive A.B.S. 4487-FE one minute before dispatcher can position signal and dual-controlled switch for through movement.

6-C. Depot Running Track between dual-controlled switches at Mile Post 449.04 and Mile Post 450.1. Grand Junction connects with westward main track. Rule 103 applies. Trains, yard or other engines occupying this track must make way for passenger trains without unnecessary delay.

Trains originating Depot Running Track, or Depot Yard, Passenger Station, may depart without clearance card when repeater signal M.P. 449.8 eastward or M.P. 449.3 westward displays proceed indication. If repeater signal does not indicate authority to proceed when train is ready to depart, dispatcher must be contacted immediately. (See Time-Table Rule 2).

6-D. Westward A.B.S. 4511-E has an additional signal. Upper signal governs westward movement on Eastward Main Track and lower signal governs movement through crossover to Westward Main Track and also to **Durham** siding.

A.B.S. 4522, West Durham, has three (3) signals on mast. Upper signal governs movements to Westward Main Track; middle signal governs movements through turnout to Eastward Main Track and lower signal governs movement through turnout to **Durham** siding.

6-E. Two parallel sidings, **Maxwell**, are connected at each end with spring switches normally lined for westward trains to enter outside siding, and for eastward trains to enter inside siding.

Westward A.B.S. 6213, Maxwell, has three signals on mast. Upper signal governs unrestricted route. Middle signal governs restricted route to westward, or outside siding. Lower signal governs restricted route to eastward, or inside siding, and when the letter "S" is illuminated in the lower signal it is authority to hand throw switch and use eastward siding.

Eastward A.B.S. 6228, Maxwell, has three signals on mast. Upper signal governs unrestricted route. Middle signal governs restricted route to eastward or inside siding. Lower signal governs restricted route to westward or outside siding and when the letter "S" is illuminated in lower signal it is authority to hand throw spring switch and use westward siding.

Lower signal on eastward A.B.S. 6228 and westward A.B.S. 6213 Maxwell, when displaying illuminated letter "S" will not display lunar indication for movement of train until spring switch has been thrown for track indicated. Movement of trains will not be made to siding unless signal displays lunar indication.

OPERATION AT HELPER

6-F. Operator Helper controls all positive A.B.S. 6253 to 6258 inclusive, and dual controlled spring derail with two position signal governing eastward movements through derail to Snake Lead as directed by Dispatcher, Grand Junction.

Following dual controlled switches are operated by operator at **Helper**:

Both ends of crossover at Spring Glen; normal position for Spring Glen Yard.

Both ends of Crossover at end of Two Main Tracks and both ends of Crossover between westward Main Track and No. 1 lead.

A.B.S. 6254-A governs movements from Independent Lead through crossover to main track. Trains entering or leaving Spring Glen Yard must first obtain permission from operator at Helper.

Eastward trains departing on No. 1 lead must occupy release section located 310 feet west of A.B.S. 6258-F, 48 sec-

onds before operator can position dual controlled switches for departure.

Eastward trains departing from lower train yard or from High or Coal Yard must communicate with operator when ready to depart and from High or Coal Yard must occupy release section one minute before operator can position dual controlled spring derail to enter snake lead.

When proceed indication is displayed it is authority to proceed to Spring Glen on independent lead and there be governed by indication of controlled A.B.S..

Westward A.B.S. 6257 has three signals. Upper signal governs movements to Eastward main track. Middle signal governs movements through crossover to Westward main track. Lower signal when displaying Lunar indication authorizes trains to proceed to either Eastward or Westward main track when such track is occupied, or to No. 1 lead.

Westward A.B.S. 6257-F has two signals. Upper signal governs unrestricted route to Westward main track, lower signal when displaying Lunar indication will be authority for trains to proceed to Westward main track when it is occupied, or to No. 1 lead.

Westward A.B.S. 6257-FS and Eastward A.B.S. 6258-F will normally display a Lunar indication. When displaying "STOP" it indicates there is an Eastward or Westward train approaching and yard engines and others occupying track must give way without unnecessarily delaying such train or trains.

When positive A.B.S. 6273-W, 6273-WA or 6273-WB Kenilworth Jct. controlled by operator Helper displays proceed indication it is authority for trains to proceed to "Beginning of CTC" Lynn on Westward main track on the time of first class or preference train if movement is to be continuous.

OPERATION HELPER TO SOLDIER SUMMIT

- 6-G. Eastward Utah Railway trains leaving main track at Utah Railway Junction enroute to Martin may pass Stop and Proceed A.B.S. 6288-E at restricted speed when signal is displaying "STOP" provided switch is known to be lined to Utah Railway and track beyond switch is seen to be clear.
- 6-H. Operator Helper controls positive A.B.S. and dual-controlled switches at Colton and Kyune and controls westward positive A.B.S. 6319-W and 6319-E at Lynn.

When eastward positive A.B.S. 6388-E or 6388-EA at East end Kyune displays proceed indication it is authority to proceed on eastward main track to Helper on time of first class or preference trains in the same direction if movement is to be continuous. Eastward trains having work at Castle Gate will take siding at Royal if train length permits.

6-I. Between **Helper** and end of two main tracks **Colton** both main tracks are signalled for normal and reverse movements.

OPERATION AT SOLDIER SUMMIT

6-J. Operator Soldier Summit controls all positive A.B.S. and dual controlled switches and derails at Soldier Summit.

When westward trains receive proceed indication for movement on westward main track at east end **Soldier Summit**, it is authority to proceed on the time of first class or preference trains.

Warning indicator located on East side of Viaduct and South of eastward main track, normal indication yellow. When eastward main track is occupied between A.B.S. 6528 and the viaduct no indication will be displayed.

OPERATION BETWEEN SOLDIER SUMMIT AND THISTLE

6-K. Operator Soldier Summit controls positive A.B.S. at Gilluly.

Eastward A.B.S. 6616, West end Gilluly, has two additional signals and when illuminated display the letter "T" or "S". When "T" is illuminated it is authority for eastward trains to proceed on eastward main track on the time of first class or preference trains. When "S" is illuminated, trains must take siding, and is authority to hand operate switch to enter siding.

When positive A.B.S. 6602 or 6602-A, East end Gilluly, display proceed indication, it is authority to proceed on eastward main track on the time of first class or preference trains.

Westward trains will use siding at Gilluly only when authorized by dispatcher. Normal position for inside siding switch west end Gilluly is lined for movement to eastward main track.

OPERATION AT THISTLE

6-L. Operator **Thistle** controls all positive A.B.S. and dual controlled switches at **Thistle**.

When eastward positive A.B.S. 6822 displays proceed indication for movement on eastward main track it is authority to proceed on the time of first class or preference trains to train order signal **Thistle**.

When westward positive A.B.S. 6797 displays proceed indication for movement on westward main track it is authority to proceed on the time of first class or preference trains.

OPERATION BETWEEN EAST SPRINGVILLE AND EAST ROPER

6-M. Westward Positive A.B.S. 6947 and Positive A.B.S. 6947-A at **Springville Cannery Spur**, Westward Positive A.B.S. 6955-E and Positive A.B.S. 6955-EA at switch to main track, Sub-Division 6-E, Westward Positive A.B.S. 6955-W and Eastward Positive A.B.S. 6958 are controlled by the Operator at **Provo**.

When Positive A.B.S. 6958, Positive A.B.S. 6955-EA or Positive A.B.S. 6947-A displays a proceed indication it is authority to occupy Eastward Track between Eastward Positive A.B.S. 6958 and Westward Positive A.B.S. 6947; except when Westward Train or work extra is occupying Eastward track between Thistle and Springville.

When Westward Positive A.B.S. 6955-E or Positive A.B.S. 6955-EA display a proceed indication and crossover at M.P. 695.7 is lined for movement from Eastward to Westward track it is authority to proceed through crossover to **Provo** on Westward track.

Positive A.B.S. 7071-W has three signals: Upper signal governs movement on unrestricted route; middle signal governs movement through crossover to eastward main track; lower signal governs movement to **Geneva Steel Plant**.

Positive A.B.S. 7071-E has three signals: Upper signal governs movement on unrestricted route; middle signal governs movement through crossover to westward main track; lower signal governs movement through turnout to Geneva Steel Plant.

Dual controlled derail located opposite A.B.S. 7072-F, on Geneva Steel Plant Lead.

Between Mile Post 701.3, Provo, and Pipe Mill and between Endot and East Roper both main tracks are signalled for normal and reverse movements.

Repeater Signal located just east of road crossing Riverton Siding repeats indication of A.B.S. 7289-A at West Riverton.

When no indication is displayed on repeater signal westward trains on **Riverton Siding** must stop clear of road crossing as crossing gates will not operate.

OPERATION BETWEEN SALT LAKE CITY AND CLEARFIELD

6-N. Westward A.B.S. 7531 and Eastward A.B.S. 7546 have additional signals on mast and when illuminated will display Lunar "S". Trains receiving this signal must take siding at Woods Cross. When upper signal on Eastward A.B.S. 7546 displays proceed indication it is authority for train to proceed on main track to beginning of CTC east end of Woods Cross on the time of superior trains. A.B.S. 7504 North Salt Lake is a positive signal.

OPERATION AT BACCHUS SPUR

6-0. Trains entering Kennecott Corporation track, M.P. 1.8 **Bacchus Spur**, will call operator at Magna who will position signal to permit entrance into Kennecott Corporation track.

When signals indicate proceed switches may be lined for this movement and occupy Kennecott Corporation track on signal indication. Movement should be continuous and switches restored to normal position on completion of movement.

OTHER SIGNALS

6-P. Dragging and/or Derailed Equipment Detectors are located at the following Mile Posts: 550.1 and 557.9, Sub-Division 5.

Signals governing both eastward and westward trains are on posts at each location. Normal indication of signal is dark.

When signal displays purple indication, conductor or rear trainman will immediately stop train and inspection of track and train must be made. If there is no dragging equipment, derailment or track disturbance, cut-out switch located on side of adjacent signal case will be opened and report made to dispatcher. If there is cause for purple indication being displayed, and this condition is corrected, cut-out switch will be opened and report made to dispatcher.

Should engineman observe purple indication, train must be stopped, cut-out switch opened and report made to dispatcher, then proceed at restricted speed to next clear or approach A.B.S.

INSTRUCTIONS GOVERNING THE OPERATION OF CALIFORNIA ZEPHYR TRAINS

- 7. California Zephyr trains No. 17 and 18 may be operated at a speed of five (5) miles per hour greater than the speed authorized for passenger trains except at all points where permanent slow boards are displayed speed will be restricted to conventional passenger train speed but all other speed restrictions in the Time-Table other than Zone speeds will be applicable.
- 7-A. Rear trainman out of Salt Lake City will change marker lens from green to yellow by manipulating from within the rear of the observation car.
- **7-B.** These trains will carry 200 pounds steam train line pressure.
- 7-C. Rear red and white lights will not be used. Trainmen will see that they are turned off before departing Salt Lake City.

Freight

LIVESTOCK ATTENDANTS

8. Persons accompanying live stock or other freight will be carried on any freight train handling such live stock or freight, when holding proper transportation, and when permission to accompany same is covered by contract. Passengers on freight train should be informed that cabooses will not be pulled up to platform to receive or deliver passengers or baggage. Employees holding passes will be carried on any freight train to and from points at which trains stop when passes are stamped "Good on Freight Trains."

CLEARANCES

9. Overhead clearances at the following locations will not clear a man standing on the top of a car:

Sub-Div.	Mile	Description
5	460.4	Fruita-House Track, West end, Over-
	100.1	head wires
5	471.9	Ruby Tunnel
5 5 5-A	568.3	Desert—Spur, Overhead wires
5-A	17.5	Coke Loading Track Sunnyside—Over-
0 11	11.0	head Hopper
16	400.1	Bridgeport Tunnel
16	423.5	East End Grand Jct. Yard—Bridge
-~	120.0	423.52
16-A	380.2	West of Austin—Bridge 380.19
16-A	398.6	East of Hotchkiss—Bridge 398.66
6	636.1	Nolan Tunnel, Eastward Track
6	651.7	Viaduct
6-B	7.0	Mutual Mine Tipple
6-C	21.1	Clear Creek Mine Tipple
6-D	122.5	Sevier Tunnel
6-E		Main Street, Spanish Fork on California
	ĺ	Packing Co. Spur—Traffic signal
6-Œ	30.2	Tunnel
6-E	34.6	Tunnel
6-J	.05	U. S. Smelter
6-J	.06	U. S. Smelter Bridge
6-J	.06	U. S. Smelter Flume
7	769.6	Wagon Bridge

TRAIN SPEEDS

10. The speed of trains should be so restricted that absolute safety will be assured.

10-A. Trains must not exceed the maximum speeds prescribed below:

Where other speed restrictions do not prohibit, locomotives running light or with all steel caboose only may be operated in ABS limits at a maximum speed of sixty (60) M.P.H., but will not exceed the maximum speed authorized for passenger trains.

Trains consisting of passenger equipment cars and allsteel caboose will be governed by passenger train speed restrictions.

ZONE SPEEDS	Passenger MPH	Freight MPH
Sub-Division 5:		
On both main tracks 10th Street to Grand		
Avenue, Grand Junction	20	20
Eastward Main Track, West Durham		
to Grand Junction	35	35
Grand Junction-M.P. 471	70	60
M.P. 471-M.P. 487	55	50
M.P. 487-Green River	65	60
Green River-Helper	65	55

ZONE SPEEDS			MPH
Sub-Division 5-A:			
Mounds-Columbia JunctionColumbia Junction-Sunnyside			20 15
Sub-Division 16:			
Montrose-Delta			30
Delta-Grand Junction			,25
Montrose-MP 355			15
M.P. 355-365 M.P. 365-Ridgway			20 15
Sub-Division 16-A:	√ -		
Delta-Bridge 380 19			30
Bridge 380.19-Payne Payne-Somerset			20 15
Payne-Somerset			
	Passenger Trains	Freight Miles pe	Trains er Hour
ZONE SPEEDS	Miles per Hour	Coal & Ore	Other
Where restrictions do not specify di rection, they apply to both eastware	-	•	
rection, they apply to both eastward and westward movements:	d .		•
Sub-Divisions 6 and 7: Except as			
specified below	60	50	50
Kyune to Helper (Eastward) Soldier Summit to Detour	30	15	20
(Westward)	30	20	25
Detour to Narrows (Westward)	40 35	20 20	25 25
Narrows to Rio (Westward) Rio to Narrows (Eastward)	40	35	35
Rio to Thistle (Westward)	45	20 50	25 60
Gomex—Endot Endot—Salt Lake City	70 65	50	50
East Roper—Endot		40	40
(Eastward Track)Salt Lake City—Mile Post 765	40 60	40 55	60
Mile Post 765—Mile Post 775	55	50	50
Mile Post 775—Transfer Main Track from 9th South to Sout	60 h	55	60
Temple Street, Salt Lake City	12	12	12
Spur Track Roper to Industrial	12	12	12
CenterApproaching and over network of	f		
switches and passenger platforn	n		
Ogden Union Depot Co. passenge	8	8	8
			Freigh
	_		Train: MPH
Sub-Division 6-A			12
Sub-Division 6-B			10
Sub-Division 6-C			
Colton—M.P. 9 M.P. 9—Clear Creek			15
Sub-Division 6-D			25
M.P. 1-44 M.P. 44-86			
M.P. 86-132.2		·	25
Moroni Spur			
Sub-Division 6-E Pearl-Eureka Ascen Eureka-Pearl Descending	ding		20
HITTERS PASTI DESCENDING			12
Pearl-Springville			25
Pearl-Springville Between Spanish Fork Sugar Factor Del Monte Packing Co	y and		25

ZONE SPEEDS

<u> </u>				·		
ZONE SP			Freight Trains MPH	ZONE SPEEDS	Passenger Trains MPH	Freight Trains MPH
Sub-Division 6-F			12	Through turn-outs spring switches east and west outside sidings Maxwell; Indepen-		
·				dent lead east end Helper; Kenilworth Jet.: Soldier Summit west end yard track		
				No. 1; Gilluly; Detour; Narrows; Rio;	15	15
				Thistle; East Roper; TransferIn or out of other turnouts	15 15	15 15
				Trailing thru spring switches on straight track	30	30
Sub-Division 6-J Descending Bingh	am to Welby		19	Over U.P. Crossing M.P. 698.9 Thru turnouts remote controlled switches	60	50
Ascending Midval	e to Bingham to Midvale		20	Grant Tower Interlocking M.P. 745.5	15	15
	to ivituvale			Over railroad crossing main track, 9th South, Salt Lake City Over railroad crossing M.P. 771.3	12	12
Sub-Division 6-K Welby—Kearns			30	Over railroad crossing M.P. 771.3 Over other railroad crossings not interlocked	50 l 25	50 20
Kearns—Garfield	and Bacchus spur		20	Thru following sidings: Utah Railway Junc- tion (Both sidings), Royal, Narrows (West-		
Sub-Division 6-L De	escendingscending		12	ward siding), Provo (Eastward siding),	15	15
				Clearfield	10	15 10
Sub-Division 7-A				Over Sugar St. Crossing Midvale Siding Maximum speeds permissible in any service	8	8
All Sub-Divisions, ex Speeds require lov	kcept where Zone			by various classes of locomotives and equip- ment as follows:		
				Series 600-601, 4001-4003	Miles P	er Hour 75
Controlled swite	ches:	ssenger Trains s	gristT	Series 548, 552-554, 3001-3013	7	70
M.P. 445.0	East end east long lead	MPH p	reigi-	Series 5100-5113, 5200-5204, 5300-5314, 5901- 5954, and 555-577		35
Durham	East and west end siding West end two main tracks			Series 120-123, 150-152 Series 66-74, 100-119	6	30 50
Rhone	East and west end siding			Series 540-547, 550-551	4	10
Fruita Mack	East and west end siding East and west end siding			Series 38-42 Series 540-547, 550-551 when handled dead	2	25
Agate	East and west end siding			in train	4	1 0
Cisco Whitehouse	East and west end siding East and west end siding			Steam Derricks	3	35
\mathbf{E} lba	East and west end siding			Russell Snow Plow X-67 (when handled in trains)	8	30
Sagers Thompson	East and west end siding East and west end siding		1	Clamshells, Scale Test Cars (except Scale		
$\mathbf{Brendel}$	East and west end siding			Test Car X-450) and Pile Drivers moving on own wheels	2	25
Floy Solitude	East and west end siding			Scale Test Car X-450 when moving on own	-	
Green River	East and west end siding East end depot siding			wheels (and must be handled on or near rear of train). This car must not be shoved	ı	
Woodside Cedar	East and west end siding			on by helper engines	4	40
Verde	East and west end siding East and west end siding		,	Spreaders and Flangers handled in train Steam Derrick 028 must not be used on	č	35
Mounds Fast Wallington	East and west end siding East and west end siding		_	Ridgway Spur; when used on other		
Maxwell	West end siding		ت ا	branches speed must be restricted to 15 miles per hour over wooden trestles.		
Helper	End of two main tracks End of two main tracks			Freight trains consisting of more than o	ne-third	coal or
Thistle	East end westward siding			ore, will be restricted to coal and ore speed.		
Geneva	West end eastward siding			Zone speed for other westward freight trains which do not require the use of retain-		
Pipe Mill	Both crossovers End of two main tracks			ers as provided for in special Time Table		
American Fork Mesa	East and west end siding			Rule 5-J will be as follows: Detour-Narrows		er Hour 35
Riverton	East and west end siding East and west end siding			Narrows-Rio		30
Endot Midvale	End of two main tracks			Rio-Thistle		35
MIGANIE	Crossover M.P. 734.0 West end siding			10-B. City ordinance speed limits as follows	:	
East Roper	Crossover west end Midvale	:		STATION MPH STATION	u maladada	MPH
<u>-</u>	Crossover between two main tracks		30	Grand Junction		
Colton	End two main tracks		45	Price 30 Mt. Pleasant		12
Dual Controlled	urn-outs equipped with switches	15	15	Helper 35 Salt Lake Cit Springville 30 to 5th No.	Streets	25
Through turn-out	s equipped with spring when lower speed is			Provo		
specified by time	e-table or slow boards	30	30	Lehi		

MEDICAL ATTENTION AND REPORTS

11. MEDICAL TREATMENT OF PASSENGERS. Any Doctor of Medicine may be called to treat sick or injured passengers. In case of illness, passengers are responsible for the doctor's bill. In cases of injury the doctor submits his bill and report to Assistant Chief Claim Agent, Salt Lake City. For convenience, the following doctors at principal points are suggested, but if they are not available, any physician may be called:

Name	Location
Ervin A. Hinds, M.D., Chief Surgeon	Denver
M. C. Lindem, M.D., Asst. Chief Surgeon	Salt Lake City
E. V. Long, M.D.	Salt Lake City
W. L. Chambers, M.D	Salt Lake City
A. R. Demman, M.D.	
T. D. Burleigh, M.D.	Grand Junction
R. F. Linnemeyer, M.D.	Grand Junction

11-A. Suggested hospitals for the care of injured passengers are located as follows, but when expedient any hospital may be used:

Name	Location
St. Mary's Hospital	Grand Junction
City-County Hospital	Price
Holy Cross	Salt Lake City
St. Mark's	Salt Lake City

MEDICAL TREATMENT OF EMPLOYES

11-B. Care of sick and injured employes is rendered by Hospital Association Doctors, located as follows:

Call CHapel 3-3545Grand Junction	
N. A. BrethouwerMontros	
Woodrow BrownPaon	ia
E, Robert Orr Frui	ta
H. T. Barton Green Rive	er
F. R. King Price	ce
F. R. King Pric	ce
John K. WrightPric	ce
J. E. Dorman (eye, ear, nose, throat)	сē

	-
H. Asa Dewey	Richfield
W. R. Worley, Jr	
Rae E. Noyes	Salina
Norman R. Beck	Salt Lake
Charles F. Behle	Salt Lake
Harry Berman	Salt Lake
Fred W. Clausen	. Salt Lake
Robert M. Crowder	Salt Lake
L. Dean Day	Salt Lake
Robert G. Evans	Salt Lake
Harry E. Fisher, Jr	Salt Lake
Whitney J. Haight	Salt Lake
Charles C. Hall	Salt Lake
Don Handy	Salt Laire
Wayne M. Hebertson	Salt Lake
Philip M. Howard	Salt Lake
Lewis Kirkman	Salt Lake
Anthony W. Middleton.	Salt Lake
Andrew Karavatis	Salt Lake
Everett B. Muir	Salt Lake
Stanley Neff	Salt Lake
Bascom W. Palmer	Salt Lake
Charles M. Parrish	Salt Lake
James H. Quinn	Salt Lake
Grant H. Southwick	Salt Lake
C. H. Springer	Salt Lake
Jack L. Tedrow	Salt Lake
Robert G. Thompson	
Preston G. HughesSp	anish Fork
Milo C. MoodySp	anish Fork
Wilford G. Biesinger	Springville
Clair W. Judd	Springville

11-C. Assigned Hospitals of the Hospital Association are located as follows:

St. Mary's	Grand Junction
Holy Cross	Salt Lake City
St. Mark's	Salt Lake City
City-County	Price
Utah Valley	Provo
Thomas D. Dee Memorial	Ógden

- 11-D. When persons not employees or passengers (for example, persons injured at crossings, trespassers, outsiders at work around depot or other industries, etc.) are injured, if they are unable to care for themselves, and if no friends or others are at hand to care for them, any of the doctors listed in Rule 11 may be called. The doctor should be advised that he is called for emergency attention only and that the Company does not assume responsibility for his bill. If trespassers are not taken charge of by friends or others, they should be turned over to the public authorities as soon as possible, and no expense incurred in behalf of the Company except the emergency attention above noted.
- 11-E. Parties calling doctors should explain fully as possible the nature of the injuries so that the doctor may know what equipment to bring with him.
- 11-F. Prompt Telegraphic Report (Form 3884) must be made of all accidents. In the event Form 3884 cannot be furnished without unduly delaying the train a message must be filed at first open telegraph office giving principal facts concerning the accident and Form 3884 filed as quickly as possible thereafter. When a personal injury occurs on a train an additional message must be sent immediately to the Superintendent and Claim Department and if the injured person is not an employee on duty, the following information must be given: Kind of Transportation injured person holds, giving number of ticket or pass, destination of injured party, whether coach or pullman passenger with number or name of car and, if injured party stopping over enroute, state where stopover will be made and address at point of stopover. In addition to the telegraphic reports (Form 3884) and messages above described, mail reports of all accidents and casualties must be promptly made and forwarded, using the following forms, according to the instructions thereon and in the Book of Rules:

Forms 3918-3922—All personal injuries and crossing accidents.

Form 4009—When accident occurs on train to be filled out by passengers.

Form 4012—Inspection of Equipment (Mechanical Dept.)

Form 4119—Fire Report (Section Foreman).

Form 3511—Stock Struck Report (Enginemen).

Form 4117—Stock Report (Section Foremen).

Form 3949—Break-in-two Report (Enginemen).

CONDITIONAL STOPS

12. No. 7 will stop at any station to discharge pay passengers from Denver, Colorado Springs and Pueblo.

No. 8 will stop at any station to pick up pay passengers for Denver, Colorado Springs and Pueblo.

Nos. 17 and 18 will stop at Thompson on Saturdays, Sundays and Holidays and will stop on flag on other days to receive or discharge pay passengers to or from Denver or beyond and to or from Salt Lake City or beyond.

13.

SPRING SWITCHES

Miles from Location Denver Spring Switches		Normal Position
445.6	East Switch East Yard	East Yard
446.9	East End Departure Track East Yard	East Long Lead
447.3	Entering Track to East Yard	East Yard
448.5	Westward Departure Track to Alternate Inbound	Cross-over
449.3	East Switch Depot No. 1 Track	Depot Running Track
621.4	East Switch Outside Siding Maxwell	Westward (outer) Siding
622.7	West Switch Outside Siding Maxwell	Eastward (inner) Siding
625.7	Helper-East end Independent lead	Independent Lead
627.4	Helper-Westward lead Ken- ilworth Jct.	Westward Main Track
650.4	Soldier Summit East end siding	Eastward Main Track
651.8	Soldier Summit West end yard track No. 1	Westward Main Track
660.2	Gilluly-East end siding	Eastward Main Track
665.0	Detour-East end siding	Eastward Main Track
671.6	Narrows-East end siding	Eastward Main Track
672.7	Narrows-West end siding	Westward Main Track
675.9	Rio-East end siding	Eastward Main Track
681.5	Thistle-West end siding	Westward Main Track
740.7	East Roper	Eastward Main Track
753.2	East Switch Woods Cross	Main Track
780.1	Transfer-New Lead	Lead Track

DUAL CONTROLLED SPRING SWITCHES

_			
	625.8	Helper	Snake Lead

13-A. LOCATION OF CROSSOVERS ON TWO MAIN TRACKS

Miles from Denver	Points	Miles from Denver	Points	Miles from Denver	Points
448.6	Trailing	651.8	Facing	695.7	Trailing
449.0	Facing	665.0	Facing	695.7	Facing
451.1	Trailing	666.1	Trailing	699.2	Facing
626.0	Trailing	671.6	Trailing	699.9	Trailing
626.6	Trailing	672.7	Facing	700.4	Trailing
627.0	Facing	675.9	Facing	700.9	Trailing
628.8	Trailing	677.1	Trailing	701.0	Facing
629.6	Facing	680.0	Facing	707.1	Trailing
630.1	Trailing	680.7	Facing	707.1	Facing
630.6	Trailing	681.0	Trailing	734.0	Facing
631.2	Facing	682.3	Trailing	735.9	Trailing
631.8	Trailing	682.3	Facing	740.8	Facing
651.2	Facing	688.6	Trailing		
651.6	Trailing	688.6	Facing		

WATER TANKS OR CRANES BETWEEN STATIONS 14. OMITTED.

AUXILIARY LINES

15. The following are auxiliary lines:

ThistleSub-Division 6-D	ProvoSub-Division 6-G MidvaleSub-Division 6-J WelbySub-Division 6-K DaltonSub-Division 6-L
SpringvilleSub-Division 6-E	

HEADLIGHTS ON LOCOMOTIVES

16. Headlights on locomotives must be kept burning at all times when in road service except when necessary to comply with operating rules.

HANDLING UNRULY PASSENGERS

17. Any passenger who by reason of intoxication, or otherwise, is guilty of such disorderly conduct as to annoy, threaten or insult other persons on the train, and who refuses to desist therefrom when requested to do so by the Conductor, may be ejected, with his baggage, at the next station where Agent is on duty. The Conductor shall use only such force as may be necessary to accomplish such removal, and he may command other railroad employes to assist in such removal, and when necessary wire ahead for assistance. Before ejecting a passenger the Conductor shall tender to such passenger the unused portion of any fare which has been paid.

Whenever a passenger is ejected, the name and address of such passenger and the names and addresses of all witnesses, and their statements in writing if possible, should be obtained. All facts connected with such ejectment should be at once reported to the Division Superintendent.

When Military Police or Shore Patrol are available they should be consulted before ejecting any military or naval personnel from the train.

DESIGNATIONS OF TRACKS, POSITION OF SWITCHES RESTRICTIONS OF TRACKS

18. Freight trains entering East Yard will head in receiving yard as indicated by Track Indicator.

Track Indicator for westward trains is located at M.P.-445.6.

Track Indicator for eastward trains is located at M.P.-447.3. Eastward trains entering alternate eastbound track East Yard, will be governed by instructions from Yardmaster.

18-A. Westward freight trains arriving Helper will be governed by track indicator, designating track to be used, located just opposite ABS 6257-FS east end of Helper:

M. Main Track

1-7 Inclusive: Tracks as indicated.

Westward freight trains entering Roper will be governed by track indicator, designating track to be used, located 200 feet west of yard entrance switch, East Roper:

1-10, 25-26, Inclusive;	Track as indicated
H 1. Ice House 1	RT. Running Track
H 2. Ice House 2	W2. Wash 2

If indicators do not display lighted numeral, train must ascertain from Operator at Helper or Yardmaster at Roper, track to be used. These indicators do not govern light engines.

18-B. East switch of wye at Sunnyside must be lined for the wye when not in use. Engine with or without cars departing Sunnyside from a point east of this wye switch must be brought to a stop before switch is lined for main track.

Switch to High-line coke bin track, Sunnyside, must be left lined for High-line coke bin track and switch to stub derail spur located off High-line coke bin track must be left lined for spur when not in use.

Switch to Carbon County Railway at east end of Columbia Junction must be lined for Sub-Division 5-A when not in use.

- 18-C. Normal position of west siding switch leading to stock-yards, Montrose, is to stock track.
- 18-D. Locomotives must not go beyond switch point of north track, empty yard, nor in north load track, Knight Ideal Coal Company yard, Wellington.
- 18-E. Wye switches Welby lined and locked for Garfield Branch.
- **18-F.** When entering main track from Sub-Division 6-A spring switch at **Kenilworth Jct.** must be lined for such movement.
- 18-G. Spur with east and connection to westward track located 227 feet west of crossover at Gomex serves Powder Plant. Crews using this spur track will be governed as follows:

At Highway crossing, 700 feet from the entering switch, trains or engines serving this plant will stop to clear the highway. A members of the crew, with proper flagging equipment, will proceed to center of the highway to protect the further movement against highway traffic. Movements over this crossing will be made only on his signal.

During foggy and stormy weather when the visibility is poor and between sunset and sunrise, before entering the crossing, movement will be protected by two members of the crew who will proceed in each direction from the crossing a sufficient distance to warn highway traffic that the crossing is blocked, using lighted red light fusees for this purpose. Movement across the highway will not start until the flagmen in each direction are in position to stop highway traffic, and will be continuous so that highway will not be blocked by standing equipment if it can be avoided.

- 18-H. Sigurd siding is used as main track..
- 18-I. SD-7-SD-9 locomotives, Series 5300-5314, will not be operated on the following tracks having curvature in excess of 20 degrees:
- SPANISH FORK:

SL&U trackage in Center and Main Streets, including California Packing Company, Del Monte.

PROVO:

Provo Herald Track, 4th North, Provo Canyon Branch. West Track Keyes Tank.
Sears Roebuck—Pacific Fruit.
SL&U trackage in 5th South Street.
Anderson Lumber Company.

SUGAR HOUSE SPUR

SALT LAKE CITY AND OGDEN:
As designated by Yard bulletin,

Tracks Not Shown as Stations in Time-Table

Name	Mile	Station Numbers	Car Capacity	Switch Connection
Sub-Division 5				
Gilsonite Loma	$\frac{463.8}{465.7}$	2809 2810	65 35	E. & W. E. & W.
Sub-Division 5-A Dragerton	14.2	9105	10	E. & W.
Sub-Division 16				
Colorado Core Co. Spur Mesde Lumber Spur	353.2 353.5	2648	$rac{6}{4}$	East West
Frost	359.4 385.9	2640 2617	8 12	E. & W. E. & W.
Huff. Broughton	392.2	2613	10	E, & W,
Peoples	$394.0 \\ 358.5$	2615 2652	10 4 2	E. & W. E. & W.
VernalColona	363.9	2655	11	E. & W.
Ridgway	377.1	2664	Yard	Yard
Sub-Division 16-A Beet Track	374.0	2702	20	E. & W.
Saunders	377.3 393.3	2704	6	E. & W. E. & W.
White	393.3 393.4	2716 2716	7 9	$\begin{array}{c} \mathbf{East} \\ \mathbf{West} \end{array}$
Hadlev	404.5	2726	12	E. & W.
RobertsJuanita Jet	$\frac{407.2}{412.0}$	2730 2738	8 50	East East
Bear Mine	416.6	2742 2744	Yard 12	Yard W
HawksnestOliver	417.0 417.4	2744	Yard	E. & W. E. & W.
Sub-Division 6				
Kenilworth JunctionLynn	627.4 631.9	9030 9047	Yard 130	West East
Mill Fork	669.9	9064	11	West
Sutro Ironton—Columbia Steel Co	690.7 698.2	9082 9308	71 Yard	E. & W. E. & W. West
Pipe Mill Spur	710.1		94 Yard	West
GatexScalley	704.2 704.6	9316 9315	21	East East
Lehi	717.0 722.8	9324 9326	4 195	East West
Nash	737.4	9336	92	E. & W.
Sampler Fire Clay, Westward Track Dunford, Westward Track	739.0 740.6	9340 9346	27 10	East East
Sugar House	742.5	9710	Yard	West
Sub-Division 6-C Monay Coal Co	13.8	9156	22	West
Sub-Division 6-D	52.8	9234	Yard	East
MoroniLarsen	02.0	9231	Yard	
Larsen	75.0 90.2	9254 9270	Yard 12	West West
Ivie—Mili Spur Ivie—Beet Spur	90.2	9270	17	East
Ivie—Mill Spur Ivie—Beet Spur Gurr (Jumbo Mill Spur) Jumbo Mill	97.1 97.6	9276 9276	$_{ m Yard}^{ m 9}$	West West
Gramse	101.6 107.4	9282	40	E. & W.
Silver	107.4	9287	14	East
Sub-Division 6-E Spanish Fork Sugar Factory	5.1	9409	93	E. & W.
Keigley	16.0	9421	Yard	E. & W. E. & W. Wort
Eagle and Blue Bell Mine Gemini Mine	38.2	9454 9460	14 23	West West
Chief Con. Mine	38.4	9464 9456	60 30	West East
Godiva (Eagle and Blue Bell-Spur) . Goshen	0.7 22.1	9428	6	East
Sub-Division 6-G 12th North Provo	1.9		12	E. & W.
Provo Pressed Brick Works	2.1	9508	15	West
Sub-Division 6-H Lakeview	2.0	9555	5	East
Sub-Division 6-J U. S. Smelter	0.5	9332	Yard	West
Robbe	9.5	9634	2	East
Kennecott Corp. Interchange	11.9	9630	Yard	East
Sub-Division 6-K Bacchus Spur	6.1	9672	Yard	West
Sanda Spur	15.3	9681	Yard	West
Utah Refinery	15.3	9679	Yard	East
Sub-Division 6-L Snyder		9629	9	E. & W.

Tracks Not Shown as Stations in Time-Table (Continued)

Name	Mile	Station Numbers	Car Capacity	Switch Connection
Sub-Division 7 Fry. Farmington Layton Sugar Works Ogden Sugar Works Evona	760.6 768.0 779.5	9826 9842 9884	10 28 90 146 30	East East West East East
Sub-Division 7-A Hooper Sugar Works Hooper Canning Works	3.5 3.6	9872 9874	99 21	West West

DOUBLEHEADING AND PLACING OF HELPER AND DEAD LOCOMOTIVES IN TRAIN

19. Dead locomotives moving in trains will be handled as provided in Air Brake Rules 30-A to 31-E inclusive.

HELPER LOCOMOTIVES—GENERAL

- 19-A. When helper consisting of more than two units ML-4, three units GP-30 or four units of other type is used on rear of train, all units in excess of two, three or four respectively will be isolated.
- 19-B. Couplers must blocked on SD-7 and SD-9 units when used behind other type units in helping service.
- 19-C. One unit ML-4 or two units of other types may be placed behind caboose, provided coupler is blocked on shoving unit.
- 19-E. Tonnage handled by units on head end of train must not exceed:

4300 adjusted tons, Thistle to Soldier Summit.

3500 adjusted tons, Helper to Soldier Summit.

If train consists of more than this tonnage, helper will be placed on rear or cut into car.

Cars placarded "Rear End" or "Handle on Rear of Train Only," and other cars designated as "Rear Ender," must be trained behind helper, when helper is on rear of train.

HELPER LOCOMOTIVES—HELPER TO SOLDIER SUMMIT

19-F. On coal trains, when helper consists of four units or less, it will be cut in ahead of caboose and rear enders. If helper consists of 5 to 8 units, it will be cut in ahead of 2900 adjusted tons. If helper consists of more than 8 units, it will be cut in ahead of 3500 adjusted tons.

On other trains, if less than 3500 adjusted tons, helper may be placed ahead of road locomotive; if over 3500 adjusted tons, helper of more than two units will be cut in ahead of caboose and rear enders.

HELPER LOCOMOTIVES—THISTLE TO SOLDIER SUMMIT

19-G. If less than 4300 adjusted tons, helper may be placed ahead of road locomotive; if over 4300 adjusted tons, helper of more than two units will be cut in ahead of caboose and rear enders.

JOINT OPERATIONS

20. D. & R. G. W. trains and engines will enter Kennecott Corporation track, M.P. 15.3, Sub-Division 6-K (Sands Spur), under protection of flag.

20-A. All employees will be governed by O. U. R. & D. Co. rules and regulations and will have in their possession copy of current time table and rules, while using O. U. R. & D. Co. tracks at Ogden.

Joint switch crews, Salt Lake terminal, must have a copy of the current Western Pacific time table with them while on duty, and be governed by it while on Western Pacific tracks west of east curb of Jeremy Street, Salt Lake City.

20-B. Salt Lake City Union Depot and Railroad Co. Rules 1 and 3 as revised read:

- "1. Trains have no time table superiority between First South and Ninth South Streets, Salt Lake City Union Depot Company trackage on Fourth West Street, Salt Lake City. Yard engines and other engines occupying these tracks must make way for passenger train without unnecessarily delaying them. Trains, yard engines and other engines must move on Depot Company tracks prepared to stop within one-half the range of vision."
- 3. Automatic street crossing signals in service at 2nd and 4th South Streets at 4th West Street, Salt Lake City. Control circuit limits marked by rail joints painted yellow.

When a train, engine or yard movement, has stopped or been delayed within circuit control limits, additional movements must proceed slowly until positive determination is made that crossing signals have operated a sufficient time to stop traffic. In event crossing signals are not operating, movement over crossing must be protected by a crew member.

Unnecessary occupancy of control circuits must be avoided.

Indication signal placed on mast east side of 2nd and 4th South Streets will display flashing lunar lights when crossing signals are operating.

Eastward and westward trains when ready to depart will proceed slowly into control circuit to activate crossing signals.

Unless otherwise instructed, track assignments SLCUD are as follows:

D. & R. G. W. and W. P. passenger trains... Track No. 3

U. P. interchange deliveries.....Track No. 2

"Trains, yard engines, light engines and others using SLCUD Railroad Co. tracks will leave switches as found, except switches will be left lined for No. 3 track. Switch connection with WP main track and SLCUD track just east of 1st So. Street will be left lined for WP main track."

20-C. Within limits specified below Rule 93 of the D.&R.G.W. Rules and Regulations of the Operating Department govern all train or engine movements:

Garfield Yard U. P., Kennecott Corpn., and D. & R. G. W. Utah Refinery— Garfield Clearfield Naval Supply Depot Roads Governed U. P., Kennecott Corpn., and D. & R. G. W.-Kennecott Corpn., D. & R. G. W. switch crews enter Kennecott Corpn. main track at Utah Refinery under flag protection. U. P., Naval Supply Depot, and D. & R. G. W.

- **20-D.** Switch movements in the Ironton Plant shall proceed prepared to stop short of any obstruction, including trains, occupied tracks, improperly lined switches, and be on the lookout for anything that may affect movement of the train.
- 20-E. Within the limits of Geneva Steel Plant all trains and engines shall move within the Plant prepared to stop short

of any obstruction, including occupied track or improperly set switches.

20-F. All freight trains, switch and light engine movements, including interchange deliveries between U. P. North Yard and D. & R. G. W. Roper, will, unless otherwise provided, use the two running tracks extending from D. & R. G. W. main track, Sub-Division 7, between 1st North Street and North Temple Street to 21st South Street, Roper.

When display of markers not required, as in switch movements, a member of crew must ride rear car and display a white light to rear at all times between sunset and sunrise.

When operating in T. C. S. territory west of Pollard Jct., switch crews Roper-Salt Lake Terminal will be governed by W. P. Rule 547, reading:

"When work is to be done by any train or engine, including work trains, requiring movements in both directions within a block or blocks, authority must be obtained from (W. P.) train dispatcher who will specify working limits and, when necessary, time limits."

Between crossover leading to W. P. connection just south of 1st South Street, Salt Lake City, and 21st South Street, Roper, all trains, switch, light engines, and interchange delivery movements will keep to the right and movement against the current of traffic will be made in accordance with Operating Rule 93.

Western Pacific trains have no time table superiority on W. P. running track between S. L. C. U. D. & R. R. Co. trackage and westward home signal located between 5th and 6th West Streets.

- 20-G. All employees while using Union Pacific tracks, Salt Lake City, and U. S. Smelter tracks at Midvale, including D. & R. G. W. delivery and receiving tracks, will be under the jurisdiction of Union Pacific supervisors and will obey their instructions.
- D. & R. G. W. crews will deliver all passenger equipment to the Union Pacific Depot yard. In event the equipment is in solid trains and the trains have to be turned, instead of delivering to the Union Pacific on the leg of the wye, this equipment will be handled into their Passenger Depot.

To effect delivery and turning D. & R. G. W. switch crews will use joint facilities of Grant Tower interlocking then proceed on Pedro No. 2 to 2nd South and 3rd West, thereafter moving only as directed by switch tender located at 2nd South Street, who will designate the track in the Union Pacific Depot on which the delivery is to be made.

D. & R. G. W. crews will be governed by the following Union Pacific Operating and Special Rules, in addition to D. & R. G. W. operating rules, while working in these territories.

Union Pacific Operating Rules 93, 103(C), 103(D), and 802-B, and Special Rules 104(W) and 104(X).

- 93. Within yard limits, all trains and engines must move prepared to stop within the distance track is seen to be clear.
- 103(C). At public crossings protected by automatic crossing signals, bells or gates, every effort must be made to avoid unnecessarily occupying controlling circuits or leaving switches open within the controlling circuits.

When a train, engine or switching movement has been delayed or stopped within 1500 feet of such crossing, any further movement, either forward or reverse, toward the crossing must be made at restricted speed until it is determined that the crossing signals are operating for sufficient time to stop highway traffic. In case the crossing signals are not operating for the movement, crossing must be protected by a member of the crew, unless a crossing watchman is on duty.

When a train, engine or switching movement is to be made against the normal current of traffic over a public crossing protected by automatic crossing signals, bells or gates, a member of the crew must protect the crossing, unless a crossing watchman is on duty.

- 103(D). At public crossings protected by crossing watchmen and crossing gates, yard crews must know gates are down and crossing protected before making movement onto or over the crossing. When not so protected, the crossing must be protected by a member of crew.
- 104(W). At Salt Lake City, Second South Street, unless proceed signal is received from switchtender, trains and road engines must remain clear of following points:

Leaving passenger depot, remain clear of passenger lead,

Entering Salt Lake City, remain clear of Second South Street, stopping before fouling adjacent main track.

Entering Second South Street westward from Pedro 1 or Pedro 2 tracks, remain clear of cross-over just east of Second South Street.

Switchtenders must see route is properly lined and clear of other movements before giving proceed signal to approaching trains, road engines or D. & R. G. W. switch engines.

Second South switchtender must handle D. &. R. G. W. interchange movements on Provo Subdivision unless that track is blocked. If necessary to handle on Second Subdivision main track, switchtender must receive verbal permission from train dispatcher authorizing movement.

At Salt Lake City, trains and engines must not foul adjacent tracks or slip switches between North Temple Street and Second North Street without first receiving proceed signal from switchtender. (Does not apply to yard engines unless a first-class train is due.)

104(X). At Salt Lake City, eastward trains and engines on main track must stop to clear Fifth North Street unless proceed signal is received from switchtender.

Other trains and road engines, including D. & R. G. W. switch engines, must stop to clear Fifth North Street unless proceed signal is received from switchtender.

Unless otherwise directed, trains and engines, including D. & R. G. W. switch engines, moving to North Yard tracks from Freight Line must stop on straight track to clear Fourth North Street crossover, unless proceed signal is received from Fifth North switchtender.

802-B. Road engines, trains and yard movements approaching leads in terminal yards must stop before fouling lead unless it is known that switches are properly lined and lead is clear.

Before a train or yard movement starts out of a yard track, a trainman will precede the movement to a point where it is known route is clear.

Before a light engine starts out of a yard track, both the engineer and fireman must know that switches are properly lined and route is clear.

20-H. O. U. R. & D. Co. Time Table and rules apply between Ogden and Transfer.

20-I. Grant Tower annunciator is located 430 feet west of 13th South Street, Salt Lake City. Following whistle signals will be given at this annunciator:

WP trains and engines, departing—4 short. Ogden trains and engines departing—1 long. Rio Grande to UP deliveries—2 short. UP light engines, returning—1 long, 1 short.

MISCELLANEOUS

- 21. In freight service, fireman (helper) will patrol engineroom as frequently as conditions require after which he will immediately return to his proper place in the control room of the operating unit. He is responsible for operating conditions, observance of signals, etc., only when he is in the control unit.
- 21-A. When RS-3, GP-7, GP-9, SD-7, SD-9 or GP-30 locomotives are being operated together or coupled with other units, or when "A" units are being operated coupled between other units, and an alarm sounds, train will be stopped and units given inspection, when necessary.
- 21-B. Train, Engine and Yard service employes are required to adjust watch in event there is a variation of 30 seconds or more at time of comparison.
- 21-C. Engines or cars will not be left unattended on the Spring Canyon Branch main track.
- 21-D. Riding, getting on or off scale test car while same is in motion, is prohibited.
- 21-E. Cars must not be "dropped" over main highways.
- 21-F. D. & R. G. W. X cars, unless otherwise designated, are rear enders and must not be handled more than 20 cars ahead of rear end of train.

Open Hours of Train Order Offices

	Weekdays	Saturdays,	Sundays & Holidays
Grand Junction.,		Continuous	Continuous
	9:00 a.m 6:00 p.m.	Closed	Closed
Montrose	9:00 a.m 6:00 p.m.	Closed	Closed
	8:00 a.m 5:00 p.m.	Closed	Closed
	9:00 a.m 6:00 p.m.	Closed	Closed
Olathe	8:30 a.m 5:30 p.m.	Closed	Closed
Helper		Continuous	Continuous
Soldier Summit	Continuous	Continuous	Continuous
Thistle	Continuous	Continuous	Continuous
Provo	Continuous	Continuous	Continuous
Midvale (Sub.			
	7:00 a.m 4:00 p.m.		Closed
	Continuous	Continuous	Continuous
	Continuous	Continuous	Continuous
	8:00 a.m 5:00 p.m.	Closed	Closed
	7:30 a.m 11:30 p.m.	Closed	Closed
Transfer		Continuous	Continuous
	9:00 a.m 6:00 p.m.	9:00 a.m 6:00 p.m.	Closed
Salina	8:00 a.m 5:00 p.m.	Closed	Closed
Gunnison	8:00 a.m 5:00 p.m.	Closed	Closed
Manti	8:00 a.m 5:00 p.m.	Closed	Closed
Ephraim	8:00 a.m. = 5:00 p.m.	Closed	Closed

Following are legal holidays: New Year's Day, Washington's Birthday, Decoration Day, Fourth of July, Labor Day,

Thanksgiving Day and Christmas (provided when any of the above holidays fall on Sunday, the day observed by the State, Nation, or by proclamation shall be considered the holiday).

INSTRUCTIONS CONNECTION TONNAGE RATINGS (Following Pages)

Tonnage ratings shown for all locomotives are based on single unit. Where more than one unit is used, tonnage will be based on number of units used. SD-7 units will be rated the same as F-7 units and SD-9 units will be rated the same as F-9 units when used on a train with any other type units.

Car Limits, excluding caboose:

Sunnyside Branch: With two or more units, SD-7, SD-9 or four or more units other type locomotives, 70 loads may be handled Sunnyside to Columbia Junction and 115 cars Columbia Junction to Mounds. One unit SD-7 or SD-9 may handle 60 loaded cars and one unit other type locomotive may handle 40 loaded cars Sunnyside to Columbia Junction. Empties may be handled in addition to loads.

Soldier Summit to Thistle: Trains consisting of more than one-third coal or other heavy loads, when handled by 3 units—90 cars; when handled by 4 or more units—100 cars.

Adjusted Tonnage Ratings and Car Limits

FROM	Т0	Type F-9, GP-9 577 5901-5954 5762-5763	5305 5316 5316	Type SD-7 5300	Type GP-7, FT F-7, S100-5113 540-547 550-551 555-575 5761-5764	Type GP-30 3001-3013	Type ML-4 4001-4003	Adjustment Factor
Grand Junction	Mounds	1750	2500	2300	1540	2000	2900	9
Mounds	Helper	1875	2900	2700	1800	2100	3100	9
Helper	Grand Junction	1750	2600	2400	1590	2000	2900	9
Mounds	Columbia Junction	1160	1660	1560	1075	1350	1950	60
Columbia Junction	Sunnyaide	595	950	006	550	700	1050	77
Grand Junction	Delta	4800	7300	7000	4400	5500	8000	10
Delta	Мontrose	2000	3000	2800	1850	2300	3300	5
Delta	Somerset	2000	3000	2800	1850	2300	3300	10
Hotchkise	Rogers Mesa	3800	5500	5200	3500	4400	6300	8
Montrose	Ridgway	1950			1800	2200	3100	5
Sub-Div. 16 Wye	East Yard	4600			4000	2000	7200	
Helper	Castle Gate	950	1400	1850	006	1100	1600	
Castle Gate	Kyune	780	1240	1150	725	850	1300	60
Kyune	Soldier Summit	1775	2900	2700	1650	2000	2900	8
Provo	Thistle.	2300	3700	3500	2150	2750	3900	8
Thistle	Soldier Summit	950	1540	1400	068	1100	1600	co

Obelen Salt Lake 4800 3850 5850 5800 5850 5800 5850 5800 5850 5800 5850	Provo.	Сепета. Л.	2100			4500	2009	8000	60
Salt Lake			3125	4500	4300	2900	3650	5200	so.
Kenilworth 600 976 900 550 650 1025 1025 1620 1415 950 1560 1700 1700 Clear Creek 660 975 900 560 400 1700 1700 Mutual 430 650 650 600 400 560 1400 1700 Mutual 430 650 825 975 900 770 950 1400 1700 Welby 1000 1250 825 975 900 770 950 1400 1400 Bingham 875 80 50 350 820 980 1400 1400 1400 1400 1400 1400 1400 1400 1800 250 250 1500 <td></td> <td></td> <td>3125</td> <td>4500</td> <td>4300</td> <td>2900</td> <td>3650</td> <td>5200</td> <td>88</td>			3125	4500	4300	2900	3650	5200	88
Biogleid. 1926 1520 1415 950 1200 1700 Clear Creek. 600 975 900 550 1000 1000 Muthal. 430 650 600 600 1000 1000 1000 Welby. 1000 1250 1200 770 950 1450 1450 Dalton. 825 975 900 770 950 1450 1460 Bingham. 875 600 550 350 980 1450 1450 Welby. 2250 2800 2800 2100 2400 880 1500	а	Kenilworth	009	975	006	550	650	1000	83
Clear Creek. 660 975 900 560 650 1000 Mutual. 430 650 650 400 500 750 Welby. 1000 1250 1200 1000 1460 1460 Dalton. 825 975 900 770 960 1450 Bingham. 825 975 600 550 380 1450 Bingham. 875 600 560 350 440 650 980 Welby. 2250 2260 2600 2100 1260 3800 1500 Hale. 1350 2250 2100 1250 1500 1500 Santaquin. 1950 2850 2700 1800 3200 1500 Knightville. 430 700 650 400 500 750 Milltop. 1400 1800 1800 1600 2400 2400 Milltop. 1800 1800	:		1025	1520	1415	950	1200	1700	က
Mutual 430 650 600 400 500 750 Welby. 1000 1250 1200 1000 1400 1400 Dalton. 825 975 900 1000 1450 1450 Copperton. 825 975 900 770 950 1450 1450 Bingham. 875 820 760 550 850 1450 880 Welby. 2250 2260 2600 2100 2400 8800 1500 Hale. 1350 2250 2100 1250 1600 2300 1500 Santaquin. 1950 2850 2700 1800 2250 3200 1500 Knightville. 480 700 650 400 500 750 1500 Knightville. 480 700 650 400 500 750 1500 Miltop. 1400 1800 1800 1800 1800	:		900	975	006	550	650	1000	61
Welby. 1000 1250 1200 900 1000 1460 Dalton. 825 975 900 770 960 1450 Copperton. 550 820 760 520 650 980 Bingham. 375 600 550 350 440 650 980 Welby. 2250 2860 2250 2100 2400 8800 880 Haber. 910 1460 1360 1260 2260 1500 Santaquin. 1950 2850 2700 1800 2250 3200 Knightville. 430 700 650 400 500 750 Dividend. 430 700 650 400 500 750 Hilltop. 1400 1800 1800 1600 2400 800 Hilltop. 2050 2900 2700 1800 1800 2400 8400	tion	:	430	650	009	400	200	750	67
Dalton 825 975 900 770 960 1450 Copperton 550 820 760 520 650 980 Bingham 375 600 550 350 440 650 980 Bingham 2250 2800 560 2100 2400 3800 800 Hale 1350 2250 2100 1250 1500 2300 Bantaquin 1950 2850 2700 1800 2250 3200 Santaquin 1950 2850 2700 1800 750 750 Knightville 430 700 650 400 500 750 Knightville 430 700 650 400 500 750 Hilltop 1400 1950 1800 1800 2400 2400 Hilltop 2050 2700 1800 2850 3400 3400		Welby	1000	1250	1200	006	1000	1400	27
Copperton 550 820 780 520 650 980 Bingham 375 600 550 350 440 650 980 Welby 2250 2800 2600 2100 2400 3800 2800 Hale 1350 2250 2100 1260 1600 2300 2300 Haber 910 1460 1350 850 1050 1500 1500 Santaquin 1950 2850 2700 1800 2250 3200 Knightville 430 700 650 400 500 750 Dividend 430 7700 650 400 500 750 Hilltop 1400 1950 1800 1900 2400 750 Hilltop 2050 2900 2700 1900 2350 3400		-	825	975	006	770	950	1450	2
Bingham 875 600 550 440 650 7 Welby 2250 2800 2600 2100 2400 3800 2800 Hale 1350 2250 2100 1250 1600 2300 2300 Hale 1350 2250 2250 1500 1500 1500 1500 Santaquin 1950 2850 2700 1800 2250 3200 1500 Knightville 430 700 650 400 500 750 1500 Dividend 430 700 650 400 500 750 1500 Hilltop 1400 1960 1800 1800 1600 2400 2400 Hilltop 2050 2500 2700 1800 1800 2400 2400 2400		l :	550	820	092	520	650	086	1
Welby 2250 2800 2600 2100 2400 3800 Hale 1350 2250 2100 1250 1600 2300 Santaquin 1950 2850 2700 1800 2250 3200 Kaightville 430 700 650 400 500 750 Miltop 1400 1800 1800 1600 1500 1500 Hilltop 1400 1800 1800 1600 2400 750 Hilltop 1400 1800 1800 1600 2400 2400		-	375	009	550	350	440	650	1
Hale. 1350 2250 2100 1250 1600 2300 Heber. 910 1460 1350 850 1050 1500 1500 Santaquin. 1950 2850 2700 1800 2250 3200 Knightville. 430 700 650 400 500 750 Dividend. 430 700 650 400 500 750 Hilltop. 1400 1950 1800 1800 1600 2400 Hilltop. 2050 2700 1900 2400 3400 3400		: 1	2250	2800	2600	2100	2400	3800	60
Heber. 1910 1460 1850 850 1600 1500 <t< td=""><td></td><td>Hale</td><td>1350</td><td>2250</td><td>2100</td><td>1250</td><td>1600</td><td>2300</td><td>က</td></t<>		Hale	1350	2250	2100	1250	1600	2300	က
Santaquin. 1950 2850 2700 1800 2250 3200 Santaquin. 1950 2850 2700 1800 2250 3200 Knightville. 430 700 650 400 500 750 Dividend. 430 700 650 400 500 1500 Hilltop. 1400 1950 1800 1800 1600 2400 Hilltop. 2050 2900 2700 1900 2350 3400		١:	}	1460	1350	850	1050	1500	8
Santaquin. 1950 2850 7700 1800 2250 3200 Knightville. 430 700 650 400 500 750 Knightville. 860 1400 1300 800 1000 1500 Dividend. 430 700 650 400 500 750 Hilltop. 1400 1950 1800 1800 1800 2400 Hilltop. 2050 2900 2700 1900 2350 3400		-	1950	2850	2700	1800	2250	3200	5
Knightville 430 700 650 400 500 750 Knightville 860 1400 1300 800 1000 1500 1500 Dividend 430 700 650 400 500 750 750 Hiltop 1400 1950 1800 1800 1800 2400 2400 Hiltop 2050 2950 2700 1900 2350 3400 3400		Santaquin	1950	2850	2700	1800	2250	3200	5
Knightville 860 1400 1300 800 1000 1500 Dividend 430 700 650 400 500 750 Hilltop 1400 1950 1800 1800 1800 2400 Hilltop 2050 2900 2700 1900 2350 3400	:		430	700	650	400	200	750	
Dividend. 430 700 650 400 500 750 Hilltop. 1400 1950 1800 1800 2400 2400 Hilltop. 2050 2900 2700 1900 2350 3400		Knightville	098	1400	1300	800	1000	1500	2
Hilltop. 2050 2900 2700 1900 2350 3400 .			430	200	650	400	500	750	1
Hilltop 2050 2900 2700 1900 2350 3400 ·		Hilltop.	1400	1950	1800	1300	1600	2400	4
		Hilltop	2050	2900	2700	1900	2350	3400	22