

SOUTHERN PACIFIC COMPANY

SALT LAKE DIVISION

521-4
Ogden, November 23, 1949

SPECIAL NOTICE NO. 107

Trainmen No. 75
Enginemen No. 50

Trainmen and Enginemen:

DEP class locomotives operating on Trains 101 and 102 have boiler capacity in lead and trailing units of 1300 gallons and in middle unit of 1800 gallons, which capacity is sufficient under ordinary circumstances to run in either direction between Ogden and Carlin and between Carlin and Sparks without replenishing water supply.

Also, middle units of DEF-4 class locomotives used in freight service have boiler capacity of 1200 gallons. These are for emergency use when locomotive is coupled onto passenger train.

In the event of delays on passenger trains which result in boiler water shortage, adaptors for providing connections to units in order that additional boiler water can be procured are provided at the following locations.

- Fernley - Adaptor inside ticket office on west wall. Fire hose and standpipe in front of agent's house and also at section quarters.
- Hazen - Adaptor inside ticket office on east wall. Hose and hydrant just east of station.
- Lovelock - Adaptor outside freight house by hose and hydrant in south wall of freight house.
- Imlay - Adaptor in main line engine service station. Hydrant nearby - hose in hose house few feet west.
- Winnemucca - Adaptor on post at fire hydrant between passenger and freight depots.
- Golconda - Adaptor outside freight house by hose and hydrant in hose box in west wall.
- Battle Mtn - Adaptor outside by hose and hydrant in hose box, north wall of freight house.
- Elburz - Adaptor and hose inside hose box at east water tank. Switch lock on hose box door. Boiler water can be obtained on either S.P. or W.P. side.

- Wells - Adaptor on south wall of Assistant Trainmaster's office in station. Hose in box on southwest corner of station, and hydrant just west of station.
- Montello - West servicing station.
- Lucin - Adaptor outside freight house by hose and hydrant in hose box, east wall of freight house.
- Lemay - Adaptor outside on northwest corner of old station building just above hose box and hydrant.
- Lakeside - Adaptor and hose just inside and to right of powerhouse door; hydrant just west of powerhouse.

All adaptors inside of buildings are in orange colored boxes with glass front exposing view of adaptors. Adaptors can be removed from boxes by either removing two screws and the board over the top of glass and sliding glass up and out, or by breaking the glass.

Adaptors at Lovelock, Golconda, Battle Mountain, Lucin, and Lemay are in orange colored boxes protected by switch locks.

F. E. Kalbaugh