SANTA MARIA VALLEY RAILROAD CO.

NOV 21 1958

EMPLOYEES' TIME TABLE NO. 5

PUBLIC UTILITIES COMM.
STATE OF CALIF.

1958 NOV 20 PM 3 50

FILE NO.

IN EFFECT AUGUST 1, 1958 AT 12:01 A.M.

For the Government and information of Employees only, and not intended for the use of the public. The Company reserves the right to vary from this Time Table as circumstances may require.

G. ALLAN HANCOCK,
President

W. T. COLEMAN, Vice-President and Manager

> E. E. ESTES, Trainmaster

> > C. R. HOLDEN, Chief Dispatcher

SANTA MARIA VALLEY RAILROAD COMPANY

	EAST- BOUND	MAIN LINE	WEST BOUN
Capacity	1	Time Table No. 5	-
of Sidings and Spurs		Time Table No. 5	
in 42 ft.	Distance from Guadalupe		
Car	at g b		
Lengths	6 6	STATIONS	
Yards	-		-
KP	0.0	R GUADALUPE	
20	0.8	BARSUG	
		1.6	-
14	2.4	BRAGUR 0.9	_
00	3.3	BETTERAVIA JUNCTION	
32	3.5	BETTERAVIA STORAGE	-
		0.6	-
36	4.1	BETTERAVIA STOCK	
40	4.1	BETTERAVIA STOCK PASS	
12	4.8	CARR	
34 P	4.9	CARR SCALE	
4	5.9	PACER	
15-22	7.4	1.5	-
31	7.6	0.2	-
		1.7	-
BKWDOYP	9.3	TO SANTA MARIA	-1
	10.7	SUEY	
9-9	11.3	ROSEMARY	
20	12.7	1.4 — REX	-
8	14.8	2.1 ————————————————————————————————————	-

	Capacity of Sidings in 42 ft. Car Lengths	· Distance From Guadalupe	BETTERAVIA BRANCH	Distance From Santa Maria
1		3.3	BETTERAVIA JUNCTION	6.0
	27	3.9	IREMEL	6.6
Yard	34	4.3	GUM SIDING	7.0
1	P	4.8	BETTERAVIA	7.5

Distance from Guadalupe	SANTA MARIA AIR FIELD BRANCH	Distance From Santa Maria
9.3	SANTA MARIA	0.0
9.5	STOWELL	1.0
10.8	PESCO	2.3
11.2	AIRBASE	2.7
10.8	NORTH SANTA MARIA	1.5
	BATTLES BRANCH	
12.8	BATTLES	3.5

SPECIAL INSTRUCTIONS

RULE 2. Watch Inspector:
Melby's Jewelers......109 W. Main, Santa Maria

RULE S-72. Westward trains are superior to trains of the same class in the opposite direction.

RULE 93. All trains will approach yard limits of stations with train under full control, expecting to find the main obstructed. This does not give switching engine right over any train.

Yard limits are defined by Yard limit signs at Santa Maria and Betteravia.

RULE 98. Trains and engines on the North Santa Maria track, both northbound and southbound, when approaching the main line crossing must be brought to a full stop at a distance of not less than 25 feet or more than 50 feet from the nearest rail in the main line track, and shall not proceed to pass over the crossing until it has been ascertained that it is safe to do so, and there is no train in close proximity approaching the crossing on the main line.

RULE 99. When SMVRR crews operate in Guadalupe yard, adequate protection must be provided to avoid collisions.

RULE 103A. Trains and engines must stop, and member of crew must protect movement over the following crossings under the following conditions:

Airbase Track.....

Stowell crossingSouthbound movement

Pesco crossingSouthbound movement

Betteravia.....

Betteravia Crossing at

Track 6 and 7While switching

Main Line.....

Sinton crossing (Douglas

Oil crossing)While switching

Blosser RoadWhile switching West

end of Bonita

RULE 104D. Cars will not be dropped or kicked into the following tracks:

Gerrard

Sam Spur

Souza Bros.

Rosemary Feed Lot

1 Tojo Spur

GENERAL REGULATIONS

RULE 821. Speed of equipment over inundated tracks must not exceed 3 MPH, and movement must not be made if the depth of water above top of rail exceeds the following:

Diesel Engines 3 inches
Steam Engines 12 inches

RULE 824. The ruling grade is to the West on all tracks west of Bell Storage.

RULE 825. No movement is permitted over weigh rails except while weighing.

A sufficient number of hand brakes, but not less than a minimum of three (3) hand brakes, must be set on west end of each cut to hold cars when west of Bell Storage.

Cars must be separated to leave the following private crossings open:

 Betteravia Storage
 2 crossings

 Iremel
 1 crossing

 Gum
 1 crossing

SPECIAL INSTRUCTIONS

RULE 826. Indicator lights above track on each end of La Brea Ice Co.'s dock govern movements on the ice dock track as follows:

Green: Track may be used for train or switching movements.

Red over green: Track may be entered but cars already on the track may not be coupled to. Cars must not be dropped or kicked against other cars already on the track.

Red: Track must not be entered.

Not lighted: Must be considered as displaying most restrictive indication, and icing platform foreman must be contacted for instructions before cars are coupled or moved.

RULE 830. Trains and engines must not be left standing on Jones Street at Santa Maria.

The highway crossing on the South end of Guadalupe Yard must not be blocked longer than five (5) minutes (City ordinance).

MISCELLANEOUS

- 1. Steam engines must not operate on Rosemary Farm cattle feed lot spur track.
- 2. Steam Engine 21 must not operate on spur tracks serving Tojo, Souza or Gerrards sheds on West end of Santa Maria.
- 3. Water facilities at Guadalupe have been abandoned. When steam engines are operated, they must have a full tank of water before departing Santa Maria.
- 4. When work has been completed, each day, in Betteravia, or on Sam's spur, train crews must make sure that all gates used by train are closed and locked.
- In case of train accident wherein a locomotive is involved, a representative of the Mechanical Department must be notified immediately.
- 6. Dr. A. M. Beekler, 301 East Chapel Street, Santa Maria, is Santa Maria Valley Railroad Company's physician and surgeon.

LOCATION OF STRUCTURES NOT STANDARD CLEARANCE ON MAIN TRACK AND SIDINGS

Location

Description

Santa Maria

S. P. Milling spur (Warehouse building)

Side

SPEED RESTRICTIONS

All trains must run carefully during and after heavy storms, particularly when the track is apt to be affected. When fog, storms or other conditions obscure track or signals, speed of trains must be so reduced as to permit strict observance of signals and insure absolute safety regardless of time.

Maximum speed of any train20 MPH

All trains must not exceed speeds given below at points designated:

Rosemary to Gates12 MPH

Through turnouts and sidings10 MPH

*Regulated by City Ordinance

SPECIAL INSTRUCTIONS

MAXIMUM TONNAGE RATINGS

From Guadalupe to Betteravia or Santa Maria:

Diesels—Three Units	3975 Tons
Diesels—Two Units	2650 Tons
Diesels-One Unit	1325 Tons
Steam Engine No. 21	1975 Tons
Steam Engine No. 100	1650 Tons

Spotting Highline at Betteravia:

Diesels—Two Units	1000 Tons
Diesels-One Unit	500 Tons
Steam Engine 21 and 100	650 Tons

NOTE: 1. In case of emergency, contact the Trainmaster or Dispatcher for authority to exceed the train limits shown above.

AVERAGE WEIGHT PER CAR

Beets, High sides	75 Tons
Beets, low sides	65 Tons
Limerock	80 Tons
Coke	60 Tons
Livestock	36 Tons
Petroleum products, in box cars	40 Tons
Feed	55 Tons
Flour	55 Tons
Lumber	55 Tons
Shook	55 Tons
Dry Ice	
Plaster	70 Tons
Tin Cans	30 Tons
Fertilizer	65 Tons
Clay	75 Tons
Empty boxes, Freight reefers & tanks	25 Tons
Empty express reefers	30 Tons
Empty mechanical reefers	30 Tons

AIR BRAKE RULES

RULE 23. Before taking a train upon the Union Sugar Company's highline at Betteravia or before bringing the train from the highline, the air must be connected in all cars in the train.