

SAFETY

FIRST



THE SANTA FE SOUTHERN RAILWAY

SANTA FE, NEW MEXICO 87501



TIME TABLE No.

5

In Effect at 12:01 AM MST 30 JUNE 1996

This TimeTable is for the exclusive use and guidance of employees of the

SANTA FE SOUTHERN RAILWAY

R.A. SARR GENERAL MANAGER

PHONE NUMBERS

SANTA FE SOUTHERN RAILWAY

989-8600
470-2982
470-0380

Fax 983-7620

Non Business Hours Phones

General Manager 982-9957
Signal Specialist
Business Manager
Emergency Mobile
Other Emergency

Emergency Services

All Emergencies	911
Santa Fe Police	473-5033
Sheriff	986-6260
State Police	827-9300

Ambulance Or Fire 911

Eldorado Fire And Rescue 911

Customers

Aion Bumico	471-9132
American Pumice	800-727-5750
Big Chief	The state of the s
Jackalope	471-8539
Premier	473-0595
Warehouse	988-0658
Wholesale Builders	988-8077

BNSF

Car Search	800-727-2873
Dispatcher	708-995-6718
	505-857-4709

Larry Manning 708-995-4054

Other Services

Ajacks Towing	438-6042
Berridge Dist.	471-7600
Big Joe Crane	505-250-2325
Capital Cab	438-0000
Empire	982-2646
Furrow	988-2828
Ferrell Gas	983-7921
Santa Fe Rentals	473-2244

Miscellaneous

Lamy Depot	466-4511
Lamy Shuttle	982-8829


Santa Fe Southern				
SOUTH BOUND	Track Capacity in	TIME TABLE	Mile Post	NORTH BOUND
	50 ft. cars	No. 5		
No. 1		July 1, 1996		No. 2
Leave Tu. Th. & Sat.	-	STATIONS		Ret. Tu. Th. & Sat.
10.30 A.M.	Yard	Santa Fe	18.0	3:30 P.M.
	9	Wholesale Builders	17.8	100
	3	Big Chief	16.9	4197
1	12	S 10	16.6	18 1
	2	San Mateo	16.3	100
	2	American Pumice	14.7	
-	9	Premier	14.2	
	7-7-	Eldorado (proposed)	6.4	100
12.00 P.M.	Yard	Lamy	0.0	1:30 P.M.


RADIO CHANNELS	SFS	BNSF
Santa Fe Southern	N Laborator	1212 (160.290)
Burlington Northern Santa Fe	2	3232 (160.590)

MAIN TRACK AUTHORITY: Rule 6. 13, Yard Limits

Rule 1.14: Santa Fe Southern trains will use BNSF tracks at Lamy between M.P. 834 and M.P. 837. BNSF will use SFS wye at Lamy.

Permission must be obtained from SFS Manager

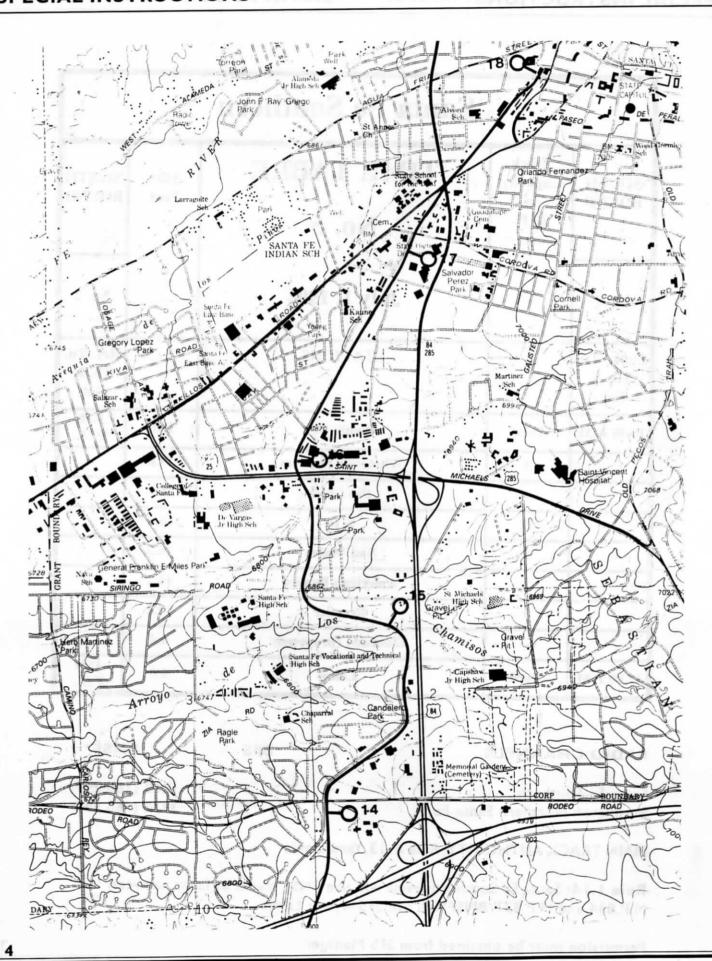

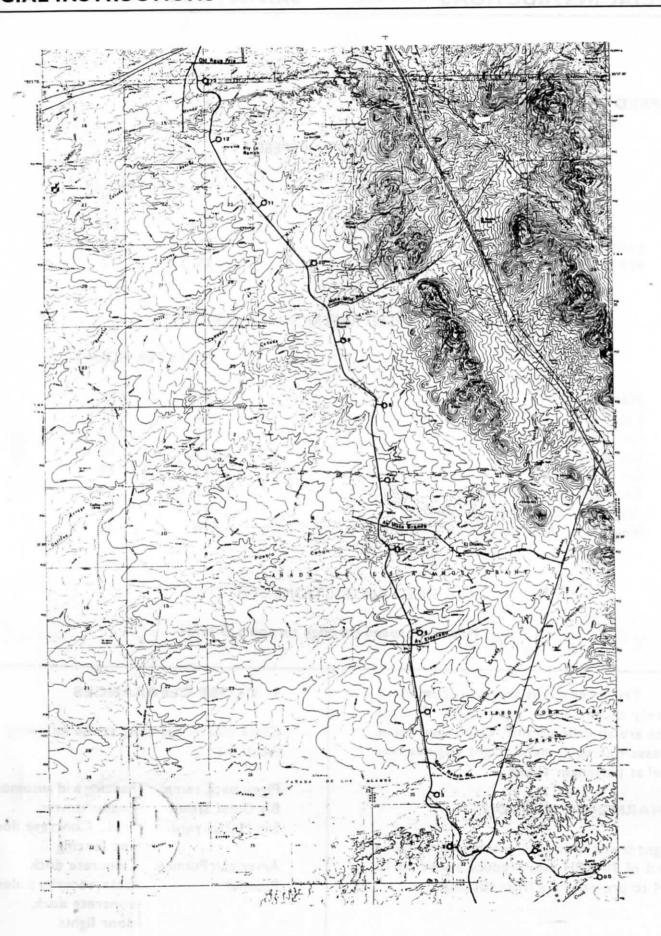

I. SPEED REGULATIONS:

(A) MAXIMUM SPEED

MILES PER HOUR

	Psgr.	Frt.
Lamy and MP. 13.9	20	20
M.P. 13.9 and Santa Fe	15	12

(B) SPEED RESTRICTIONS VARIOUS

MILES PER HOUR

Mile Posts	Psgr.	Frt.
Cv. 0.3-3.0	15	12
Cv. 5.8-6.6	15	12
Cv. 8.0-8.5	15	12
Cv. 9.4-10.0	15	12
Cv. 12.3-13.1	15	12
Xng. 16.1-San Mateo St.	10	10
Xng. 16.8 - Alta Vista St. to 18.0 - Yard	10	10

(C) SPEED RESTRICTIONS-SWITCHES

Maximum speed through turnouts, 5 MPH

Passenger trains are trains composed entirely of passenger equipment. Freight trains are all other trains. Cabooses count as passenger equipment. Light engines may travel at passenger speed.

2. HARMONIC MOTION

Freight trains which are unable to maintain a speed of 20 MPH must reduce speed to 12 MPH to prevent cars from rocking.

3. CLOSE CLEARANCES

Close clearances exist at the following locations:

locations:

Piggy-back ramp: Fencing and automobiles
Big Chief Stone: Loader tower

oig Ciliei Stolle. Loader tower

San Mateo yard: S-II, Concrete dock

and fencing

American Pumice: Concrete dock
Premier: Gate, security poles,

concrete dock, door lights

4. THE GENERAL CODE:

The General Code of Operating Rules, in effect April 10, 1994, is supplemented or amended as follows:

- Rule 1.14 is supplemented by adding:

 SFS trains operating on other rail roads must comply with SFS:

 -General Orders
 -Special Instructions
 Exception: Where another railroad's instructions are more restrictive, they must be complied with.
- Rule 1.47 D.1, is supplemented by adding:
 A crew member seated on the
 fireman's side of the locomotive must
 use that position to warn the engineer
 of any hazard to the train or
 engine.
- Rule 6.23 is supplemented by adding:
 OBSTRUCTION OF MAIN TRACK:
 At Lamy: If BNSF main track may
 be obstructed by cars from the L-2
 ("Valdez") track, flagging distance is 2
 (two) miles.
- Rule 6.27 is amended by adding:

 This rule will be observed by all "on track" equipment.
- Rule 6.5 is amended to read:

 HANDLING CARS AHEAD OF

 ENGINE: When cars are shoved on a

 main track or siding the movement

 must be made at Restricted Speed.
- Rule 7.6 is supplemented by adding: Track skates, when available, must be used.

- Rule 8.20 is amended by the following:

 Derails will be removed from any track before shoving cars onto that track.
- Rule 30.6 Initial terminal air test will be observed at Lamy and Santa Fe.

5. OTHER: SPECIAL INSTRUCTIONS

Cars will not be dropped by gravity at Lamy on any track toward (which leads to) the BNSF main track.

Cars left on the WYE at Lamy must have at least 50% of their operating hand brakes applied.

6. Locomotive Tonnage Ratings:

#92: 8 LOADED CARS OR 1,000 TONS #93: 9 LOADED CARS OR 1,100 TONS

SPEED TABLE

Time Per	Miles	Time Per	Miles	Time Per	Miles
Mile	Per	Mile	Per	Mile	Per
Mins. Sec.	Hour	Mins. Sec.	Hour	Mins. Sec.	Hour
36 37 38 39 40 41 42 43 45 46 47 48 50 51 52 53 54 55 56 57	100 97.3 94.7 92.3 90.0 87.8 85.7 83.7 81.8 80.0 78.3 76.6 75.0 70.6 69.2 67.9 66.6 65.5 64.2 63.2	58 59 1 1 02 1 04 1 06 1 08 1 10 1 12 1 14 1 16 1 18 1 20 1 22 1 24 1 26 1 28 1 30 1 32 1 34 1 36 1 38	62.6 61.0 60.0 58.0 56.2 54.2 52.9 51.4 50.0 48.6 47.4 46.1 45.0 43.9 42.9 41.9 40.9 40.0 39.1 38.3 37.5 36.8	1 40 1 42 1 44 1 46 1 48 1 50 1 52 1 54 1 56 1 58 2 2 05 2 10 2 15 2 24 2 30 2 45 3 30 4 6	36.0 35.3 34.6 34.0 33.3 32.7 32.1 31.6 31.0 30.5 30.0 28.8 27.7 26.7 25.0 24.0 21.8 20.0 17.1 15.0 12.0 10.0

AVOID DAMAGE --- SWITCH CUSTOMERS' CARS CAREFULLY

OVERSPEED Couplings are DAMAGING --- Here's what happens:



Damage to freight or car can be avoided by always keeping coupling speed within the safe range.

~ NOT OVER 4 MILES PER HOUR - A BRISK WALK ~

HANDLE FREIGHT CAREFULLY AND KEEP OUR CUSTOMERS!