#### TRAINMASTERS

T. W. ROBYFresno
G. MORRILLBakersfield
W. H. CLAIBORNE
A GOLOW AND WE A LATE A GOLD
ASSISTANT TRAINMASTER
T. A. PURCELLBakersfield
ASSISTANT TRAINMASTER-
DIVISION EXAMINER
C. F. OWENSBakersfield
ROAD FOREMEN OF ENGINES
L. J. FRANKLINBakersfield
I. A. WEIHEBakersfield
ENGINEMEN INSTRUCTOR
C. RENSHAWBakersfield
CHIEF TRAIN DISPATCHER
F F WASEM Bakerefield

P. D. ROBINSON
Assistant Superintendent, Bakersfield

## SOUTHERN PACIFIC COMPANY



# SAN JOAQUIN DIVISION TIMETABLE

168

AT 12:01 A. M.
PACIFIC STANDARD TIME

FOR THE GOVERNMENT AND INFORMATION OF EMPLOYES ONLY

J. W. CORBETT, General Manager.

> R. E. HALLAWELL, H. R. HUGHES, Assistant General Managers.

> > G. C. BAKER, General Superintendent of Transportation.

> > > C. H. GRANT, Superintendent of Transportation.

> > > > B. W. MITCHELL, Superintendent.

## HOSPITAL DEPARTMENT SURGEONS

LOCATION	NAME	TITLE
San Francisco	Dr. W. W. Washburn	Chief Surgeon
Fresno	Dr. J. D. Morgan	District Physician and Surgeon
Fresno	Dr. C. A. James	District Physician and Surgeon
Fresno	Dr. O. B. Doyle	Asst. Dist. Physician and Surgeon
Fresno	Dr. L. G. Price	Oculist
Fresno	Dr. Wayne Hunt	Aurist
Selma	Dr. J. D. Wagner	District Physician and Surgeon
Fowler	Dr. H. W. Nielson	District Physician and Surgeon
Sanger	Dr. Fred A. Burg	District Physician and Surgeon
Reedley	Dr. G. A. Hawkins	District Physician and Surgeon
Exeter	Dr. John F. Glenn	District Physician and Surgeon
Dinuba	Dr. Edgar Brigham	District Physician and Surgeon
Kingsburg	Dr. E. A. Larson	District Physician and Surgeon
Clovis	Drs. J. E. and C. I. Pender-	
0.00.000.000.000	grass	Emergency Physicians and Surgs.
Tulare	Dr. C. M. Mathias	District Physician and Surgeon
Pixley	Dr. J. Seiberth	District Physician and Surgeon
Delano	Dr. H. A. Rivin	District Physician and Surgeon
McFarland	Dr. R. W. Johnson	Emergency Physician and Surgeon
Visalia	Dr. F. R. Guido	District Physician and Surgeon
Hanford	Dr. C. T. Rosson	District Physician and Surgeon
Kerman	Dr. J. C. Drake	District Physician and Surgeon
Caruthers	Dr. George A. Meracle	Emergency Physician and Surgeon
Lemoore	Dr. W. P. Byron	District Physician and Surgeon
Porterville	Dr. W. W. Tourtillott	District Physician and Surgeon
Porterville	Dr. Thorwald Johnson	Asst. Dist. Physician and Surgeon
Strathmore	Dr. J. R. Fillmore	Emergency Physician and Surgeon
	Dr. H. G. Campbell	District Physician and Surgeon
Lindsay	Dr. H. W. Bell.	Division Physician and Surgeon
Bakersfiled	Dr. J. M. Krevitt	District Physician and Surgeon
Dakershied	Dr. R. M. Jones	Oculist and Aurist
Bakersfield	Dr. L. F. Baisinger	Oculist and Aurist
Bakersfield		
Tehachapi	Dr. H. L. Schlotthauer	District Physician and Surgeon
Mojave	Dr. H. L. Horswill	District Physician and Surgeon
Lone Pine	Dr. George D. Schultz	District Physician and Surgeon
Bishop	Dr. J. L. Mason	Emergency Physician and Surgeon
Randsburg	Dr. T. A. Drummond	Emergency Physician and Surgeon
Lancaster	Dr. W. R. Senseman	District Physician and Surgeon
Palmdale	Dr. N. H. Snook	District Physician and Surgeon
Saugus-Newhall	Dr. E. C. Innis	District Physician and Surgeon
San Fernando	Dr. R. W. Johnson	District Physician and Surgeon

Note.—Emergency Surgeons should be summoned only for temporary treatment when prompt attention is required and when patients cannot be sent to or await arrival of Division or District Surgeon.

#### HOSPITALS

GENERAL HOSPITALSAN FRANCISCO
EMERGENCY HOSPITALBAKERSFIELD
WHITE MEMORIAL HOSPITAL LOS ANGELES

	2 FRESNO SUBDIVISION													
	EASTWARD													
	***************************************	Ti	IIRD CLA	ss	SECON	D CLASS	1	FIRST	CLASS		1		Timetable No. 168	rom rd
	Capacity of sidings	784	782	780	446	402	56	52	60	58	Mile Post Location		June 2, 1946	Distance from Fresno Yard
	in car lengths	Freight	Freight	Freight	V. M. E.	В. М.	Passenger	San Joaquin Daylight	West Coast	Owl	¥1			E.
		Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily Ex. Monday	Leave Daily	Leave Daily	Leave Daily	Leave Daily		-	STATIONS	
yard	вкжор	PM 4.15	AM 8.15	AM 1.00	PM 6.40	AM 4.15					201.8		TO-R FRESNO YARD	0.0
Fresno 3	ВКЖОТУР	4.35	8.35	1.15	6.50	4.25	РМ 6.10	PM 1.08	AM 12.43	AM 12.25	205.5		TO-R FRESNO	3.7
Fre	IP IP	4.45	8.45	1.27	6.59	4.34	6.18	1.15	12.52	12.34	209.1		TO CALWA TOWER	7.3
	18 P Yard Limits	4.56	8.56	1.36	7.08	4.43	f 6.27	1.21	1.00	12.42	215.1		TO FOWLER	13.3
_:	25 P Yard Limits	5.06	9.06	1.44	7.16	4.51	s 6.39		1.07	f12.49	220.7		5.6 SELMA	18.9
-:	02 WP	5.14	9.14	1.52	7.23	4.58	s 6.49	1.31	1.13	12.55	225.6		TO KINGSBURG	23.8
1	08 P	5.24	9.24	2.02	7.31	5.06	f 6.56	1.36	1.20	1.02	231.3		TRAVER	29.5
I I — .	5 P os. 1-91, 2-91, 3-70	5.28	9.28	2.07	7.34	5.09	6.58	1.38	1.23	1.05	233.7		2.4 CROSS	31.9
<u>-</u> ¥	ard Limits WYP	5.37	9.37	2.17	7.41	5.16	s 7.08	1.43	1.30	1.12	239.1		TO-R GOSHEN JCT.	37.3
	3 P	5.47	9.47	2.28	7.49	5.24	f 7.15		1.36	1.19	245.6		6.5 TAGUS 4.1	43.8
Yd. Lmts.	IP										249.7	System	TO TULARE TOWER 0.3	47.9
X	92 P	5.57	9.57	2.37	8.00	5.35	s 7.35	s 1.58	s 1.51	s 1.30	250.0	Block S	TULARE	48.2
e		6.07	10.07	2.49	8.09	5.44	7.45	2.05	1.58	1.37	255.8	te Bi	OCTOL	54.0
8		6.14	10.14	2.57	8.15	5.50	s 7.53	2.09	2.03	1.42	260.4	omat	TO TIPTON	58.6
9		6.24	10.24	3.07	8.23	5.58	s 8.04	2.15	2.09	1.48	266.8	γn	TO PIXLEY 5.6	65.0
-8		6.33	10.33	3.17	8.30	6.05	f 8.15	2.20	2.15	1.54	272.4		TO EARLIMART	70.6
6	Yard Limits	6.39	10.39	3.24	8.35	6.10	8.19	2.23	2.19	1.58	276.5		RADNOR 4.2	74.7
8		6.47	10.47	3.33	8.42	6.17	s <b>8.42</b>	2.28	2.24	2.04	280.7		TO DELÂNO	78.9
	V-81	6.57	10.57	3.44	8.51	6.26	s 8.53	2.34	2.31	2.11	287.0		TO McFARLAND 5.6	85.2
	-134 KWTP	7.06	11.06	3.53	8.58	6.33	f 9.07	2.39	2.37	2.17	292.6		TO-R FAMOSO	90.8
6	·	7.11	11.11	3.58	9.02	6.37	9.10		2.40	2.20	295.9		SLATER	94.1
8		7.19	11.19	4.06	9.08	6.43	f 9.17	2.46	2.46	2.26	300.5		4.6 <b>LERDO</b> 2.5	98.7
9		7.23	11.23	4.10	9.11	6.46	9.20	2.48	2.49	2.29	303.0		PROSPERO 2.8	101.2
<u>ه</u> و		7.27	11.27	4.14	9.15	6.50	9.24		2.52	2.32	305.8		2.8 SACO 2.8	104.0
Bakers-	82 YP	7.32 7.45 PM	11.32 11.45 AM	4.19 4.30 AM	9.19 9.30	6.54 7.05	9.27 s 9.40	2.53 s 3.01	2.56 s <b>3.05</b>	2.36 s 2.45	308.6		TO-R <b>OIL JCT.</b>	106.8
1.6	BKWOTYP	PM Arrive Daily	AM Arrive Daily		9.30 PM	7.05 AM Arrive Daily	PM	PM	AM	AM	312.9		TO-R BAKERSFIELD	111.1
-				Arrive Daily	Ex. Sunday	Ex. Monday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily			(111.1)	
		(3.30) 31.74	(3.30) 31.74	(3.30) 31.74	(2.50) 39.21	(2.50) 39.21	(3.30) 30.69	(1.53) 57.03	(2.22) 45.38	(2.20) 46.03			Time over District	

RULE 5. Schedule time and train-order time for eastward trains at Calwa Tower apply at end of double track.
Schedule time and train-order time at Goshen Jct. apply at

No. 1 siding.
Schedule time and train-order time for eastward trains at Famoso apply at junction switch of Porterville line.

RULES 86 and 93. Second and third-class trains, extra trains and engines except trains handling passenger equipment only, must clear the time of Nos. 51 and 52 not less than 10 minutes and must be clear of main track and insulated joints at meeting and passing points for Nos. 51 and 52.

Train	At	Receive To (or Beyond)	Discharge From (or Beyond)	Frequency
58 60 60 56	Delano		. Tracy	Daily

No. 60 stop at Delano to permit mail to be thrown into mail car door. No. 52 reduce speed to 25 MPH at Tipton and Delano on request of RPO clerk to dispatch registered currency.

ADDITIONAL STATIONS						
NAME	Mile Post	Capac- ity				
Muscatel. Calwa. (Spur) Malaga. (Spur) Wineland (Spur) Midvalley (Spur)	200.2 208.3 210.4 222.8 243.4	80 34 38 14 7				
Vinland (Spur) Cawelo	$284.5 \\ 299.7$	16 57 P				

					FRES	NO SU	BDIVI	SION					3
								WE	STWA	RD			
		Timetable No. 168	mor 19		FIRST	CLASS		SECOND CLASS			THIRD	CLASS	
Mile Post Location		June 2, 1946	Distance from Bakerssield	59	55	51	57	445	781	783	785	787	
Xı			Disi	West Coast	Passenger	San Joaquin Daylight	Owl	V., M., W.	Freight	Freight	Freight	Freight	
		STATIONS		Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily Ex. Monday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	
201.8		TO-R FRESNO YARD	111.1					AM 6.00	AM 3.50	AM 11.30	PM 6.35	PM 11.55	
205.5		TO-R FRESNO 3.6	107.4	ам s 3.45	s 9.00	PM s 3.20	* AM s 2.35	5.48	3.35	11.15	6.20	11.40	
209.1		CALWA TOWER 6.0	103.8	3.34	8.45	3.11	2.20	5.38	3.25	11.05	6.10	11.30	
215.1		TO FOWLER 5.6	97.8	3.24	s 8.30	3.04	2.10	5.29	3.16	10.55	6.00	11.20	
220.7		SELMA 4.9	92.2	3.16	s 8.15	2.57	f 2.00	5.21	3.08	10.46	5.51	11.11	
225.6		TO KINGSBURG 5.7	87.3	3.08	s 8.02	2.51	1.52	5.14	3.00	10.37	5.43	11.02	
231.3		TRAVER 2.4	81.6	3.00	7.50	2.44	1.44	5.06	2.51	10.28	5.33	10.53	
233.7		CROSS 5.4	79.2	2.58	7.47	2.42	1.40	5.02	2.47	10.24	5.28	10.49	
239.1		TO-R GOSHEN JCT. 6.5	73.8	2.51	s 7.37	2.36	1.30	4.55	2.38	10.15	5.18	10.40	
245.6		TAGUS 4.1	67.3	2.44	7.15	2.30	1.19	4.47	2.28	10.05	5.08	10.30	
249.7	System	TO TULARE TOWER 0.3	63.2										
250.0		TULARE 5.8	62.9	s 2.37		s 2.24		4.41	2.20	9.57	5.00	10.22	
255.8	Block	OCTOL 4.6	57.1	2.21	6.38	2.13	12.54	4.26	2.10	9.47	4.50	10.12	
260.4	matic	TO TIPTON 6.4	52.5	2.16	s 6.33	2.09	12.49	4.20	2.03	9.40	4.42	10.05	
266.8	Auto	TO PIXLEY 5.6	46.1	2.09	s 6.17	2.02	12.42	4.12	1.48	9.30	4.32	9.55	
272.4	1	TO EARLIMART 4.1	40.5	2.02	s <b>6.05</b>	1.57	12.36	4.05	1.38	9.20	4.22	9.45	
276.5		RADNOR 4.2	36.4	1.58	5.57		12.31	4.00	1.32	9.13	4.16	9.38	
280.7		TO DELANO 6.3	32.2	1.53	s 5.35	1.49	f 12.26	3.53	1.24	9.05	4.08	9.30	
287.0		TO McFARLAND 5.6	25.9	1.46	s 5.29	1.43	12.19	3.44	1.13	8.53	3.58	9.16	
292.6		TO-R FAMOSO 3.3	20.3	1.40	f 5.19	1.38	12.13	3,37	1.04	8.44	3.49	9.07	
295.9		SLATER 4.6	17.0	1.37	5.13		12.09	3.33	12.57	8.37	3.42	9.02	
300.5		LERDO 2.5	12.4	1.32	f 5.08	1.31	12.04	3.27	12.49	8.29	3.34	8.54	
303.0	٠.	PROSPERO 2.8	9.9	1.29	5.04	1.29	12.01 AM	3.24	12.45	8.25	3.30	8.50	
305.8		SACO 2.8	7.1	1.26	5.01		11.58 PM	3.20	12.40	8.20	3.25	8.45	
308.6		TO-R OIL JCT.	4.3	1.23	4.58	1.24	11.55	3.16	12.35	8.15	3.20	8.40	
312.9	I	TO-R BAKERSFIELD	0.0	1.15 AM	4.50 AM	1.16 PM	11.45 PM	3.05 AM	12.20 AM	8.00 AM	3.05 PM	8.25 PM	
		(111.1)		Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Monday	Leave Daily	Leave Daily	Leave Daily	Leave Daily	
	-	Time over District		(2.30) 42.96	(4.10) 25.78	(2.04) 51.97	(2.50) 37.91	(2.55) 38.09	(3.30) 31.74	(3.30) 31.74	(3.30) 31.74	(3.30) 31.74	

RULE 5. Schedule time and train-order time for eastward trains at Calwa Tower apply at end of double track.

Schedule time and train-order time at Goshen Jct. apply at

No. 1 siding.

Schedule time and train-order time for eastward trains at Famoso apply at junction switch of Porterville line.

RULES 86 and 93. Second and third-class trains, extra trains and engines except trains handling passenger equipment only, must clear the time of Nos. 51 and 52 not less than 10 minutes and must be clear of main track and insulated joints at meeting and passing points for Nos. 51 and 52.

AD	DITIONAL FLAG STOPS T	O RECEIVE OR DISCH	ARGE REVENUE PASS	ENGERS
Train	At .	Receive To (or Beyond)	Discharge From (or Beyond)	Frequency
55 59	Any StationDelano		Any Station	

No. 57 stop at Delano to permit mail to be thrown into mail car door.

4		,	ГЕНАС	HAPI	SUBDI	VISIOI	1					
		EASTWA	RD									
	SECOND CLASS		Fil	RST GLA	88				7	imetable No. 168		₽_
Capacity of sidings in car lengths	448 v. m. e.	56 Passenger	2 AT&SFRy Passenger	<b>52</b> San Joaquin Daylight	24 AT&SFRy Passenger	60 West Coast	58 0w1	Mile Post Location		June 2, 1946		Distance from Bakersfield
	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily			STATIONS		
BKWOTYP	PM 9.45	PM 10.05		PM 3.08		AM 3,15	AM 2.55	312.9	то	R BAKERSFIELD		0.0
BKWOTYP	9.50	10.07	PM 7.10	3.10	AM 8.35	3.17	2.57	313.6	TO		ļμ	0.7
M-87 P								327.9		14.3 BENA 3.4	] ;	15.0
93 P								331.3	_	1LMON 3.8		18.4
103 103 WP		s 10.51	7.42		9.07			335.1 335.2	∦	CALÏENTE 3.0		22.2
91 P								338.2	∦	ALLARD 2.3 BEALVILLE	Cen	25.2
110 WP								340.5		1.8	Centralized	27.5
102 P								342.3	System	CLIFF 3.2		29.3
82 P		PM						345.5	#   E	ROWEN 3.3	Traffic (	32.5
73 WP		f11.34	8.17		9.42			348.8	Automatic	WOODFORD	Control	35.8
104 P						<del></del>		351.8	Vartor	WALONG 2.3 MARCEL		38.8 41.1
112 P								354.1 356.6 356.7	11-	2.5 CABLE		43.6
88 P	11.45	AM		. 4 41	10.11	5.01	f 4.41	360.6	TO	3.9 TEHACHAPI	{	47.5
96 No. 2-98 KIWP E-107 YP	11.45 11.50	s 12.19 12.21	8.48	8 4.41	10.11	5.03	4.43	362.4	1   ==	1.8 SUMMIT		49.3
M-76 P	PM 11.55	s 12.29	8.52		10.13	5.07	4.47	365.0		MONOLITH	Double	51.9
Yard Limits YP	AM 12.01	12.34	8.56	4.50	10.21	5.11	4.51	368.0	1	3.0 ERIC	e Track	54.9
M-85 P	12.17	12.46	9.07	4.59	10.32	5.22	5.02	374.3		WARREN	C.	61.2
Mojave yard BKWOYP	12.35 AM	s 1.00	8 9.20 PM	s 5.08			s 5.15 AM	380.7	то	R MOJAVE		67.6
	Arrive Daily Ex. Monday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily			(67.6)		
	(2.50) 23.36	(2.55) 23.18	(2.10) 31.20	(2.00) 33.80	(2.10) 31.20	(2.20) 29.56	(2.20) 29.55		A	Time over District verage Speed per Hour		

	EAST- V	Timetable No. 168	WEST- WARD
Capacity of sidings in car lengths	ost	June 2, 1946	from
	Mile Post Location	Arvin Branch	Distance from
		STATIONS	- A
Bakersfield yard P	316.6	MAGUNDEN	16.5
60	326.8	10.2 RIBIER	6.3
P	333.1	ARVIN	1 0.0
		(16.5)	

ADDITIONAL STATIONS						
NAME	MHe Post	Capac- ity				
Algoso	325.9	16 P 8 29 8 46 YF				

Train	At	Receive To (or Beyond)	Discharge From (or Beyond)	Frequency
2, 24	{Caliente} {Woodford} Tehachapi	East of Mojave	West of Bakersfield	Daily
56 56	Edison	Any Station (employes)	Any Station	Daily Daily

1 2		
ADDITIONAL STA	TIONS	
NAME	Mile Post	Capac-
Magunden Edison(Spur)	317.0 320.1 369.9	61 P 124 P 13 P

	- 7					1	ГЕНАС	HAPI	SUBDI	VISIO	4	***				5
										W	ESTWA	RD				
		Timeta	ble No. 168		Ħ			F	RST CL	lss				SECOND	CLASS	
Mile Post Location		Jur	ne 2, 1946		Distance from Mojave	55	1 AT&SFRy	51	23	57	59		447			
	-				Dts	Passenger	Passenger	San Joaquin Daylight	Passenger	Owl	West Coast	<u> </u>	V. M. W.			
	-		ATIONS			Arrive Daily	Arrive Daily		Arrive Daily	Arrive Daily	Arrive Daily	-	Arrive Daily Ex. Monday			
312.9		TO-R BAK	0.7		67.6	s 4.20		PM s 1.08 1.05		PM s 11.35	s 1.05		AM 2.40			
313.6			RN JCT. 14.3	اعرا	66.9	4.16	AM 10.20		PM 9.10	11.31	1.01		2.35			
327.9			<b>BENA</b> 3.4	F!	52.6	3.45	10.03	12.49 PM	8.53	11.10	12.40 AM		2.12		-	
331.3		Ī	LMON 3.8		49.2											
335.1 335.2 338.2		1	LIENTE 3.0 LLARD		45.4	f 3.28	9.49		8.39							
340.5			2.3 ALVILLE	င္ပ	42.4											
342.3	E		1.8 CLIFF	Centralized	40.1											
345.5	System		3.2 OWEN	Zed T	38.3											
348.8	Biock		3.3 ODFORD	Traffic	35.1	s 2.34	9.16									
351.8		ì	3.0	Control	28.8	8 2.34	9.16		8.06							
354.1	Automatic	M	2.3 ARCEL	D.	26.5											
356.6 356.7		c	2.5 CABLE		24.0											
356.7 360.6		TO TEH	3.9 IACHAPI	┚╟	20.1	s 2.00	8.47	s 1 1 .35	7.37	f 9.55	11 25		12.40			
362.4		Su	1.8 JMMIT	]  -	18.3	1.39	8.43	s 1 1.35 AM	7.33	9.48	11.25 PM 11.20		12.31			
365.0		Mo	2.6 NOLITH	Double	15.7	s 1.35	8.39		7.29	9.43	11.15		12.26			
368.0			3.0 ERIC 6.3		12.7	1.27	8.34	11.23	7.24	9.38	11.10		12.20			
374.3		W	0.3 ARREN 6.4	Track	6.4	1,17	8.24	11.14	7.14	9.26	10.58		12.07 AM			
380.7		TO-R M	OJAVE	]   f	0.0	1.05 AM	8.10 AM	11.06 AM	7.00 PM	9.15 PM	10.47 PM		11.55 PM			
	<u> </u>	(	(67.6)			Leave Daily	Leave Daily	AM Leave Daily	PM Leave Daily	Leave Daily	PM Leave Daily		Leave Daily Ex. Sunday			
		Time ov Average S	ver District peed per Hour			(3.15) 20.80	(2.10) 31.20	(2.02) 33.25	(2.10) 31.20	(2.20) 29.55	(2.18) 29.39		(2.45) 24.58			

Train	At	Receive To (or Beyond)	Discharge From (or Beyond)	Frequency				
59	Tehachapi	Stockton		Daily				
1, 23	{Tehachapi	West of Bakersfield	East of Mojave	Daily				
55 55	Edison	.,,,,,,	Any Station	Daily				

6														
				EA	STWA	RD								
			THIRD	CLASS		SECOND GLASS		FIRST	CLASS				Timetable No. 168	<b>8</b>
Capacity	y of sidings	808	806	804	802	448	52	60	58	56	Mile Post Location		June 2, 1946	Distance from Mojave
	r lengths	Freight	Freight	Freight	Freight	V. M. E.	San Joaquin Daylight	West Coast	0wl	Passenger	W.			Dist
	*	Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Monday	Leave Daily	Leave Daily	Leave Daily	Leave Daily			STATIONS	
d d	вкжоур	PM 8.25	PM 2.10	AM 8.45	AM 1.05	AM 12.40	PM 5.11	AM 5.40	AM 5.20	AM 1.30	380.7		TO-R MOJAVE	0.0
Mojave yard	P	8.27	2.12	8.47	1.07	12.42	5.12	5.41	5.21	1.31	381.3		TO-R EAST-MOJAVE	0.6
91	P	8.32	2.17	8.52	1.12	12.47		5.45	5.26	1.36	384.8		3.5 FLETA 2.5	4.1
92	P	8.37	2.22	8.57	1.17	12.52		5.49	5.30	1.40	387.3		GLÖSTER 3.1	6.6
88	P_	8.42	2.27	9.02	1.22	12.57		5.53	5.34	1.44	390.4		ANSEL 3.9	9.7
103	P	8.48	2.33	9.08	1.28	1.03	5.24	5.58	5.38	f 1.53	394.3		TO ROSAMOND  5.6 OBAN	13.6
113	P	8.57	2.42	9.17	1.37	1.12		6.05	5.45	2.00	399.9	$\  \ \ $	5.6	19.2
120 Yar	d Limits WP	9.06	2.51	9.26	1.46	1.21	s 5.35	6.13	5.54	s 2.20	405.5	$\  \ \ $	TO LANCASTER  4.3 DENIS	24.8
113	P	9.13	2.58	9.33	1.53	1.28		6.19	6.00	2.26	409.8	1	DENIS 4.0	29.1
76	WYP	9.19	3.04	9.39	1.59	1.34		6.24	6.05	s 2.37	413.8		TO PALMDALE 2.5	33.1
97	P	9.23	3.08	9.43	2.03	1.38	5.46	6.27	6.09	2.40	416.3	╢╻╢	TO VINCENT	35.6
E100 W100	Yard Limits IYP	9.43	3.20	9.55	2.16	1.48	5.54	6.38	6.20	2.50	420.5	System	4.5	39.8
91	P	9.57	3.34	10.09	2.30	2.02		6.46	6.28	2.58	425.0	lock S	PARIS 4.0	44.3
94	WP	10.10	3.44	10.19	2.40	2.12	6.11	6.54	6.36	f 3.10	429.0	IIM S	TO RAVENNA 5.6	48.3
87	Р	10.24	3.58	10.33	2.54	2.26	6.22	7.06	6.48	3.22	434.6 438.6	Automatic	#USS 4.0	53.9
105	P	10.34	4.08	10.43	3.04	2.36	6.30	7.14	6.56	f 3.31	438.8 443.0	F	TO LANG 4.2 HUMPHREYS	57.9
90	P	10.45	4.19	10.54	3.15	2.47		7.22	7.04	3.39	443.1	-	HUMPHREYS 3.8	62.1
87	P	10.55	4.29	11.04	3.25	2.57	6.45	7.30	7.12	3.47	446.9	4	HONBY 3.7	65.9
E103 W112	Yard Limits WOIYP	11.04	4.38	11.14	3.35	3.06	6.52	7.38	f 7.21	s 4.08	450.6	4	TO-R SAUGUS	69.6
177	IP	11.10	4.44	11.20	3.41	3.12	6.56	7.42	7.25	f 4.19	453.0	-	NEWHALL 3.6	72.0
56	P										456.6	4	TUNNEL 2.6	75.6
78	· P	11.26	5.00	11.36	3.57	3.28	7.06	7.54	7.37	4.32	459.2	-  -	SYLMAR 2.6	78.2
98 Yai	rd Limits WP	11.34	5.08	11.44	4.05	3.36	7.11	8.02	7.48	s 4.52	461.8	-	TO SAN FERNANDO	80.8
79	P	11.38	5.12	11.48	4.09	3.40		8.05	7.52	f 5.00	463.4		PACOIMA 4.5	82.4
91	P	11.49		11.59	4.20		7.18	8.11	7.59	f 5.15	467.9	-	TO ROSCOE	86.9
Los A 83	ngeles yard IP	11.59 PM	5.35 PM	12.10 PM	4.30 AM	4.00 AM	7.23 PM	8.18 AM	8.05 AM	5.25 AM	471.6	II .	TO BURBANK JCT.	90.6

Time at Glendale, Los Angeles Yard and Los Angeles (LAUPT) for information only. See Los Angeles Division current timetable for train movements between Burbank Jct. and Los Angeles.

		3						<del></del>	 II.	
					7.33	8.28	8.15	5.37	GLENDALE	
12.25 AM	6.00 PM	12.35 PM	4.55 AM	4.25 AM					LOS ANGELES YARD	
					7.50 PM	8.45 AM	8.35 AM	6.00 AM	LOS ANGELES (LAUPT)	
Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily Ex. Monday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily		
(3.34) 25.40	(3.25) 26.52	(3.25) 26.52	(3,25) 26,52	(3.20) 27.18	(2.12) 41.18	(2.38) 34.40	(2.45) 32.94	(3.55) 23.13	Time over District Average Speed per Hour	

 ${\bf RULE~5.}$  Schedule time and train-order time at Burbank Jct. apply at the end of double track.

RULES 86 and 93. Second and third-class trains, extra trains and engines must be clear of main track and insulated joints at meeting and passing points for Nos. 51 and 52.

Track south of main track at Ravenna, known as No. 2 track, must be left clear of cars, to be used for meeting or passing trains when instructed by train order.

Train	At	Receive To (or Beyond)	Discharge From (or Beyond)	Frequency
58 58 58 60 60 60 56	Lancaster Palmdale San Fernando Lancaster Saugus San Fernando Acton. Any Station	Glendale Colton	Fresno Fresno Stockton Stockton Any Station	Daily Daily Daily Daily Daily

				MOJ	AVE SU	JBDIVI	SION						7
							WE	STWA	RD				
	Timetable No. 168	<b>8</b> 4		FIRST	CLASS		SECOND CLASS			THIRD	CLASS		
Mile Post Location	June 2, 1946	Distance from Burbank Jet.	51 San Joaquin Daylight	57 0wl	59 West Coast	55 Passenger	<b>447</b> v. m. w.	801 Freight	803 Freight	805 Freight	807 Freight		· · · · · · · · ·
	STATIONS	_	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily Ex. Sunday	Arrive Daily	Arrive Daily	Arrive Daily	Arrive Daily		
380.7	TO-R MOJAVE	90.6	AM s 11.02	PM s 9.08	PM s 10.41	AM s 12.40	PM 11.44	AM 3.35	AM 10.15	PM 3.55	PM 10.10		
381.3	TO-R EAST-MOJAVE	90.0	11.00	9.06	10.39	12.38	11.42	3.33	10.12	3.52	10.07		
384.8	FLETA 2.5	86.5		9.02	10.35	12.34	11.37	3.25	10.04	3.44	9.59		
387.3	GLOSTER 3.1	84.0		8.58	10.31	12.30	11.32	3.19	9.58	3.38	9.53		
390.4	ANSEL 3.9	80.9		8.53	10.26	12.26	11.27	3.14	9.52	3.32	9.47		
394.3	TO ROSAMOND 5.6	77.0	10.48	8.48	10.21	f 12.20	11.21	3.08	9.44	3.24	9.39		
399.9	<b>OBAN</b> 5.6	71.4		8.41	10.14	12.11	11.12	2.59	9.35	3.15	9.30		
405.5	TO LANCASTER 4.3	65.8	s 10.37			AM -	11.03	2.50	9.26	3.06	9.21		
409.8	DENIS 4.0	61.5		8.26	9.59	11.39 PM	10.56	2.43	9.19	2.58	9.13		
413.8	TO PALMDALE 2.5	57.5		8.21	2.0	s 11.34	10.50	2.37	9.13	2.51	9.07		
416.3	HAROLD 4.2	55.0	10.25	8.17	9.51	11.24	10.44	2.30	9.07	2.45	9.01		:
420.5	# 4.2 TO VINCENT 4.5	50.8	10.17	8.09	9.43	11.16	10.31	2.16	8.54	2.32	8.48		
425.0	PARIS 4.0	46.3	10.09	7.58	9.32	11.06	10.20	2.02	8.42	2.20	8.36		
429.0	TO RAVENNA 5.6	42.3	10.02	7.50		f 10.57	10.10	1.52	8.32	2.10	8.26		
434.6	TO RAVENNA 5.6 RUSS 4.0	36.7	9.51	7.37	9.11	10.42	9.56	1.38	8.18	1.56	8.12		
438.6 438.8	10 LANG 4.2	32.7		7.29		f 10.34	9.46	1.28	8.08	1.46	8.02		
443.0 443.1	HUMPHREYS 3.8	28.5	9.36	7.21		f 10.24	9.35	1.17	7.57	1.35	7.51	·	
446.9	HONBY 3.7	24.7		7.13	8.47	10.16	9.25	1.07	7.47	1.25	7.41		
450.6	TO-R SAUGUS 2.4	21.0	9.22	s 7.06		s 10.09	9.16	12.58	7.38	1.16	7.32		
453.0	NEWHALL 3.6	18.6	9.18	6.56	8.32	f 9.51	9.10	12.45	7.25	1.05	7.22		
456.6	TUNNEL. 2.6	15.0								. 11. 12.	1		
459.2	SYLMAR 2.6	12.4	9.08	6.40	8.21	9.38	8.54	12.29	7.09	12.49	7.06		
461.8	TO SAN FERNANDO	9.8	9.03	6.35	8.16	s 9.33	8.48	12.23	7.03	12.43	7.00		

Time at Glendale, Los Angeles Yard and Los Angeles (LAUPT) for information only. See Los Angeles Division current timetable for train movements between Burbank Jct. and Los Angeles.

9.21

9.15

8.13

8.08

8.03 PM

6.30

6.25

6.20

GLENDALE		8.43	6.10	7.53	8.57					112.2	
LOS ANGELES YARD						8.10 PM	11.40 PM	6.20 AM	12.01 PM	6.15 PM	 
LOS ANGELES (LAUPT)	- 1	8.25 AM	5.50 PM	7.30 PM	8.30 PM						
		Leave Daily	Leave Daily	Leave Daily	Leave Daily	Leave Daily Ex. Sunday	Leave Daily	Leave Daily	Leave Daily	Leave Daily	
Time over District Average Speed per Hour		(2.10) 41.82	(2.48) 32.36	(2.38) 34.40	(3.30) 25.89	(3.14) 28.02	(3.30) 25.89	(3.30) 25.89	(3.30) 25.89	(3.30) 25.89	

RULE 5. Schedule time and train-order time at Burbank Jct. apply at end of double track.

8.2

3.7

0.0

463.4

467.9

471.6

TO

TO

**PACOIMA** 

ROSCOE

BURBANK JCT.

(90.6)

RULES 86 and 93. Second and third-class trains, extra trains and engines must be clear of main track and insulated joints at meeting and passing points for Nos. 51 and 52.

Track south of main track at Ravenna, known as No. 2 track, must be left clear of cars, to be used for meeting or passing trains when instructed by train order.

ADDITIONAL STA	TIONS	
NAME	Mile Post	Capac- ity
Acton(Spur)	426.1	11 P

Train	At :	Receive To (or Beyond)	Discharge From (or Beyond)	Frequency
57, 59 57 59 59 55	San Fernando Palmdale Saugus	Fresno	Glendale	Daily
59 55 55	Lancaster	Any Station	Any Station	Daily

12.20

12.12

8.45

8.37

8.30 PM 7.00

6.52

6.45 AM 12.40

12.32

12.25 PM 6.57

6.48

6.40 PM

No. 51 when requested by RPO clerk reduce speed to 10 MPH or stop at San Fernando, Newhall and Saugus for the safe dispatch of registered coin.

No. 57 reduce speed to 10 MPH at San Fernando to permit mail to be thrown into mail car door.

No. 55 stop at Roscoe and Pacoima for dispatch of U. S. Mail.

8		FRE	SNO S
	EAST- \		WEST- WARD
		Timetable No. 168	
Capacity of sidings	# .	June 2, 1946	non o
in car lengths	Mile Post Location	<b>3</b>	nce f
	물을		Distance from Famoso
		STATIONS	
BKWOTYP	205.5	TO-R FRESNO	104.3
IP	207.0	TO SUNMAID TOWER	102.8
YP	213.0	LOCANS	96.8
27 P	214.5	1.5 IVESTA	95.3
80 P	215.9	CLOTHO	93.9
Yard Limits 93 WP	219.8	TO SANGER	90.0
	228.0	8.2 AT&SFRy Crossing (Stop)	81.8
Yard Limits 89 P	229.9	TO REEDLEY	79.9
Yard Limits 54 WP	235.0	TO DINUBA	74.8
	243.6	AT&SFRy Crossing (Stop)	66.2
25 P	246.4	TAURUSA	63.4
18 P	249.4	TO IVANHOE	60.4
Yard Limits 77 KWYP	257.4	TO-R EXETER	52.4
Yard Limits 124 P	264.3	TO LINDSAY	45.5
38 P	268.6	STRATHMORE	41.2
Yard Limits 48 BKWOYP	274.4	TO-R PORTERVILLE	35.4
72 KP	287.1	TO-R DUCOR	22.7
72 YP	294.9	TO LINDSAY  4.3 STRATHMORE  5.8 TO-R PORTERVILLE  12.7 TO-R DUCOR  7.8 R RICHGROVE  4.1	14.9
25 P	299.0	JASMIN	10.8
KWTP	309.8	TO-R FAMOSO	0.0
		(104.3)	

ADDITIONAL ST	ATIONS	
NAME	Mile Post	Capac- ity
Basic(Spur)	208.7	28
Goldleaf (Spur)	209.9	22
State Center (on spur from Goldleaf)	210.8	8
Butler(Spur)	211.8	8 11
Rusconi(Spur)	221.8	4
Fargo(Spur)	225.3	9 P
Uva(Spur)	227.1	3 ~
Lacjac(Spur)	227.9 239.6	21 P 22 P
Monson		8
Lort(Spur) Burr(Spur)	260.5	4
Vance		10
Vance(Spur)	265.8	11
Zante(Spur)	270.9	13
Lisko(Spur)	272.2	10
Ponca(Spur) Lois(Spur)	276.5	6
Lois(Spur)	278.0	16
Terra Bella	282.6 290.0	26 P 23 P
Orris(Spur)		14
Quality	295.9	20
Zentner(Spur)	302.1	īŏ

		EAST-	Timetable No. 168	WEST- WARD
	Capacity of sidings in car lengths	Mile Post Location	June 2, 1946	Distance from Success
			Success Branch	Stanc
			STATIONS	Ä
	age   BKWOYP	274.4	TO-R PORTERVILLE	8.0
	¥d.1	275.6	AT&SFRy Crossing (Stop)	6.8
	21	280.0	WORTH	2.4
	32	282.4	2.4 SUCCESS	0.0

	EAST-	Timetable No. 168	WEST- WARD
Capacity of sidings in car lengths	ost	June 2, 1946	Distance from Jovista
in car lenguis	Mile Post Location	Richgrove Branch	stanc
		STATIONS	Δ
YP	294.9	R RICHGROVE	4.1
50	297.6	TROCHA	1.4
40	299.0	JOVISTA	0.0
	Y MANAGEMENT	(4.1)	

WARD	Timetable No. 168	WEST- WARD
ost	June 2, 1946	Distance from Exeter
Mile 1 Locat	Visalia Branch	stance fi Exeter
	STATIONS	i i
245.3	TO-R GOSHEN JCT.	17.9
253.1	7.8 VISALIA	10.1
253.2	AT&SFRy Crossing (Stop)	10.0
259.0	FARMERSVILLE	4.2
263.2	TO-R EXETER	0.0
	245.3 253.1 253.2 259.0	Timetable No. 108     June 2, 1946     Visalia Branch     STATIONS     245.3     253.1     253.2     259.0     FARMERSVILLE     266     Control of the con

ADDITIONAL STATIONS		
NAME	Mile Post	Capac- ity
Ambler(Spur)	255.2 257.3	8 P

## FRESNO SUBDIVISION

	EAST- WARD	Timetable No.	WEST WARE
Capacity of sidings in car lengths	Post Jon	June 2, 1946	Distance from Goshen Jet.
	Mile Post Location	Riverdale Branc	tane distance
		STATIONS	Dispos
P	181.9	INGLE	64.6
15	137.2	TRANQUILITY	59.3
37	191.7	SAN JOAQUIN	54.8
34	199.1	TO <b>7.4</b>	47.4
18	206.3	BURRELL	40.2
18	214.7	TO RIVERDALE	31.8
	221.1	6.4 L&WRy Crossing (	Stop) 25.4
	224.2 223.0	HARDWICK	22.3
Yard Limits WYP	229.1	TO-R ARMONA	16.2
I	232.2	HANFORD TOWI	ER 13.1
Yard Limits 70 P	232.5	TO HANFORD	12.8
Yard Limits WYP	245.3	TO-R GOSHEN JCT.	0.0

Trains must not operate on Riverdale Branch between MP 215 and MP 224.2.

ADDITIONAL STATIONS			
NAME	Mile Post	Capac- ity	
Caldwell(Spur) Hub(Spur) Shell(Spur) Remnoy	195.0 219.3 233.9 237.6	 6 5 35	

	EAST-	Timetable No. 168		WEST- WARD
Capacity of sidings in car lengths	Post tion		June 2, 1946	
	Mile Post Location		Stratford Branch	Distance from
			STATIONS	
YP	236.5	R	ROSSI	7.6
47	244.1	то	7.6 STRATFORD	0.0
			(7.6)	

ADDITIONAL STATIONS			
NAME	Mile Post	Capac- ity	
Cuneo(Spur)	239.9	5	

71 1 10.		<u> </u>		
		EAST-	Timetable No.	WEST- WARD
Capacity of sidings in car lengths		June 2, 1946  Togation  Coalinga Branch		ш.
			Coalinga Branc	Armona
			STATIONS	
Yard	Limits BKYP	268.4	TO-R COALINGA	39.1
20	P	266.7	1.7 ORA	37.4
21	P	260.0	6.7 TURK	30.7
44	P	252.7	TO HURON	23.4
53	Р	246.1	WESTHAVEN	16.8
17	YP	236.5	9.6 R <b>ROSS1</b>	7.2
61	P	233.9	TO LEMOORE	4.6
Yard 41	Limits WYP	229.3	TO-R ARMONA	0.0
			(39.1)	

ADDITIONAL STATIONS				
NAME	Mile Post	Capac- ity		
Vanguard(Spur) Heinlen(Spur)	244.0 235.4	140 16		

	EAST- WARD	Timetable No. 168	WEST- WARD
Capacity of sidings in car lengths	Mile Post Location	June 2, 1946	Distance from Friant
	Aile J Locat	Clovis Branch	Fria
		STATIONS	aig.
BKWOTYP I	205.5	TO-R FRESNO	24,4
E I	207.1	FRESNO TOWER	22.8
18	212.9	5.8 Las palmas	17.0
	213.2	0.3 FIRy Crossing (Stop)	16.7
33	214.9	1.7 TARPEY	15.0
24	216.1	1.2 Melvin	13.8
42 W	217.4	TO CLOVIS	12.5
Y	220.9	9.5 PINEDALE	9.0
43	222.9	GORDON	7.0
Yard Limits WT	229.9	TO FRIANT	0.0

ADDITIONAL STATIONS					
NAME Mile Capac-					
Barton. (Spur) Granz. (Spur) Maltermoro. (Spur) Vanris. Glorietta. (Spur) Rockfield. (Spur)	209.4 211.6 211.8 213.9 218.5 225.7	20 45 51 14 70			

10 FRESNO SUBDIVISION				
	EAST- \	Timetable No. 168	WEST- WARD	
Capacity of sidings in car lengths	ost	June 2, 1946	Distance from McKittrick	
an tan longum	Mile Post Location	McKittrick Branch	stance	
		STATIONS	<u> </u>	
Bakersfield yard KIP	313.6	TO-R KERN JCT.	47.0	
15	316.7	3.1 STRADER	43.9	
<b>45</b> P	318.8	WIBLE ORCHARD	41.8	
	320.5	VENOLA	40.1	
20 P	322.6	R GOSFORD	38.0	
47	328.4	STEVENS	32.2	
14	336.1	RIO BRAVO	24.5	
22	346.3	TO BUTTONWILLOW	14.3	
65	350.5	LOKERN 10.1	10.1	
32 Y	360.6	TO McKITTRICK (47.0)	0.0	

m j

ADDITIONAL STATIONS				
NAME	Mile Post	Capac- ity		
Bakersfield Corrals Kilowatt(Spur) Strand	315.3 345.4 331.0	34 P 19		

	EAST- V	Timetable No. 168	WEST- WARD
Capacity of sidings in ear lengths	Mile Post Location	June 2, 1946	Distance from Oil City
		Oil City Branch	stance 0il Ci
		STATIONS	Ž
Bakers- field yd.	308.6	TO-R OIL JCT.	5.1
Ba field	313.7	OIL CITY	0.0
		(5.1)	

ADDITIONAL STATIONS					
NAME	Mile Post	Capac- ity			
Seguro	310.5 311.6	30 14			

Water tanks at: MP 450, MP 484.1 and MP 512.8.

ADDITIONAL STATIONS				
NAME	Mile Post	Capac- ity		
Saltdale	408.5 460.7 509.2	12 13 22		

MOJAVE SUBDIVISION 11							
EAST	WARD					WEST	WARD
	THIRD CLASS	SECOND CLASS		Timetable No. 168	Ħ	THIRD	CLASS
Capacity of sidings	792	790	Mile Post Location	June 2, 1946	Distance from Owenyo	791	
in car lengths	Freight	Freight	Ä	Owenyo Branch	Dist.	Freight	
	Leave Daily Ex. Sunday	Leave Daily		STATIONS		Arrive Daily Ex. Monday	
BKWOYP 52		PM 9.00	380.7	TO-R MOJAVE	143.5	AM 1.50	
52 52		9.04	380.8	1.3 CHAFFEE	142.2	1.40	
54		9.30	392.9	12.1 NEURALIA	130.1	1.05	
25 W		10.00	402.5	CANTIL	120.5	12.35	
19		10.15	407.5	5.0 CENEDA	115.5	12.13 AM	
52		10.30	412.2	GARLOCK	110.8	11.55 PM	
53		10.55	420.5	8.3 RAND	102.5	11.35	
Yard Limits 62 Y	AM 12.01	11.15 PM	428.4	TO-R SEARLES	94.6	11.15	
57	12.35		438.3	9.9 CODE	84.7	9.50	
Yard Limits 54	1.00		447.2	8.9 INYOKERN	75.8	9.30	
27	1.20		456.3	9.1 <b>BROWN</b>	66.7	9.05	
43	1.50		468.3	LITTLE LAKE	54.7	8.25	
32	2.10		475.6	7.3 SYKES	47.4	8.05	
32	2.45		488.5	12.9 <b>LOCO</b>	34.5	7.35	
32	2.55		493.3	0LANCHA	29.7	7.25	
32	3.10		497.7	CARTAGO	25.3	7.15	
58	4.00		518.8	21.1 LONE PINE	4.2	6.15	
Yard Limits 45 BKOY	4.15 AM		523.0	TO-R OWENYO	0.0	6.00 PM	
	Arrive Daily Ex. Sunday	Arrive Daily		(143.5)		Leave Daily Ex. Sunday	
	(4.14) 22.34	(2.15) 21.73		Time over District		(7.50) 18.32	

ADDITIONAL STATIONS				
NAME	Mile Post	Capac- ity		
Mt. Whitney (Spur) Alico (Spur) Dolomite (Spur) Mock (Spur)	563.7 568.7 570.2 571.4	14 6 103 90		

	EAST-	(Narrow Gage)	WEST- WARD
Capacity of sidings in car lengths	Mile Post Location	Timetable No. 168 June 2, 1946	Distance from Keeler
	Loc	Keeler Branch	İstar
		STATIONS	<u> </u>
Yard Limits WOTP	506.8	TO-R LAWS	70.4
20	511.7	8.9 BIGELOW	65.5
14 P	522.7	11.0 ZURICH	54.5
40	525.5	2.8 Monola	51.7
20 WP	536.9 536.2	11.4 ABERDEEN	40.3
14 WP	550.1	13.9 KEARSARGE	26.4
8	555.2	5.1 MANZANAR	21.3
Yard Limits BKOTP	559.8	TO-R OWENYO	16.7
6	572.2	12.4 TRAMWAY	4.3
Yard Limits BKWY	576.5	TO-R KEELER	0.0
		(70.4)	

Look out for drifted sand between MP 573 and MP 575.

RULE 2. Watch inspectors: S. A. Pope, Manager of Time Service...65 Market St., San Francisco Fresno...C. P. Clayton, 215 Pacific Southwest Bldg., 1060 Fulton St. Los Angeles...... Baehr-Bakula Inc., 103 Pacific Electric Bldg. 

RULE 2 (A). Watches subject to inspection must be presented monthly, between first and fifteenth, instead of semi-monthly, to a designated inspector.

RULE 10 (H). Where yellow signals are displayed within limits of a length of track over which a maximum speed is designated in train order or timetable bulletin and no maximum speed is otherwise specified for the particular section of track protected by these yellow signals, trains must not exceed 15 MPH thereover.

RULE 10 (J). Certain slow boards have the word "SIGNAL" above the figures. Such slow boards in approach to a distant signal indicate the speed that must not be exceeded while engine is passing the distant signal three-fourths mile beyond the slow board, unless distant signal can plainly be seen to be displaying proceed indication; and such slow boards in approach to a home signal indicate the speed that must not be exceeded while approaching home signal three-fourths mile beyond the slow board, until indication of home signal can plainly be seen.

RULE 15. Second paragraph is changed to read as follows: "The explosion of two torpedoes is a signal to proceed with caution for not less than one mile."

RULE 17. Mars signal light on engines shall be used when engine is moving at night, and in foggy or stormy weather. It must be dimmed or extinguished approaching passenger stations, and at other points as prescribed by rules.

RULE 19. AT&SFRy trains will use markers with yellow lens instead of green lens and yellow aspect will be considered the same as green aspect.

**RULE 26** is revised to read as follows:

"A blue signal or sign reading 'Men at Work' displayed on engineer's side of cab of an engine or at one or both ends of a car, cut of cars, or at the rear of a train, indicates that workmen are under or about same and the engine, car, cut of cars or train must not be coupled to nor moved by any method, nor other equipment placed so as to obstruct the view of the blue signal or sign.

"Blue signal or sign must not be removed by any person except the one placing the signal or sign, or someone authorized by him to

do so.
"On designated tracks (repair, cleaning, servicing, etc.) where
"In a structure of the structure of t employes work, a sign reading 'Stop-Men at Work' must be placed on the track and switches leading to such track locked; and from sunset to sunrise a blue light must also be displayed. Employes placing such sign and locking switches, only, are authorized to

change same. When repair work is to be done under or about an engine or cars in a train, where movement of same would endanger employes engaged in such work, and a blue signal or sign is not available, the enginemen of engine handling train must be notified by employe engaged in such work and a complete understanding had to prevent movement. After work is completed the same employe must notify enginemen."

RULE S-72. Westward trains are superior to trains of the same class in the opposite direction.

RULE 99. Third, fourth and sixth paragraphs are changed to read as follows:

"If recalled from a point less than one-half mile from rear of his train, he must, if safety to train requires, leave lighted fusee at proper intervals and, if conditions warrant, also place two torpedoes on the rail three rail-lengths apart."

"If not recalled, one-half mile from rear of his train he must place one torpedo on the rail; one mile from rear of train, or when recalled, if one-half mile or more from rear of train, he must place two torpedoes on the rail three rail-lengths apart. If conditions such as curves, foggy or stormy weather or descending grade require, he must continue back a greater distance, placing two additional tor-

"When flagman has reached the required flagging distance and has placed torpedoes as required, he may then return to the single torpedo where he must remain until relieved by another flagman or recalled. When recalled, he may remove the single torpedo and return, leaving lighted fusee at such intervals as conditions warrant."

RULE 99 (C). Will apply on Porterville line, and on all branches.

RULE 102. Should a passenger train break in two, or an emergency application of brakes occur while in motion on the grade between Bakersfield and Burbank Jct., or between Mojave and Inyokern, forward brakeman will immediately go towards rear, close angle cock at opening if train has parted, set hand brakes and turn up retainers on detached portion. After train is coupled air must be

applied from engine before hand brakes and retainers are released.

If necessary to leave detached portion on main track, rear truck of detached portion ascending grade or lead truck of detached portion descending grade must be chained to rail in such manner as to derail car should they start.

RULE 105. Abbreviations used for sidings: "E" for eastward, "W" for westward, "M" for middle.

RULE 210 is modified to provide that when using revised train-order Form CS-2600, which has the words "Repeated and Complete" printed at bottom of the form, operator will write or typewrite the time and his or her last name in the space provided on the order, after it has been made complete by train dispatcher.

RULE 221. First sentence of third paragraph is amended as follows: "When a train order is to be delivered to an approaching train, or orders are held for any other train in the same direction, except those originating, the operator must not clear the signal."

Light will not be displayed in train-order signals on Porterville

line and all branches, except when train-order operator is on duty.

RULE 271 is revised to read as follows:

"Automatic block signals will bear number plates attached to signal masts. Automatic semaphore home signal arms will be painted red and will be distinguished by white stripe near end of semaphore arm. The number plate on a distant light signal will bear the prefix 'D'

Interlocking signals will not bear number plates. "Absolute signals will not bear number plates, but will have

plates bearing the letter 'A'.

"Interlocking and absolute semaphore home signal arms will be painted red.

"Aspects as illustrated or referred to in these rules are shown by the position of semaphore arms or color of lights, or both, as seen from an approaching train. Other combinations may be used."

**RULE 295** is revised to read as follows:

"Interlocking or absolute signals may be made part of the auto-"Interlocking or absolute signals may be made part of the automatic block system adjoining interlocking or centralized traffic control limits. When so arranged they will be designated 'Semi-automatic', and distinguished by a plate bearing the letters 'SA'. Trains stopped by such signals must observe interlocking or centralized traffic control rules within the interlocking or centralized traffic control limits, and Rule 509, 509 (F), or 509 (J), as the case may be, within the automatic portion of the block beyond interlocking or centralized traffic control limits."

RULE 297. Following paragraph is added:
"A train, if delayed in the block, must proceed with caution to the next signal."

RULE 535. SPRING SWITCHES

A spring switch with facing point lock must not be trailed through unless switch target displays the letters "SS" in normal

position, or switch has been lined for the movement.

When a signal with triangular number plate protecting a spring switch with facing point lock displays stop indication, member of crew must open and close spring switch by hand, removing any obstruction. If signal does not then display proceed indication, witch must be heard these for then display proceed indication, switch must be hand thrown for the movement.

When a spring switch or spring derail is hand thrown, trainman so setting same must again set it for normal position after movement has been completed, unless he has arranged for another train-

man to do so.

RULE 536. Wheels of tenders must not be considered as engine wheels.

RULE 605. INTERLOCKING

Trains and engines must not enter main track within interlocking limits where no signal governs such movement until permission has been obtained from signal operator, and must then run with caution not exceeding 12 MPH to the next signal.

#### RULES 705 and 707 are revised to read as follows:

"LETTER TYPE INDICATORS

"705. Within block system limits, at locations specified in timetable, letter type indicators may be used. These indicators will be attached to an automatic block signal, and will display indications by illuminated letters, which will supersede the superiority of trains within defined limits.

"S—Take siding (Fig. 1).

"M—Proceed on main track (Fig. 2).
"Other letters, or combination of letters may be used.
"S-707. When the letter 'M' is displayed, train is thereby given superiority over all trains to the fouling point of the switch at which

an opposing train may enter siding or receiving track, and will hold main track at the station, but must observe any restriction that may be imposed by automatic block or other signals.

"D-707. When the letter 'M' is displayed approaching a siding, or at the initial switch of a siding, train will hold main track; when displayed on a siding near the leaving end of siding, train will enter main track, and in either case train is thereby given superiority over all following trains to the point designated in timetable, but must observe any restriction that may be imposed by automatic block or other signals."

#### GENERAL REGULATIONS

RULE 824. At any point when train crew or engine crew leave the train for any reason, sufficient hand brakes must be set to hold

RULE 825. When crossings are cut distance of 100 feet on each side of crossing must be left clear, or member of crew must protect traffic until cars are recoupled.

RULE 837. Fifth paragraph is revised to read as follows: "Cars standing on grade must not be coupled onto, in descending direction, without knowing sufficient hand brakes are set to prevent uncontrolled movement of any such cars should coupling

fail, or cars not be securely coupled together."

Switching movements from spurs on heavy grades should be accomplished in a manner to make it impossible for cars to run out on main track. Whenever possible engine should be kept on the descending grade end of cars being handled, or switching moves made toward derail. Avoid as far as practicable leaving one car standing alone on grade.

A car must not be handled ahead of engine between stations

on descending grade unless chained to the engine.

RULE 849. Steam valve on Pullman troop sleepers cannot be opened while train is in motion, and when such car is on rear of train steam line must not be cut, in any portion of train, until valve is closed on the car on each side of coupling to be opened, to avoid burning by steam.

#### TRAIN INSPECTION

The maximum distance a freight train may run without stopping for inspection is 125 miles, when in the judgment of conductor and engineer it is safe to do so. Inspection will be made at any intermediate stop.

Trains, including military trains, made up in part of freight cars or caboose equipped with cast iron wheels are required to comply with rules and timetable instructions applying to freight trains as they relate to stopping for train inspection, and speed restrictions.

Cars bearing placards denoting contents are explosive, inflam-

mable, poisonous, or otherwise dangerous, must be given careful inspection at all points where train inspection is made.

Conductors will notify brakemen of heavy loads in their portion of train which require special attention and frequent inspection of journal boxes.

#### AIR BRAKE RULES

RULE 17. Speed of freight trains will be reduced or stopped if necessary at points where trainmen are required to handle re-

#### FREIGHT TRAINS

RULE 25. Before a train which has stopped on grade is given signal to proceed, air gage in caboose must be observed. If gage indicates brake pipe unobstructed and registers a pressure of not less than 65 pounds, proceed signal may be given.

#### PASSENGER TRAINS

RULE 46. When streamline trains are controlled on descending grade with electro-pneumatic brake, retainers will not be used.

Electro-pneumatic brake must not be used on Streamliner San Joaquin, and train wire connector between engine and head car must not be applied.

**MISCELLANEOUS** 

1. When necessary for freight trains of over 50 cars to make a short move to reach water or oil column, including that required to spot second engine of double header, engine must be cut off to spot at column.

4. Helper service:

No helper engine will be placed behind wooden underframe cars or cabooses.

Engines weighing more than 235,000 pounds on drivers will not be placed behind steel underframe cabooses.

In no case will more than one helper engine be placed behind

steel underframe cabooses.

Not more than one AC, AM or MM class engine may be placed

on head end of any freight train.

One helper may be placed on head end of trains handled by other class engine, but not more than two engines will be used on head end of any freight train. When additional helpers are required, they will be placed back in train and cut in ahead of any cars of wooden frame construction.

Air will be cut in on all helper engines, and engine must not be

cut off when train is in motion.

When used as helpers in rear of train, AC, AM or MM class engines must not be coupled together, nor may more than two F, Mt, or heavier class, or more than three smaller classes be coupled together. If tonnage requires more power, additional helpers of not to exceed two coupled in each case, must be separated by at least

The use of SP class engines backing in helper service, should be avoided if possible. When necessary to use them, other helper power must not be used to shove on this class of engine.

Class

Helpers must not be operated backing except in emergency, and in such case engines should not push through a backing engine if it can be avoided.

On grades road engine and helper must not be cut off from train at the same time without hand brakes being securely set.

Engines with cars must not be cut off or coupled to a train while same is in motion.

Engines must not be cut off head end of trains while same are in

When helper engine is coupled behind caboose, angle cocks must not be turned and hose separated while train is in motion.

4 (a). Pushing trains out of yards: No engine will be placed behind wooden underframe cabooses

or other wooden frame equipment.

Engines weighing more than 235,000 pounds on drivers will not be placed behind steel underframe cabooses.

Air will not be coupled through pusher engine. Yard engines regularly so used will be equipped with Russell-Jordan device to hold the coupler pin from dropping, thus making it unnecessary for employes to uncouple the pusher engine when cutting off.

In no case shall the knuckle be removed, or closed, or cutting lever temporarily fastened in release position on a pusher engine, as

means of preventing coupling being made.

Unless local conditions require, it will not be necessary to stop

trains to detach pusher engines.

7. Capacity of sidings between clearance points is based on an average car length of 49 feet not including engines and caboose.

10. Engines having blind drivers must not exceed 6 MPH over switches having self-guarded frogs and switch-point protectors, and such engines must not operate between Fresno and Famoso via Goshen Jct., nor east of Mojave.

When a sign reading "Occupied Outfit Cars" is attached to

switch lock, the outfit cars must not be coupled to, nor moved, until occupants have been notified, and permission given by foreman or

his representative.

20. Handling of freight cars in trains behind passenger cars is prohibited, except that passenger equipment may be placed in head end of mixed trains when carrying military personnel and equipment. This does not refer to a baggage, express, or mail car, or a caboose.

21. Employes are warned that it is dangerous to ride on top or

sides of cars where impaired side clearance exists.

There are numerous structures with impaired clearance on yard and station tracks on the division, and employes must be familiar with their locations and avoid personal injury.

#### SPEED RESTRICTIONS

\*List of CCB (cross counter-balanced) engines:

All P-8 class, except eng. 2470; F-1 class: 3611, 3612, 3615, 3616, 3617, 3619, 3620, 3625, 3629, 3634, 3636, 3638, 3643, 3647, 3652; F-3 class: 3653, 3654, 3655, 3656, 3657, 3658, 3660, 3661, 3662,

3663, 3664, 3665, 3666, 3667; F-4 class: 3668, 3670, 3671, 3672, 3674, 3675, 3676, 3677, 3678, 3679, 3681, 3682, 3683, 3684, 3685, 3686, 3687, 3688, 3689, 3690, 3692, 3693, 3695, 3696, 3697, 3698, 3699, 3701, 3702, 3703, 3704, 3705, 3706, 3707, 3709, 3711, 3715, 3716, 3717; F-5 class: 3718, 3720, 3721, 3722, 3723, 3727, 3728, 3732, 3734, 3737, 3748, 3752, 3752, 3752, 3752, 3752, 3753, 3764, 3767, 3767, 3767, 3768, 3767, 3768, 3767, 3768, 3767, 3768, 3663, 3664, 3665, 3666, 3667;

3737, 3742, 3752, 3753, 3755, 3760, 3762, 3763, 3764, 3765, 3766, 3767,

3768, 3769;

AC-6 class: 4126, 4127, 4128, 4130, 4131, 4132, 4133, 4135, 4136, 4137, 4138, 4139, 4140, 4141, 4142, 4143, 4144, 4146, 4147, 4148, 4149, 4150.

### MAXIMUM SPEED PERMITTED CERTAIN ENGINES:

Maximum speed for C-15-17-32, Mk-10-11 and MM-3 class engines

35 MPH when handling freight and mixed trains.

Maximum speed for S and SE class engines 20 MPH, but must not exceed speed permitted freight and mixed trains and light engines.

Maximum speed for gas-electric cars running light forward, 50 MPH, but must not exceed speed permitted when handling passen-

ger trains.

Engines backing must not exceed 20 MPH on all curves, and

when approaching road crossings at grade.

Engines coupled tender to tender must not exceed speed permitted same engines running light backward.

Engines with tenders having water capacity of 7,000 gallons or less, except classes 70-R-1 and 70-SC-1, must not exceed 50 MPH.

Diesel-electric switch engines running forward, with train or light, may make maximum speed as shown below, except must not exceed speed permitted freight and mixed trains. These engines when backing may make speed shown below, except must not exceed speed permitted E class engines backing where such permitted speed is less than 30 MPH: Running Forward Running Backward With train Light with train or light

Class	VV		mgni	COLUMN TO SERVICE SERV	E 0.00	N. T. S. LEW
DES-200DES 1 to 7, 100 to 107		30 40	30 40	30 40		
Following AT&SFRy			t not exc	eed speed	show	n be-
ing fammand in (	3 13 TT 6	PIDCC OT C	ervice:			MPH
Nos. 909 to 999, and 1 Nos. 702 to 707, 797 t 1950 to 1991, and	0 81	3, 1674 to	1705,		35	MPH
1900 to 1991, and	. 012	1	6-11	- candition		nnina
Maximum speed of en under own steam, or haul	on in				3, I U	mme
Tithon all motors no	e ne	en renno	ved from	any one		BATOTI
pair of drivers When all weight has			and from	only one	20	MPH
wheel from any	nair	or urive			30	MPH
When ending triick i	s rei	moveu				MPH MPH
When main rod only	is re	emovea			30	MPE
When side rod only When both main and	rs re Is ide	e rods ar	e remove	d	20	MPE
When hauled in trai	n wi	th all ro	ls on		30	MPE
MAXIMUM	SPE	CED PER	MITTEI	WITH		N/TOT
		IN EQUI				MPE
Trains handling woo	oden	pile-driv	ers; loco	motive cra	ines	
with boom disc steam shovels at	nnn:	ected an	o neavv	ena rorw	aru,	
wheels; and car	iiu u. -ton	ditchers	when blo	ocking and	tie-	
down cables are	e rer	noved:				
On tangent mai	n tro	ocks exce	ept	• • • • • • • •	• • • •	35 25
SPMW 4044		tnoolea		•••••		20
SPMW 4044 On tangent bra On all curves Where slow	5 Mi	PH less	than spe	ed authori	zed.	
Where slow	boar	ds in pl	ace, 5 1	IPH less	han	
shown on slo cated is 15 MF	w be	oards, ex	cept whe	ere speed i	ndı-	
cated is 15 MF	'H 01	less be g	overnea	boom die	con-	
Trains handling loo			noc with			
	t en	tive cra d forwar	nes with	not be han	dled	
in this manner	ezce	nt in em	nes with d (must ergency)	iot be nan	uivu	
in this manner	ezce	nt in em	nes with d (must ergency)	iot be nan	uivu	
in this manner	ezce	nt in em	nes with d (must ergency)	iot be nan	uivu	
in this manner	ezce	nt in em	nes with d (must ergency)	iot be nan	uivu	
in this manner On tangent mai On curves and o Trains handling loc either end for	exce n tra on br omo ward	nt in em	nes with d (must ergency)	iot be nan	uivu	20 15
in this manner On tangent mai On curves and o Trains handling loc either end fory when practicab On tangent mai	exce n tra on br omo ward le):	pt in emoacks ranch tractive cran (to be	nes with d (must ergency) cks les with handled	boom in pi	lace,	20 15 25
in this manner On tangent mai On curves and of Trains handling loc either end forwhen practicab On tangent mai	exce n tra on bro omo ward le):	pt in emo acks ranch tractive cran (to be acks	nes with d (must sergency) cks es with handled	boom in p	lace,	20 15 25 15
in this manner On tangent mai On curves and of Trains handling loc either end forwhen practicab On tangent mai On curves and of Trains handling ste	exce n tra on bromo ward le): n tra on broel p	pt in emo acks ranch tractive cran (to be acks	nes with d (must sergency) cks es with handled	boom in p	lace,	20 15 25 15
in this manner On tangent mai On curves and of Trains handling loc either end forwhen practicab On tangent mai On curves and of Trains handling ste	exce n tra on bromo ward le): in tra on broed p	pt in emo acks ranch tractive cran (to be acks	nes with d (must: ergency) cks nes with handled cks rs may n	boom in p in work t	lace,	20 15 25 15
in this manner On tangent mai On curves and of Trains handling loc either end for when practicab. On tangent mai On curves and of Trains handling ste freight train sp Trains handling re	excentration browned the combination of the combination browned peed.	pt in eme acks ranch tractive cran (to be acks ranch tra- vile-driver	nes with d (must; ergency)eks es with handled cks rs may n	boom in p in work t	lace, rain	20 15 25 15
in this manner On tangent mai On curves and of Trains handling loc either end for when practicab. On tangent mai On curves and of Trains handling ste freight train sp Trains handling re	excentration browned the combination of the combination browned peed.	pt in eme acks ranch tra- tive cran (to be acks ranch tra- bile-driver	nes with d (must; ergency)eks es with handled cks rs may n	boom in p in work t	lace, rain	20 15 25 15
in this manner On tangent mai On curves and of Trains handling loc either end forwhen practicab On tangent mai On curves and of Trains handling ste freight train sp Trains handling rel On tangent mai On tangent bra On Clovis, I	exce n transfer on broward le): n transfer of cel peed. ief (in transfer on broward le): n transfer on broward le): n transfer of cel peed. ief (in transfer on broward le): n transfer on broward le): n transfer of cel peed. It is transfer of cel peed. It	pt in eme acks ranch tractive cran (to be acks ranch tractile-driver outfit wit acks tracks, e	nes with d (must: ergency)eks es with handled cks rs may n th steam xcept palinga, 1	boom in p in work t make maxin derrick:	lace, rain  num	20 15 25 15 35 25
in this manner On tangent mai On curves and of Trains handling loc either end forwither end forwither end forwither end forwither end for tangent mai On curves and of Trains handling steffield train sp Trains handling rel On tangent mai On tangent bra On Clovis, F Arvin Brance (Relief outfit	exce n transfer on broward le): in transfer on browel eed. ief of transfer on	pt in emacks canch tractive cran   (to be acks canch tracile-driver outfit wit acks tracks, e cdale, Co	nes with d (must ergency) cks tes with handled cks rs may n th steam .xcept alinga, 1 .25 must	boom in pin work to hake maxin derrick:  McKittrick not be oper	lace, crain  num	20 15 25 15 35 25 20
in this manner On tangent mai On curves and of Trains handling loc either end forwhen practicab On tangent mai On curves and of Trains handling ste freight train sp Trains handling rel On tangent mai On tangent bra On Clovis, I Arvin Branch (Relief outfitt	exceen transfer on broward le): n transfer on browerd. Lief of the contraction of the con	pt in emergence of the contract of the cranch trace cranch trace cranch trace cranch trace coutfit with acks tracks, endale, Contract coutfit coutfit cracks, endale, Contract cracks, endale, c	nes with d (must ergency) cks es with handled cks rs may n th steam xcept palinga,	boom in p in work t make maxin derrick: McKittrick	lace, rain  num	20 15 25 15 35 25 20
in this manner On tangent mai On curves and of Trains handling loc either end forwhen practicab On tangent mai On curves and of Trains handling ste freight train sp Trains handling rel On tangent mai On tangent bra On Clovis, I Arvin Branch (Relief outfitt	exceen transfer on broward le): n transfer on browerd. Lief of the contraction of the con	pt in emergence of the contract of the cranch trace cranch trace cranch trace cranch trace coutfit with acks tracks, endale, Contract coutfit coutfit cracks, endale, Contract cracks, endale, c	nes with d (must ergency) cks es with handled cks rs may n th steam xcept palinga,	boom in p in work t make maxin derrick: McKittrick	lace, rain  num	20 15 25 15 35 25 20
in this manner On tangent mai On curves and of Trains handling loc either end forwhen practicab On tangent mai On curves and of Trains handling ste freight train sp Trains handling rel On tangent mai On tangent bra On Clovis, F Arvin Brancl (Relief outfit on any branc branch between	exce n transported to the como ward le): n transported to ief (in transported in	pt in em- acks canch tractive cran (to be acks canch trachile-driver acks tracks, e crale, Co 14 and 70 cept may Mojave a IPH less	nes with d (must ergency) cks es with handled cks rs may n th steam valinga, l 25 must be opera and Sear	boom in pin work to hake maximake maximake maximake.  McKittrick mot be openated on Owles.)	lace, rain	20 15 25 15 35 25 20
in this manner On tangent mai On curves and of Trains handling loc either end forwhen practicab On tangent mai On curves and of Trains handling ste freight train sp Trains handling rel On tangent mai On tangent bra On Clovis, I Arvin Branch (Relief outfitt	temeexceen trace of the common trace of the co	pt in emerged to war eacks	nes with d (must ergency) cks tes with handled cks rs may n th steam 225 must be opera and Sear than sp lace, 5	boom in pin work to hake maxin derrick:  McKittrick not be operated on Owles.)  eed author MPH less ere speed	lace, rain and and cated enyo	20 15 25 15 35 25 20

Passenger trains handling steel wheel box cars in series 5810 to 5874, and foreign line steel wheel box cars equipped for movement in passenger trains, but not equipped with high speed trucks, must not exceed 60 MPH.

Wooden equipment must not be handled in regular passenger

Extra passenger trains handling wooden coaches or chair cars must not exceed 40 MPH.

Maximum speed of deadhead equipment or passenger trains with standard caboose is 50 MPH.

Trains consisting of engine and caboose only restricted to freight train speed.

RULE 10 (J). Round yellow slow boards indicate by black figures the speed restrictions applying to Nos. 51 and 52 when handling streamlined cars only, with GS, P-7-10-12, or P-8 (except eng. 2470) class engines.

RULE 14 (d). As specified below, — — — o will be indication that flagman may return from west as prescribed by Rule 99:

Fresno..... Trains on Pratton line. Famoso.....Trains on Porterville line.
Ducor.....Trains on AT&SFRy.
Exeter.....Trains on Visalia Branch.
Goshen Jct....Trains on Riverdale Branch.

RULE 14 (e). As specified below. — — — dication that flagman may return from east as prescribed by Rule 99:
Fresno......Trains on Porterville line and Clovis Branch.
Porterville.....Trains on Success Branch.

Rossi......Trains on Stratford Branch. Goshen Jct..... Trains on Visalia Branch. Ingle..... Trains on Riverdale Branch. Richgrove....Trains on Richgrove Branch.

RULE 21 (C). In Bakersfield and Fresno indicators must be displayed to relief track.

RULE 82 (A). Trains to or from Western Division at Ingle must obtain two clearances; one endorsed "San Joaquin Division" and one endorsed "Western Division".

Eastward trains originating and westward trains terminating Fresno Yard are not required to obtain clearance at Fresno.

Westward trains originating may obtain train orders and check register at Kern Jct. instead of Bakersfield, and need not obtain clearance or check register at Bakersfield.

RULE 83. Identification may be made by trains between Fresno and Calwa Tower to be applied at end of double track, and eastward trains except first-class may identify westward trains except first-class between Fresno Yard and Fresno to be applied at end of double track. Trains approaching each other between these stations must reduce speed sufficiently to permit identification, and Rule 14 (k) will apply.

RULE 83 (A). At the following stations only the trains indicated will register:

Fresno Yard... Trains originating or terminating. Fresno..... Trains originating or terminating. Oil Jct.....Trains originating or terminating.
Famoso.....Trains to or from Porterville line.
Goshen Jct....Trains to or from Visalia and Riverdale

Branches, and extra trains originating or terminating.

Operator Fresno will report arrival and departure of all trains originating or terminating at Fresno to operator Fresno Yard who

will enter on register and verify by repeating registration.

Operator Bakersfield will report arrival and departure of all regular trains originating or terminating on Fresno Subdivision to operator Kern Jct. who will enter on register and verify by repeating registration.

RULE 83 (B). At open train-order offices trains may register by ticket as follows:

Bakersfield.....No. 51 and eastward first-class trains except No. 56.

Famoso......Trains to or from Porterville line.

RULE 93. Yard limits in which the provisions of Rule 93 will apply are established at the following stations:

West MP	The state of the s	East MP
206.32	Fresno (Pratton-Bakersfield line)	210.79
208.44	" (Biola-Porterville line)	208.15
199.07	" (Merced-Clovis line)	209.60
219.34	Selma	221.61
224.72	Kingsburg	226.41
238.47	Goshen Jct	240.18
244.60	" (Hanford-Visalia line)	246.08
249.22	Tulare	250.82
280.01	Delano	281.55
307.66	Bakersfield	321.09
	" (McKittrick Branch)	315.67
219.01	Sanger	220.47
229.09	Reedley	230.78
234.31	Dinuba	235.72
256.33	Exeter	257.96
262.09	" (Visalia Branch)	
263.40	Lindsay	265.00
274.28	Porterville	275.72
	" (Success Branch)	275.97
228.83	Armona	229.57
229.83	" (Coalinga Branch)	AND THE STREET
231.72	Hanford	233.12
251.83	Visalia	254.05
	Coalinga	267.82
228.54	Friant	

Trains or engines will not move against current of traffic on double track, except on authority of yardmaster. When making movements against current of traffic, trains or engines must be preceded by flagman over railway and street crossings at grade where wigwags installed, protecting crossings during movements, except where crossing watchman located.

Trains must receive proceed signal from yardman, green flag by day and green light by night, between Tulare St. (east of passenger

station) and Merced St. (west of passenger station).
Westward trains via Pratton line must receive signal from yard-

man at Divisadero St., green flag by day and green light by night.

When Signal 2046 on Pratton line, or Signal 2042 on eastward track displays stop indication train must stop, and after proceed signal received from yardman, green flag by day and green light by night, may then proceed as prescribed by Rules 509 (F) and 513.

RULE 98. Railroad crossings at grade not interlocked: AT&SFRy, MP 228.04 east of Lacjac. STOP. AT&SFRy, MP 243.61 west of Taurusa. STOP. Yellow reflector buttons on "One Mile" slow boards, and red reflector buttons on Stop boards approaching above crossings serve

as warning signals and do not require application of Rules 10 (G) or 10 (H).

AT&SFRy, MP 253.21 east of Visalia. STOP and send flagman ahead who must ascertain that no movement is approaching on inter-L&WRy, MP 221.01 east of Hub. STOP.
AT&SFRy, MP 275.66 east of Porterville, on Success Branch.

STOP

BULL Bull. Will apply on believes between Carea in

FIRy, MP 213.23 east of Las Palmas. STOP.

RULE 103 (A). Trains and engines must stop and member of crew must protect traffic while moving over following streets and highways:

Selma..... Highway US 99, on Grant-Pacific rock spur.

making reverse movement. meet or be passed by a train, traffic must be protected by flagman.

quickly as possible.

RULE 104. The normal position of switches at the end of double track and at junctions is as follows:

Fresno Yard......End double track, for eastward track. Fresno......Pratton line, for eastward track. Famoso......Porterville line, for Tulare line.

Oil Jct... Oil City Branch, for siding.
Oil Jct... AT&SFRy, for Tulare line.
Armona... Riverdale Branch, for Coalinga Branch.
Rossi... Stratford Branch, for siding.

Ingle ... Riverdale Branch, for siding.
Exeter ... Visalia Branch, for siding.
Exeter ... VERy, for Porterville line.

Porterville...... Success Branch, for Porterville line.

Porterville AT&SFRy, for Success Branch.

Ducor AT&SFRy, for siding.

Richgrove Branch, for siding. Gosford......McKittrick Branch, for Sunset Ry.

DERAILS IN MAIN TRACK:

Goshen Jct.....On Visalia Branch, 250 feet east of junction switch.

Porterville...... On Success Branch, 310 feet east of junc-

tion switch. ..... MP 268.7. Coalinga.

McKittrick..... East wye switch is spring switch and serves as derail.

RULE 105. Goshen Jct. Siding No. 1 is first track north of Tulare line main track and is assigned for use by westward trains. Siding No. 2 is second track north of Tulare line main track and

is assigned for use by eastward trains.
Siding No. 3 is track south of Tulare line main track, extending between MP 239.1 and MP 239.7 and may be used by trains in either

direction. Famoso. First track north of Goshen Jct.-Bakersfield main

track, between junction switch (Signal 2929) and Signals 2916-3087 is designated as Porterville line main track, and will be used by trains in both directions on Porterville line, and as a siding for east-ward trains on Goshen Jct.-Bakersfield line, and is not protected by block signals. Trains from Porterville line will stop to clear crossover at Signals 2916-3087 and if track is seen to be clear, may proceed with caution not exceeding 12 MPH to junction switch. Trains to Porterville line will proceed with caution not exceeding 12 MPH from junction switch to crossover, Signals 2916-3087. Normal position of inside switch of crossover, Signals 2916-3087 will be for movement to Porterville line.

Track south of Goshen Jct.-Bakersfield main track is designated as westward siding and assigned for use by westward trains on Bakersfield-Goshen Jct. line.

RULE 221. Westward trains are not required to obtain clearance at Calwa Tower.

RULE D-251. Will apply on both tracks between Calwa Tower and Fresno Yard.

RULE 505. AUTOMATIC BLOCK SYSTEM

Fresno: Track between Tuolumne St. and Ventura Ave. not

protected by block signals.

Famoso: Trains on Porterville line stopped by Signal 3102 must line junction switch to Tulare line before applying block signal rules

to proceed.

Bakersfield: Eastward passenger trains may pass dwarf Signal 3132 displaying stop indication without stopping when necessary to clear Baker St. crossing. Enginemen must see that switches are in proper position immediately east of signal and must move with caution.

RULE 516. Overlap posts: Cross.....Westward trains, opposite fouling point east switch.

RULE 535. Spring switches not equipped with facing point locks are located as follows, and speed indicated must not be exceeded while passing over them in facing movement, or in trailing through them:

Normal Position MPH Location Fresno. Junction switch, Clovis Branch. Drill track......10

Switch position indicator at the above spring switch does not indicate track occupancy. When indicator displays red aspect, or is not lighted, careful examination of switch must be made before passing over same in eastward direction.

Switch position indicator at spring switch leading from back lead to inbound engine track Bakersfield, does not indicate track occupancy. When indicator displays red aspect, or is not lighted, careful examination of switch must be made before passing over

same in eastward direction.

There are other spring switches on roundhouse leads and yard tracks in Fresno and Bakersfield yard limits.

#### **RULE 605.** INTERLOCKING

Biola Jct. Limits extend on Merced line from 675 feet west of junction switch, and on Biola line from 575 feet west of junction switch, to 930 feet east of junction switch on Merced line, and to dwarf signal 290 feet east of junction switch on No. 1 drill track.

Trains and engines stopped by signals will call signal operator at train-order office Fresno Yard by telephone and be governed by his instructions. Telephones and instructions for hand operation of dual control switches are located in battery house at junction switch and at derail on Biola line.

Dwarf signal on 7½-foot mast on No. 1 drill track will display green aspect for movement to Merced line, yellow aspect for move-

ment to Biola line.

Fresno Tower-AT&SFRy Crossing. Whistle signals:

For main track, -

To or from spur track, o -

Sunmaid Tower—AT&SFRy Crossing. Whistle signals:

For main track,

Calwa Tower-AT&SFRy Crossing, and end double track. Whistle signals:

Eastward trains, — o —.

Westward trains, -

To or from Cotton Compress spur, o - o.

Hanford Tower-AT&SFRy Crossing, MP 232.2 west of Hanford. Whistle signals:

For main track,

Tulare Tower—AT&SFRy Crossing. Whistle signals:

For main track, -..

#### **GENERAL REGULATIONS**

RULE 869. Forward brakeman will ride on top of freight trains entering and leaving terminals and through interlockings. From McKittrick to Lokern rear brakeman will watch track to

rear of train for evidence of derailment or equipment dragging, instead of riding on top of train.

#### RULE 827. TRAIN INSPECTION

All passenger trains, except Regular Nos. 55 and 56, must stop at Tulare, approaching at not to exceed 8 MPH to allow forward brakeman to detrain on station side where rear of train will stop. Brakeman will then make rolling inspection of train, then walk length of train on opposite side making standing inspection, giving careful attention to running gear and journal boxes, and entrain on station side.

Between Bakersfield and Fresno freight trains may operate from one water stop to another for inspection, when in the judgment of conductor and engineer it is safe to do so, except that westward trains handling loaded oil cars must stop at some point between Famoso and Delano (inclusive) for inspection. Speed of 30 MPH must not be exceeded from point where loaded oil cars are picked up to first inspection stop.

#### AIR BRAKE RULES

RULE 17. Retaining valves will be turned up on freight trains as follows:

McKittrick to Lokern..... One valve for each 115 Ms.

#### FREIGHT TRAINS

RULE 25. Rear end test on McKittrick Branch must be made in accordance with paragraph (c).

PASSENGER TRAINS

RULE 39. Leaving Bakersfield, running test must not be made until rear car has cleared Baker St.

#### **MISCELLANEOUS**

10. Engines listed must not operate on tracks shown below: Class of Engine **Restricted Tracks** 

Mk-F-AC-AM-MM-Mt-GS-SP.Traver—Corral track. F-AM-MM-Mt-GS-SP..... Vinland—Spur. F-AM-MM-Mt-GS-SP..... Bakersfield—Tracks 8, 9, 10, 11, 12.

All...... Glorietta—Spur, beyond road cross-

ing. All.....Bakersfield—May switch McCarthy
Tank spur only during daylight hours, and cars and engines must

stop before entering their building.

Flat cars loaded with poles or piling must not be spotted on team track adjacent to main track at Octol, Ivesta, Lois, Terra Bella, Fargo, Butler or Taurusa without authority from chief train dispatcher who will protect by train order. At other stations such loads must not be spotted for unloading on team tracks adjacent to main track when possible to avoid it.

Load limit (car and contents): Fresno-Famoso (via Exeter).....210,000 pounds. Success, Richgrove, Visalia, Clovis, Riverdale, Stratford, Coalinga, McKittrick and Oil City Branches.....210,000 pounds.

Flood lights over Highway US 99 across Cotton Compress spur, Calwa, and over highway crossing spur track west of Jensen Ave., Fresno, are operated from switches located in box on power pole on main track side of highway. When these crossings are to be used trainman must close floodlight switch before cars foul the highway, and open the switch after completing use of the track.

30. Employes operating over AT&SFRy and FIRy tracks will governed by current book of rules, timetable and bulletins of AT&SFRv.

LOCATION OF OVERHEAD AND SIDE STRUCTURES NOT STANDARD CLEARANCE ON MAIN TRACK AND SIDINGS MP Location Description

West of Lort.....Kaweah River bridge—Side

#### SPEED RESTRICTIONS

The following maximum speed will apply to Nos. 51 and 52 with all streamlined equipment when handled by GS, Mt, or P-7-10-12, or P-8 (except eng. 2470) class engines:

GS and P

		Class Mt Clas
MP 210 and Oil Jct, except		75 70
Over AT&SFRy crossing	, Tulare Tower	40 40

The following head-end cars will be considered streamlined equipment: 4119, 5065 to 5070, 5123 to 5125, 5127 to 5138, 5161 to 5163, 6083, 6085.

No. 446 (VME), No. 447 (VMW) and No. 402 (BM) may make maximum speed of 50 MPH using ordinary box cars, in territory where maximum freight and mixed train speed is shown as 40 MPH.

S and SE class engines must not exceed 12 MPH along or across any street in Fresno city limits.

	Vith Caution ot Exceeding MPH
Through sidings, yard and other side tracks, crossover turnouts and slip switches, except	10
On wye and packing house tracks at Locans On spur leading from Pinedale, on curves On spur leading from Pinedale, on tangents	6 10

SPEED RESTRICTIONS: Maximum speed of Passenger trains must not exceed 50 MPH and Freight and Mixed trains 35 MPH except as otherwise provided for herein, or by

Maximum speed of any train with an engine not shown in Speed Restriction table, 35 MPH, and is further restricted to maximum speed shown for Freight and Mixed trains if less than 35 MPH.

					VITH TR	PASSENG	RUNNII F R	G FORWARD			LIGH	T ENGIN	E RUNNING FO	RWARD		BACKING
Page No.	TERRITORY	P-8 (if CCB*) P-7-10- 12 GS Mt	E A P-1-3-4 5-6-11 P-8 (if not CCB*)	T -26 -32 -37 -40	AC-4-5- 7-8-9- 10-11- 12 AC-6 (if	T-1-8-9-23-28- 31-36-57-58 Mk-5-6-7-8-9 F (if CCB*)	м	C-2-4-5-8-9- 10-18-19-26- 27-28-29 Mk-2-4, TW F (if not CCB*) AC-1-2-3-6 (if not CCB*)	C-15-17- 32 Mk-10-11 MM-3		E P A Mt GS	T-26- 32-37- 40 F (if CCB*)	M T-1-8-9-23-28- 31-36-57-58 G-2-4-5-8-9-10- 18-19-26-27- 28-29 Mk-5-8-7-8-9 F (if not CCB*) SP	10-11 AC AM-2	OR E Mk	AM-2 MM-3 Gas-
2, 3	Biola JctMP 210, except Fresno Yard, eastward trains through turnout	40	40	40	40	40	40	40	35	30	40	35	35	30	30	25
	*Fresno, along or across street crossings Interlocking limits, Calwa Tower	0.5	25 20 35	25 20 35	25 20 35	25 20 35	25 20 35	25 20 35	25 20 35	25 20 30	25 12 35	25 12 35	25 12 35	25 12 30	25 12 30	25 12 25
	MP 210-Oil Jct., except  *MP 214.48-MP 215.57, Fowler, 6 AM-9 PM  *MP 214.48-MP 215.57, Fowler, 9 PM-6 AM  *MP 290 04 MP 291 20 Salver, 9 PM-6 AM	65 45	65 45	60 45	50 45	50 45	40 40	40 40	35 <b>3</b> 5	40 30 40	40 30 40	35 30 35	35 30 35	30 30 30	30 30 30 30	25 25 25 25
	*MP 220.04-MP 221.30, Selma, 5 AM-11 PM *MP 225.17-MP 226.01, Kingsburg, 6 AM-9 PM *MP 225.17-MP 226.01, Kingsburg, 9 PM-6 AM Over AT&SFRy crossing, Tulare Tower *MP 249.21-MP 250.73, Tulare, 5 AM-11 PM *MP 249.21-MP 250.73, Tulare, 11 PM-5 AM *MP 279.16-MP 281.45, Delano, 6 AM-6 PM	45 45 45 40 20 25 40	45 45 45 40 20 25 40	45 45 45 40 20 25 40	45 45 45 40 20 25 40	45 45 45 40 20 25 40	40 40 40 40 20 25 40	40 40 40 40 20 25 40	35 35 35 35 20 25 35	40 30 40 40 20 25 30	40 30 40 40 20 25	35 30 35 35 20 25	35 30 35 35 20 25	30 30 30 30 20 25	30 30 30 30 20 25	25 25 25 25 20 25
8	Oil JctMP 311.  MP 311-Bakersfield, except Entering street crossings in Bakersfield.  Fresno-Famoso, via Sanger, except On curves at MP 218.54 and MP 218.74.  *MP 229.16-MP 230.66, Reedley, 5 AM-11 PM *MP 256.80-MP 257.89, Exeter, 5 AM-11 PM *MP 263.42-MP 264.84, Lindsay, 5 AM-11 PM On curve west of Orris.	50 35 20 40 35 20 20 20	50 35 20 40 35 20 20 20	50 35 20 40 35 20 20 20	50 35 20 40 35 20 20 20	50 35 20 40 35 20 20 20	40 35 20 40 35 20 20 20	40 35 20 40 35 20 20 20	35 35 20 35 35 20 20 20 20	30 20 20 20 30 30 20 20 20	20 20 20 30 20 20 20 20 20 20	20 20 20 20 30 20 20 20 20 20	30 20 20 20 30 20 20 20 20 20	20 20 20 20 30 20 20 20 20 20	20 20 20 20 20 20 20 20 20 20 20 20 20	25 20 20 20 20 20 20 20 20 20 20

<sup>\*</sup>At Fowler, Selma, Kingsburg, and Delano, speed may be resumed after engine has passed last crossing within city limits in direction train is moving.

	SPEED RESTR	RICTIONS—B	RANCHES	
Maximum speed	d of passenger, f	reight and mixe	ed trains is as	shown below:

Page No.	TERRITORY	PASSENGER	FREIGHT AND MIXED	LIGHT ENGINE RUNNING FORWARD	ENGINE BACKING	SWITCH ENGINE S-SE CLASS
8	Porterville-Success, except	15	15	15	15	15
	r on on ves		$\overline{12}$	1 12	12	12
	Richgrove-Jovista, except	25	25	25	15	20
	i On our ves		15	15	15	15
	GOSDEN JCLExeter except	40	30	30	15	20
	Un curves at Goshen Jct. and Ambler	30	20	20	15	20
9	*MP 251.87-MP 253.92, City limits, Visalia	15	15	15	15	$\overline{15}$
y	Armona-Coalinga, except	25 20	25	25	15	20
	MIF 449.40, OVER Lake St. Armone	90 1	20	20	15	20
	1 11ai uwick-Cosnen Jet.	95 1	25	25	15	20
	Ingle-Hardwick	20	20	20	15	20
	Rossi-Stratford	25	25	25	12	20
AND THE	Fresno-Gordon, except	25	25	25	15	20
	On curves at Barton and Maltermoro.	20	20	20	15	15
	Over Fresno Interurban tracks, Las Palmas	15	15	15	15	15
0	Gordon-Friant	20	20	20	15	15
	Kern JctMcKittrick	25	25	25	15	20
	Oil JetOil City.	10	10	10	10	10

<sup>\*</sup>Regulated by city ordinance.

#### RATING OF ENGINES—In Ms of 1000 lbs. Back of Tender.

NOMINAL CLASS	ENGINE NUMBERS	Bakersfield and Fresno via Goshen Jct.	Famoso and Fresno Via Exelor	Friant to Fresno	Fresno to Friant Goshen Jct. and Exeter Richgrove and Jovista Oil Jct. and Oil City	Bakersfield to McKittrick	Goalings to Armona Rossi and Stratford Ingle and Goshen Jct. Porterville and Success McKittrick to Bakersfield	Armona to Coalinga	
DES-1,2,3,4,5,6,7 DES-100 to 107 E-23 M-4 M-6, 8 M-9, 11 M-11	1000 to 1022. 1300 to 1395. 1500 and 1502. 1617 to 1713. 1721 to 1803, 1823 to 1825. 1804 to 1822, 1826 to 1831 and 1836. 1832 to 1835.	2500 3600 3100 4150 4850 5100 5300	2450 3300 3800 4050 4200	1910 2250 2350	2300 2700 2900	1070 1280	3600 4300 4500	2450 2900 3100	enio Baselare
T-1 T-8, 9 T-23 T-26 T-28, 31 T-32, 40 T-36 T-37 T-57, 58	2242 to 2271 2161, 2174 and 2178 2301 to 2310 2283 to 2299 2311 to 2362 2363 to 2384 2103 2105 and 2106 2385 and 2386	3450 2500 5050 4450 5550 5700 3750 5050 4450	2700 1950 4000 3500 4400 4500 2950 4000 3500	1600 2350 2600 	2000 2900 3200 	900	3150	2100	
P-1, 3, 5 P-1 P-4 P-6 P-7 P-8, 10 P-8, 10 P-11 P-12	(2408, 2411 to 2413, 2416 to 2418, 2423, 2425 to 2435,) (2437 to 2452, 2459 and 2460 2400, 2403 to 2407 and 2415 2401, 2402, 2409, 2410, 2414, 2419, 2420, 2422, 2424 and 2436 2453, 2454 and 2458. 2476 and 2477. 2461 to 2474, 2478 to 2483. 2475, 2484 to 2491. 3100 to 3109. 3120 to 3129.	4600 4800 5000 5650 6000 6250 6250 4900 6600	3600 3750 3950 4450 4750  3850	2100 2200 2300 	2550 2700 2800				
C-5, 8, 9, 10, 26 to 29 C-15, 32 C-17 C-18 C-19 TW-1 TW-2, 3 TW-4, 6 TW-8	2513 to 2599, 2624 to 2860, 3440 to 3469. 2500, 2505 to 2507. 2510 and 2511. 3400 to 3409. 3410 to 3426. 2900 to 2913. 2932 to 2952. 2926 to 2931 and 2957. 2914 to 2923.	6100 3900 4800 5600 5850 4650 3750 3550 5150	4800 3100 3800 4450 4650 3700 2950 2800 4050	2200 1750 1650 2400	2700 2150 2040 2950	 1250 975 900 1350	4150 3350 3175 4550	2800 2250 2150	
A-3 A-6 Mk-2, 4 Mk-5, 6 Mk-7, 8, 9 Mk-10 Mk-11	3029. 3025, 3036, 3052 and 3057. 3000 to 3003. 3201 to 3240. 3241 to 3277. 3300 to 3324. 3295. 3297 and 3298.	3600 3600 4400 6900 7800 8550 6550 6300	2800 2850 3450 5400 6200 6750 5200 5000		Constant		(2.35) Services Services Services Services Services Services		18222 1802 1832 1833 1833 1833 1833 1833 1833 183
F-1 F-3 F-4, 5 AM-2 MM-3 AC-1, 2, 3 AC-4, 5 AC-6 to 12	3600 to 3652. 3653 to 3667. 3668 to 3769. 3900 to 3911. 3930 and 3931. 4000 to 4048. 4100 to 4125. 3800 to 3811, 4126 to 4294.	8900 10200 10200 10150 11800 12300 16000 17000	e bos se attack li borracis et likit base of l b 2000 la				existati ko koeli maren exemplesa existati ko existati koeli eki ki koeli ekizanan (18)		AND MARKET STATE OF THE STATE O
Mt-1, 3, 4, 5 Mt-2 GS-1, 2 GS-3, 4, 5, 6 SP-1, 2, 3	4300 to 4376. 4385 to 4390. 4400 to 4415. 4416 to 4469. 5000 to 5048.	8350 8800 9000 9200 12000		3 V 3	M Je	cKittrick t. and M	6 may ope	etween Ke	rn
Allowance for Empty and Underloaded Cars	(Less than 45 Ms	6 3 0	6 3 0						i i i i i i i i i i i i i i i i i i i

ENGINES FOR WHICH NO RATING IS SHOWN IN THE RATING OF ENGINES TABLE WILL NOT BE PERMITTED TO OPERATE IN THAT TERRITORY UNLESS AUTHORIZED BY SUPERINTENDENT.

## SPECIAL INSTRUCTIONS—TEHACHAPI SUBDIVISION

RULE 3. Conductors on eastward AT&SFRy trains show on reverse side of register ticket left at Kern Jct. watch comparison made at AT&SFRy station Bakersfield, also comparison with engineers.

RULE 14 (e). As specified below — — — — — will be indication that flagman may return from east as prescribed by Rule 99:
Magunden......Trains on Arvin Branch.
Mojave......Trains on Owenyo Branch.

RULE 21 (C). In Bakersfield indicators must be displayed to relief track.

RULE 82 (A). Trains will not be required to obtain clearance at Kern Jct. and Bakersfield, except trains originating, or receiving orders at these stations.

RULE 83 (A). Operator Kern Jct. will report arrival and departure of AT&SFRy first-class trains to SP operator Bakersfield, who will enter on register and verify by repeating registration.

Operator Kern Jct. will report arrival and departure of all scheduled trains to AT&SFRy operator Bakersfield, who will enter on SP register and verify by repeating registration.

RULE 83 (B). At open train-order offices trains may register by ticket as follows:

Bakersfield..No. 51, and eastward first-class trains except No. 56. Kern Jct....AT&SFRy trains, SP first-class trains and west-ward light engines.

Mojave . . . . All trains not required to stop for other reasons.

RULE 93. Yard limits in which the provisions of Rule 93 will apply, except within C.T.C. limits, are established at the following stations:

West MP		East MP
307.66	Bakersfield	321.09
	(Arvin Branch)	317.02
328.09	Arvin	Ŭ <b>-1.0</b>
358.97	Tenachapi	362.62
367.72	Lilio	368.97
378.87	Mojave	382.43
	" (Owenyo Branch)	381.60

Mojave: First-class trains are authorized to move between Signals 3802 and 3817 by block signal indications which will supersede the superiority of trains, but must move with caution and see that switches are properly lined between these points. If Signal 3802 displays stop indication, train must stop, and if proceed signal received from yardman, green flag by day and green light by night, may then proceed with caution, not exceeding 12 MPH to next signal.

Eastward trains except first-class may pass Signal 3802 displaying stop indication if flashing white light also displayed on signal mast, moving with caution, not exceeding 12 MPH.

Following whistle signals will be sounded by eastward trains approaching Mojave:

SP passenger trains —, freight trains o — o, light engines

AT&SFRy passenger trains — o, freight trains — o —, light engines o — —.

RULE D-97 (A). Applies between Kern Jct. and Bena, and between Tehachapi and Mojave.

Extra trains originating Eric and Summit will respect run late and other non-restrictive orders held.

principalities de caldidatara sent

RULE 104. The normal position of switches at the end of double track and at junctions, is as follows:

Magunden ..... Arvin Branch, for eastward track.

Mojave ..... End of double track, for westward track.

Mojave ..... Owenyo Branch, for westward track.

RULE D-251. Will apply on westward track, Bena to Kern Jct. Authority may be conferred by train dispatcher by message, or by telephone, to conductor or engineer of an inferior train to run ahead of an overdue first-class train on eastward track Kern Jct. to Bena, or on either track between Tehachapi and Mojave.

#### RULE 505. AUTOMATIC BLOCK SYSTEM

Warren: Siding is within block system limits. When dwarf signal at either end of siding indicates "stop", trains entering siding must be preceded by flagman.

RULE 510. The following block signals equipped with triangular number plate displaying the letter "P" have included in their control limits some special protective device:

Eastward Signal		Protection	Westward Signal
P-3546) P-3556)	Slide detector i		and 15 P-3557

#### RULE 535. SPRING SWITCHES

Spring switches not equipped with facing point locks are located as follows, and speed indicated must not be exceeded while passing over them in facing movement, or in trailing through them:

Location	The Committee of the Co	M	IPH .
	Normal Position	Facing	Trailing
Bena	. West end siding Westward track	. 25	10
Canonie	Westend westword siding Fost-ward siding		15
Camente	Cast and eastword eiding West-word -111-		îš
Bealville	. West end westward siding . Eastward siding	. 15	15
Marcel	East end eastward siding . Westward siding . West end westward siding . Eastward siding .	. 15	15
Marcel	East end westward siding Eastward siding Westward siding Westward siding	. 15	15
			15
Summit	East end siding Eastward track .	. 15 . 25	15 10

Switch position indicator at spring switch leading from back lead to inbound engine track Bakersfield, does not indicate track occupancy. When indicator displays red aspect, or is not lighted, careful examination of switch must be made before passing over same in eastward direction.

There are other spring switches on roundhouse leads and yard tracks in Bakersfield and Mojave yard limits.

#### **RULE 605.** INTERLOCKING

Kern Jct. Tower—AT&SFRy junction switch, McKittrick Branch junction switch, and end of double track. Whistle signals:

For main track, —. To or from McKittrick Branch, — o —. From SP to AT&SFRy main track, o ---Between main track and transfer track, o — o.

To or from No. 1 track, o o — o.

Westward dwarf light signals at end of double track display green aspect for movement to SP single track, and yellow aspect for movement to AT&SFRy westward track, or to SP No. 1 track.

Eastward dwarf signal at west interlocking limit displays green aspect for movement to eastward track, and yellow aspect for move-

ment against current of traffic to westward track.

At Kern Jct. only, Rule 628 is modified to permit movement without stopping, of helper cuts only, past interlocking signals displaying stop indication, provided yellow signal is received from signal operator from towards and operator from towards. nal operator from tower or on ground, and helper engineer sees that switches are properly lined for movement to be made.

#### RULE 705. LETTER TYPE INDICATORS

Indicators lo Illuminated Letter	On	s follows: Approaching	Authorizes and requires movement as follows:
S	D-3262	Bena	Proceed to C.T.C. limit. Enter siding. Enter westward track and proceed to Bakersfield.

Train on siding Bena must not enter westward track until letter "M" on dwarf signal 3273 is illuminated.

#### RULE 760. CENTRALIZED TRAFFIC CONTROL SYSTEM Limits extend from end of double track Bena to end of double

track Tehachapi.

Eastward trains stopped by absolute signal at Bena may recall flagman when flashing white light displayed on signal, and prepare to start when signal clears.

Signal line between MP 325.2 and MP 340.5 carries 2300 volts, and if blown down or knocked down must not be touched, but dispatcher must be notified immediately.

Eastward and westward signals on siding at middle crossovers at Rowen have call-on unit which, when flashing yellow authorizes a train on siding, after stopping, to proceed on siding beyond crossover switches without securing telephone permission from dispatcher, but must expect to find a preceding train at any point on

Controlled siding at Tehachapi extends from west switch to fouling point just west of end of double track.

No. 2 siding at Tehachapi is not a controlled siding, but has an electric lock on east switch which must be released by signal operator at Tehachapi before it can be hand-thrown.

Westward absolute signal on westward track at entrance to C.T.C. at Tehachapi has call-on unit which, when flashing yellow authorizes a train, after stopping, to pass signal without securing telephone permission from dispatcher, provided train is to enter No. 2 siding, or is to move through switch to No. 2 siding in order to enter No. 3 track, but must expect to find a preceding or opposing train on either track at any point.

Electric locks on switches at east and west end of house track Caliente; on switch to spur at Rowen; and on west switch of house track at Tehachapi, must be released by dispatcher before they can be hand-thrown. Instructions for operation of electric locks are posted inside of lock-box doors.

Westward absolute signal at east end of Caliente has call-on unit which may display flashing yellow light authorizing train to pass signal when making switching moves into house track after electric lock has been released and switches properly lined.

RULE 763. Revised to read as follows:

"Train indicators, signals and markers must be displayed through centralized traffic control limits. Rule S-17, Fig. 7 of Rule 19, and Rule 19 (A) will not apply on controlled sidings."

ing form made also through indepthelings; been bring in Women and America to Alman, and at ether places as reason could be confinite Delivers (Impac and Majave in Doth directions were swine incommon at me discretion of commonter may be permitted to the to other of

#### **GENERAL REGULATIONS**

RULE 824. Instructions for setting hand brakes:

Mojave: On passenger trains, if road engine is to be detached set two brakes on east end and two brakes on west end for each 16 cars or fraction thereof. When train is set out to tie up, at least half of the brakes must be set, but never less than two.

On eastward freight trains of 72 cars or less set 10 brakes on east end and 10 in the middle. On trains of 73 cars or more set 15

brakes on east end and 15 in the middle.

On westward freight trains of 72 cars or less set 10 brakes on east end, five in the middle and five on west end. On trains of 73 cars or more set 15 brakes on east end, 10 in the middle and five on west end.

Caliente and Woodford when taking water: On eastward freight trains first helper will spot for water and if road engine is to be detached five brakes must be set ahead of this helper, five behind road

engine and five ahead of second helper.

At points where hand brakes must be set on freight trains such brakes must be securely set, using standard brake club to set staff brakes, after train has stopped. When necessary to release hand brakes to move portion of the cars, the same number must be set on remaining cars to replace them.

RULE 825. Portable rail skids are hung on posts at lower end of sidings at:

Bena Bealville Woodford Cable
Ilmon Cliff Walong Tehachapi
Caliente Rowen Marcel Summit
Allard

When necessary to leave cars on any of these sidings permission must first be obtained from chief train dispatcher, after which rail skid must be placed on rail and leading wheel of first car in descending direction run onto the rail skid, and hand brakes set if brakes are operative, before engine is detached. Trains picking up cars from these sidings must remove rail skid and return it to proper post and lock it in place with switch lock.

RULE 869. All except rear swing, and rear brakeman will ride on top of train near middle of their portion, entering and leaving terminals and through interlockings; also Summit to Mojave, and Summit to Ilmon, and at other places as instructed by conductor. Between Ilmon and Mojave in both directions rear swing brakeman, at the discretion of conductor may be permitted to ride in cupola of caboose or on portion of train assigned to him. Rear brakeman will watch track to rear of train for evidence of derailment or equipment dragging, between these two stations.

RULE 873. Engines must not be blown out while passing C.T.C. relay shelters.

Engines with side blow-off cocks must not be blown out between MP 374 and MP 376.

RULE 883. Light engines must be left on No. 3 track at Tehachapi while crews are eating.

#### RULE 827. TRAIN INSPECTION

Trains handled by Diesel-electric engines with four units of dynamic brakes working, handling not to exceed 6,000 Ms Tehachapi to Caliente, or 5,000 Ms Summit to Mojave, need not use retainers, and need not stop for inspection. Engineer must have made at least one trip with AT&SFRy Road Foreman of Engines and have been instructed in handling train under these conditions. Conductor will advise dispatcher from Mojave or Kern Jct. if train is to be so operated.

Other freight trains may make continuous run Tehachapi to Woodford; or Cable to Rowen; or Marcel or Walong to Cliff; and succeeding run to Caliente where retainers must be turned down and running inspection made after stopping. Before making continuous run Cable to Rowen train must stop at Cable five minutes or more, and before making continuous run Marcel or Walong to Cliff train must stop at Marcel or Walong 10 minutes or more. After making continuous run Tehachapi to Woodford train must stop at Woodford 10 minutes; and after making continuous run Cable to Rowen must stop at Rowen 10 minutes; and after making continuous run Marcel or Walong to Cliff must stop at Cliff 10 minutes.

Trains of all passenger equipment and caboose may make continuous run Tehachapi to Bakersfield, provided retainers are not

used on caboose.

All passenger trains, except regular No. 56, must stop at Mojave, approaching at not to exceed 8 MPH to allow forward brakeman to detrain on station side where rear of train will stop. Brakeman will then make rolling inspection of train, then walk length of train on opposite side making standing inspection, giving careful attention to running gear and journal boxes, and entrain on station side.

Westward light engines equipped with tire coolers, except AC class, are not required to stop for inspection between Tehachapi and Caliente. AC class and engines not equipped with tire coolers must stop sufficient length of time at some point between Cable and

Bealville for one inspection.

#### AIR BRAKE RULES

RULE 17. Retainers will be used on passenger trains as follows:

All retainers will be turned up on eastward trains Cameron to Mojave, and on westward trains Tehachapi to MP 337.1, except that when Nos. 51 and 52 have not to exceed three head end cars, and other trains have not to exceed two head end cars, all accessible retainers will be used, unless more are requested by engineer.

Retainers on head end cars on any eastward train may be turned

up at Tehachapi or Summit instead of Cameron.

Retainers will be used on freight trains as follows:

One valve for each 100 Ms in train on eastward trains Cameron to Mojave and on westward trains Tehachapi to Caliente, except those trains handled by Diesel-electric engines as provided in instructions under Rule 827.

Westward freight trains will turn up retainers at west end of Tehachapi if not required to stop before entrance to C.T.C. System.

If not sufficient cars in train to make an average of 100 Ms per retainer Cameron to Mojave, or Tehachapi to Caliente, all retainers in train will be turned up.

Eastward freight trains may turn up retainers at Summit instead of Cameron, but if train brakes have been applied after retainers were turned up, speed of 20 MPH must not be exceeded Summit to one mile east of Cameron.

Retainers must not be turned down on eastward freight trains

entering Mojave until train stops on designated track.

If all retainers in train not already required, three additional retainers must be used for each helper engine in train on descending grade.

#### FREIGHT TRAINS

RULE 25. Rear end test will be made in accordance with Rule 25 (b); and in addition will be made by all trains that stop at Summit and Mojave; and by westward trains that stop at Eric.

Trains not required to stop at Summit must make running air brake test between siding switches, unless rear end test has been made at Tehachapi, Monolith or Eric. Trainmen will note reduction on caboose gage, and following build up in pressure when brakes are released, give proceed signal. Running test will be made as follows: Engineer, while working steam will make reduction of approximately seven pounds, wait for slack to adjust itself, then add three pounds before releasing.

RULE 33. The maximum tonnage per operative brake Tehachapi to Caliente and Cameron to Mojave is 125 Ms.

#### PASSENGER TRAINS

RULE 39. Running test must be made at Summit, except that if road test as prescribed by Rule 38, and running test have been made at or after leaving Tehachapi on eastward trains running test will not be required at Summit on those trains.

#### MISCELLANEOUS

- 1. Water supply at Bealville is for emergency use only.
- 4. Eastward freight trains stopped on siding at Summit will. after cutting out helpers, move to east end of siding promptly.
  - 10. Engines listed must not operate on tracks shown below: Class of Engine **Restricted Tracks**

F-AM-MM-Mt-GS-SP. Bakersfield-Tracks 8, 9, 10, 11, 12. 

east and west end of Cement plant.

Flat cars loaded with poles or piling must not be spotted on team track adjacent to main track at Warren or Cameron without authority from chief train dispatcher who will protect by train order. At other stations such loads must not be spotted for unloading on team tracks adjacent to main track when possible to avoid it.

Load limit (car and contents) Arvin Branch......200,000 pounds.

23. Westward trains entering middle siding at Warren or Monolith must line switches in the following order: Westward main track switch first; inside switch next; then derail. After train is in siding, switches must be lined in the following order: Westward main track switch first; derail next; then inside switch.

#### SPEED RESTRICTIONS

SPEED RESTRICTIONS FOR OTHER THAN MAIN TRACKS

With Caution Not Exceeding MPH

Through sidings, yard and other side tracks, crossovers, turnouts and slip switches, except..... 10 Trains and light engines, with engine running forward, entering, leaving and passing through controlled sidings.....

SPEED RESTRICTIONS: Maximum speed of Passenger trains must not exceed 50 MPH and Freight and Mixed trains 35 MPH except as otherwise provided for herein, or by bulletin, train order or fixed signal.

Maximum speed of any train with an engine not shown in Speed Restriction table, 35 MPH, and is further restricted to maximum speed shown for Freight and Mixed trains if less than 35 MPH.

					WITH TRAI	N-ENGINE R	UNNING FO	DRWARD			LIGHT I	ENGINE	RUNNING FOR	WARD	VARD ENGINE WITH	
						ASSENGE	R				100		M T-1-8-9-23-28-			LIGHT
Page No.	TERRITORY	P-8 (if CCB*) P-7-10- 12 GS Mt	E A P-1-3-4- 5-6-11 P-8 (if not CCB*) AT&SFRy: Mt; Diesel- Elec.	T -26 -32 -37 -40	CCB*) AT&SFRy: 3160-3287:	T-1-8-9-23-28- 31-36-57-58 Mk-5-67-8-9 F (if CCB*) SP Gas-elec. cars	M AM-2 AT&SFRy: 3800 series	C-2-4-5-8-9- 10-18-19-26- 27-28-29 Mk-2-4, TW F (if not CGB*) AC-1-2-3-6 (if not CCB*)	C-15-17- 32 Mk-10-11 MM-3	FREIGHT AND MIXED	E P A Mt GS AT&SFRy: Mt; Diesel- Elec.	T-28 32-37- 40 F (if CCB*)	31-36-57-58 C-2-4-5-8-9-10- 18-19-26-27- 28-29 Mk-5-6-7-8-9 F (if not CCB*) SP AT&SFRy: 3160-3287: 3800, 4000 & 4100 series	17-32 TW Mk-2-4-	E Mk A F T Mt P GS C SP	MM-3 Gas-ele
4, 5	Bakersfield-MP 314.6, except Entering street crossings in Bakersfield . AT&SFRy trains and westward SP trains	35 20	35 20	35 20	35 20	35 20	35 20	35 20	35 20	20 20	20 20	20 20	20 20	20 20	20 20	20 20
	thru Kern Jct. interlocking	10 55 40 50 35	10 55 40 50	10 55 40 50	10 50 40 50	10 50 40 50	10 40 40 40 40	10 40 40 40 40	10 35 35 35 35	10 40 40 40 40	10 40 40 40 40	10 35 35 35 35	10 35 35 35 35	10 30 30 30 30	10 30 30 30 30	10 25 25 25 25 25
	MP 327.96-MP 331  MP 331-End double track Tehachapi, except Eastward, west switch Tehachapi to end double track	50 25 50	50 25 50	50 25 50	50 25 50	50 25 50	40 25 40	40 25 40	35 25 35	35 20 35	40 25 35	35 25	35 20 35	30 20 30	30 15	25 15 25
	End double track Tehachapi-MP 371.4, except	50 25	50 25	50 25	50 25	50 25	40 25	40 25	35 25	35 20	35 25	35 25	35 25	30 25	30 25	25 25 25
	MP 371.4-MP 380.0, except	30 45	30 45	30 45	30 45	30 45	30 40	30 40	30 35	20	25 	25 	25	25 	20	20
	Mojave to MP 371.4	 55	55	 55	50	50	40	40	35	35 	30	30 	30	30 	30	20
	MP 371.4	40 30	40 30	40 30	40 30	40 30	40 30	40 30	35 30	20	20	 20	20	20	20	<u>2</u> 0
	track, Mojave	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15

	SPEED RESTRICTIO  Maximum speed of passenger, freight ar			hown below	And the second	
Page No.	TERRITORY	PASSENGER	FREIGHT AND MIXED	LIGHT ENGINE RUNNING FORWARD	ENGINE BACKING	SWITCH ENGINE S-SE CLASS
4	Magunden-Arvin, except	25 15	25 15	25 15	25 15	20 15

## RATING OF ENGINES—In Ms of 1000 lbs. Back of Tender.

NOMINAL CLASS	ENGINE NUMBERS	Bakersfield to Mojave	Mojave to Bakersfield	Magunden and Arvin					
DES-1, 2, 3, 4, 5, 6, 7 DES-100 to 107 E-23 M-4 M-6, 8 M-9, 11 M-11	1000 to 1022. 1300 to 1395. 1500 and 1502. 1617 to 1713. 1721 to 1803, 1823 to 1825. 1804 to 1822, 1826 to 1831 and 1836. 1832 to 1835.	350 600 380 580 700 760 780	350 600 470 680 820 890 910	2300 2700 2900					
T-1 T-8, 9 T-23 T-26 T-28, 31 T-32, 40 T-36 T-37 T-57, 58	2242 to 2271 2161, 2174 and 2178 2301 to 2310 2283 to 2299 2311 to 2362 2363 to 2384 2103 2105 and 2106 2385 and 2386	470 320 730 610 820 860 560 740 650	560 390 850 730 950 990 660 870 750	2000 2900 3200 					
P-1, 3, 5 P-1 P-4 P-6 P-7 P-8, 10 P-8, 10 P-11 P-12	(2408, 2411 to 2413, 2416 to 2418, 2423, 2425 to 2435,) 2437 to 2452, 2459 and 2460 2400, 2403 to 2407 and 2415 2401, 2402, 2409, 2410, 2414, 2419, 2420, 2422, 2424 and 2436 2453, 2454 and 2458. 2476 and 2477. 2461 to 2474, 2478 to 2483. 2475, 2484 to 2491. 3100 to 3109. 3120 to 3129.	630 630 690 810 860 830 830 660 900	740 750 800 940 1000 980 980 970 1050	2550 2700 2800 	Maria de la companya				23
C-5, 8, 9, 10, 26 to 29 C-15, 32 C-17 C-18 C-19 TW-1 TW-2, 3 TW-4, 6 TW-8	2513 to 2599, 2624 to 2860, 3440 to 3469. 2500, 2505 to 2507. 2510 and 2511. 3400 to 3409. 3410 to 3426. 2900 to 2913. 2932 to 2952. 2926 to 2931 and 2957. 2914 to 2923.	900 590 750 870 890 700 540 500 770	1050 690 880 1000 1050 820 640 600 911	2700 2150 2040 2950				.2012	30 120
A-3 A-6 Mk-2, 4 Mk-5, 6 Mk-7, 8, 9 Mk-10 Mk-11	3029. 3025, 3036, 3052 and 3057. 3000 to 3003. 3201 to 3240. 3241 to 3277. 3300 to 3324. 3295. 3297 and 3298.	430 450 600 1050 1200 1300 1000 980	520 530 690 1200 1350 1500 1200 1150			71 has a second			33 **** 33 **** 
F-1 F-3 F-4, 5 AM-2 MM-3 AC-1, 2, 3 AC-4, 5 AC-6 to 12	3600 to 3652 3653 to 3667 3668 to 3769 3900 to 3911 3930 and 3931 4000 to 4048 4100 to 4125 3800 to 3811, 4126 to 4294	1350 1500 1500 1500 1750 1900 2500 2700	1550 1750 1750 1800 2050 2200 2900 3100				138 (000)(0) 0008 0008 0018		
Mt-1, 3, 4, 5 Mt-2 GS-1, 2 GS-3, 4, 5, 6 SP-1, 2, 3	4300 to 4376. 4385 to 4390. 4400 to 4415. 4416 to 4469. 5000 to 5048.	1200 1200 1200 1250 1800	1350 1400 1400 1450 2100						
Allowance for Empty and Underloaded Cars	(Less than 45 Ms. 45 Ms to 55 Ms. (More than 55 Ms.	3 3 0	3 3 0						

ENGINES FOR WHICH NO RATING IS SHOWN IN THE RATING OF ENGINES TABLE WILL NOT BE PERMITTED TO OPERATE IN THAT TERRITORY UNLESS AUTHORIZED BY SUPERINTENDENT.

— will be in-RULE 14 (e). As specified below, dication that flagman may return from east as prescribed by Rule 99: Mojave.....Trains on Owenyo Branch.

RULE 21 (B). Does not apply on Keeler Branch.

RULE 82(A). If no operator on duty trains originating may

leave Searles or Owenyo without obtaining clearance.
First-class trains and trains handling passenger equipment only, will obtain train-orders and check register at Mojave, and need not

obtain clearance or check register at East-Mojave.

Eastward trains (except first-class trains, trains handling passenger equipment only, and trains to Owenyo Branch) will obtain train-orders and check register at East-Mojave instead of Mojave and need not obtain clearance or check register at Mojave. Westward trains need not obtain clearance at East-Mojave.

Westward trains to Mojave Subdivision must obtain two clearances at initial station on Los Angeles Division, one endorsed "Los Angeles Division," and one endorsed "San Joaquin Division."

Trains to or from Mojave Subdivision, except trains originating, are not required to obtain clearance at Burbank Jct., provided train

is properly cleared by train-order signal.

Eastward trains with running orders terminating at Burbank Jct. may proceed beyond that station without clearance, being governed by train-order signal.

Eastward trains are authorized to assume corresponding schedule on Los Angeles Division from Burbank Jct. to terminal station of schedule.

RULE 83(A). At the following stations, only the trains indicated will register:

Saugus......Trains originating or terminating.

RULE 83 (B). At open train-order offices trains may register by ticket as follows:

Mojave..... All trains not required to stop for other reasons.

When a regular train or section of schedule is checked on register at Los Angeles LAUPT it will not be necessary to obtain check of the same train at Burbank Jct.

RULE 93. Yard limits in which the provisions of Rule 93 will apply are established at the following stations:

West MP	**************************************	East MP
378.87	Mojave	382.43
0.0.0	" (Owenyo Branch)	381.60
404.50	Lancaster	405.94
419.88	Vincent	420.93
449.37	Saugus	451.64
448.17	" (Santa Paula Branch)	
460.87	San Fernando	462.10
427.68	Searles	429.05
446.58	Inyokern	447.75
522.26	Owenyo	523.26
559.30	" (Keeler Branch)	560.45
574.79	Keeler	
0	Laws	507.49

Yard limit board located to left of track: Eastward at Burbank Jet. at MP 471.20.

Mojave: First-class trains are authorized to move between Signals 3802 and 3817 by block signal indications which will supersede the superiority of trains, but must move with caution, and see that switches are properly lined between these points. If Signal 3817 displays stop indication first-class trains must stop, and if proceed signal received from yardman, green flag by day and green light by night, may then proceed with caution, not exceeding 12 MPH to next

Trains enroute to AT&SFRy may pass Signal 3814 displaying stop indication, without stopping, provided switches are properly lined, and proceed signal received from yardman, yellow flag by day and yellow light by night, moving with caution not exceeding 12 MPH to end of block in AT&SFRy main track at derail.

Trains from AT&SFRy may pass Signal 3815 to enter SP main track or to enter yard track if signal displays stop indication, without stepping provided switches are properly lined and proceed signal displays to the signal displays top indication.

out stopping, provided switches are properly lined and proceed signal received from yardman, yellow flag by day and yellow light by night, moving with caution not exceeding 12 MPH within limits of the signal.

Trains from AT&SFRy via A&P track will be governed by indications in AT&SFRy Signal 8173 near crossover leading to SP main

track.

Eastward SP and AT&SFRy trains on yard tracks must not start until they have received oral instructions or proceed signal from yardman, and in addition track signals must be given at night.

Following whistle signals will be sounded by westward trains approaching Mojave:

SP passenger trains —, freight trains o — o, light engines

AT&SFRy passenger trains — o, freight trains — o —, light engines o — —.

RULE 95. Eastward trains holding train-order authority to display signals for following section to Burbank Jct. are authorized to display signals to terminal station of schedule on Los Angeles Division.

RULE 104. The normal position of switches at the end of double track and at junctions is as follows:

Mojave.... End of double track, for westward track. Mojave.... Owenyo Branch, for westward track.

Mojave.... AT&SFRy, for SP main track.

Saugus.... Santa Paula Branch, for westward siding.

Searles.... Trona Ry, for No. 1 track.

DERAILS IN MAIN TRACK:

Mojave.....230 feet east of junction switch on Owenyo Branch.

RULE 105. Saugus: Westward siding extends from MP 451.5 to connection with main track just west of Signal 4505, and is assigned for use by westward trains.

Westward trains on westward siding will be governed by Signal 4505, and if this signal displays stop indication permission must be obtained from train-order operator before applying block signal rules for movement through the block.

Eastward siding is first track north of main track and is west of station building, and is assigned for use by eastward trains, but may also be used by trains and engines when necessary to do switching on corral or house track.

Trains or engines must not foul westward siding from east end of Bunnell storage track until telephone permission is received from

. ACC OF CART PART); . ACC DOCUMENTS

train-order operator.

#### RULE 505. AUTOMATIC BLOCK SYSTEM

Saugus: Eastward siding is within block system limits. When dwarf signal at fouling point at west end of eastward siding displays stop indication, eastward trains entering siding must be preceded by flagman.

Burbank Jct.: Trains stopped by Signal 4704 must call trainorder operator and be governed by his instructions, before applying block signal rules to proceed.

Searles: Signals 4277 and 4268 east and west of Tunnel 29. Knife switches in relay boxes on these signals are for use of track-car operators. Track cars must stop before entering tunnel, and if signal displays proceed indication switch should be thrown to reverse position which will cause opposing signal to display stop indication. After passing through tunnel switch at that signal must be thrown to reverse position to clear signals.

#### PUSH BUTTONS

Push buttons and lights in box at west end siding Harold, and at east end siding Ravenna, Russ and Lang. Train occupying main track to let train on siding pass may clear signal on siding by pressing button corresponding to number of signal on siding. Train on siding to let train on main track pass should not pass Approach Circuit sign, but if necessary to do so should press button corresponding to number of signal on main track. Instructions for operation of push buttons posted inside of box.

RULE 510. The following block signals equipped with triangular number plate displaying the letter "P" have included in their control limits some special protective device:

Eastwar Signal	d Protection	Vestward Signal
P-3938 P-4046	Spring switch, west end siding, Rosamond Spring switch, west end siding, Lancaster	
P-4156	Spring switch, west end siding, Harold	\$P-4155 \$P-4157
P-4248 P-4288	Spring switch, east end siding, Harold	P-4167 P-4257
P-4296 P-4298	Spring switch, east end siding, Ravenna	
P-4338	Spring switch, west end siding, and slide detector fence middle of siding, Russ	
P-4346) P-4348) P-4382	Spring switch, east end siding, Russ, and slide detector fence at MP 435.  Spring switch, east end siding, and slide detector fence middle of siding, Russ.  Slide detector fence at MP 435.  Spring switch, west end siding, Lang	P-4347 P-4365
P-4392\ P-4394\	Spring switch, east end siding, Lang	The second second
P-4426	Spring switch, west end siding, Humphreys	100
P-4434\ P-4436\	Spring switch, east end siding, Humphreys	P-4435
P-4466 P-4610	Spring switch, west end siding, Honby Spring switch, east end siding, Honby Spring switch, east end siding, Newhall	P-4475 P-4541

ed capal actioned to provide the comment of the capality of the capality was the capality w

Principal particular security and constant security and principal manages.

While is a principal manages and constant security and security manages.

While is a principal manages are constant manages.

#### RULE 535. SPRING SWITCHES

Spring switches equipped with facing point locks are located as follows, and speed indicated must not be exceeded while trailing through them:

Location	Normal Position	MPH	
Rosamondwest end sid	ingMain track	10	
Lancasterwest end sid	ingMain track	10	
Harold west end sid		10	
Harold east end sidi		10	
Pariswest end sid		10	
Pariseast end sidi		10	
Ravenna west end sid		10	1000
Ravenna east end sidi		10	
Russ west end sid		10	
Russeast end sid		10	12,45
Lang west end sid	ing Main track	10	
Lang east end sidi	ng Main track	10	
Humphreys west end sid	ing Main track	10	100
Humphreys east end sidi		10	
Honbywest end sid		10	
Honby east end sid		10	
Newhall east end sid		10	
San Fernando west end sid		10	

Spring switches not equipped with facing point locks are located as follows, and speed indicated must not be exceeded while passing over them in facing movement, or in trailing through them.

Location Normal Position MPH

Vincent. west end westward siding. Eastward siding 10
vincent. West end westward siding. Dastward Siding 10
TT
Vincent.east end eastward siding Westward siding 10
vincent. cast cha castward sturing Westward sturing 10

There are other spring switches on roundhouse leads and yard tracks in Mojave yard limits.

#### RULE 605. INTERLOCKING

Vincent: Limits extend from 50 feet west of west switch to 50 feet east of east switch.

Saugus-Newhall: Limits extend from 265 feet west of east switch of westward siding Saugus to 265 feet east of west switch of siding Newhall.

When authorized by signal operator at Saugus to hand-throw either switch, member of crew cranking switch over must remain with switch to return it to normal position, or arrange for another member of crew to do so, unless otherwise instructed by signal operator.

Burbank Jct.: Whistle signals:

To Mojave Subdivision, or to Los Angeles, —. To siding, o o o o o.

#### **GENERAL REGULATIONS**

RULE 824. Instructions for setting hand brakes:

Mojave: On passenger trains, if road engine is to be detached, set two brakes on east end and two brakes on west end for each 16 cars or fraction thereof. When train is set out to tie up, at least half of the brakes must be set, but never less than two.

On eastward freight trains of 72 cars or less, set 10 brakes on east end and 10 in the middle. On trains of 73 cars or more set 15

brakes on east end and 15 in the middle.

On westward freight trains of 72 cars or less set 10 brakes on east end, five in the middle and five on west end. On trains of 73 cars or more, set 15 brakes on east end, 10 in the middle and five on west end.

At points where hand brakes must be set on freight trains such brakes must be securely set, using standard brake club to set staff brakes, after train has stopped. When necessary to release hand brakes to move portion of the cars, the same number must be set on remaining cars to replace them.

RULE 825. Portable rail skids are hung on posts at lower end of sidings at:

Harold Vincent Ravenna When necessary to leave cars on any of these sidings permission must first be obtained from chief train dispatcher, after which rail skid must be placed on rail and leading wheel of first car in descending direction run onto the rail skid, and hand brakes set if brakes are operative, before engine is detached. Trains picking up cars from these sidings must remove rail skid and return it to proper post and lock it in place with switch lock.

Road crossing at MP 470.8 west of Burbank Jct. is closed except for emergency use of fire trucks, ambulances, etc. This crossing must

not be left blocked when unattended.

RULE 869. All except rear swing, and rear brakeman will ride on top of train near middle of their portion, entering and leaving terminals and through interlockings; also Vincent to Saugus; Vincent to Falmdale; Tunnel to Burbank Jct.; Searles to Cantil, and at other places as instructed by conductor. Between Vincent and Saugus rear swing brakeman, at the discretion of conductor may be permitted to ride in cupola of caboose or on portion of train assigned to him. Rear brakeman will watch track to rear of train for evidence of derailment or equipment dragging, between these two stations.

Trainmen must not ride on top of train while passing through

RULE 827. TRAIN INSPECTION

Eastward freight trains may make continuous run Vincent to Lang, where retainers must be turned down, and running inspection made after stopping.

Westward freight trains must stop at Rand 10 minutes.

Westward trains using retainers Searles to Garlock must not

exceed 20 MPH.

All passenger trains, except Regular No. 55, must stop at Mojave, approaching at not to exceed 8 MPH to allow forward brakeman to detrain on station side where rear of train will stop. Brakeman will then make rolling inspection of train, then walk length of train on opposite side making standing inspection, giving careful attention to running gear and journal boxes, and entrain on station

#### AIR BRAKE RULES

RULE 17. Eastward passenger trains, Vincent to Lang, with less than 75% graduated release equipment, will use at least 75% of retainers.

Westward passenger trains, Vincent to Palmdale, with less than 75% graduated release equipment must not exceed 20 MPH, unless five retainers (or more if requested by engineer), are turned up, on the head end.

Retainers will be used on freight trains as follows: Eastward trains STunnel or San Fernandol One valve for each to Burbank Jct. (400 Ms in train. of 45 cars or more... to Burbank Jct. 400 Ms in train. Eastward trains.....Vincent to Lang......One valve for each

100 Ms in train. Westward trains....Vincent to Harold.......10 retainers
Westward trains....Searles to Garlock......One valve for each 150 Ms in train.

If eastward trains are delayed at Harold retainers may be turned up there instead of Vincent. Eastward and westward trains may turn retainers approaching Vincent.

If eastward trains are stopped at Saugus or Newhall, retainers may be turned up there instead of at Tunnel or San Fernando. Eastward trains handling 20 or more cars of rock or sand Ros-

coe to Los Angeles Yard, one valve for each 150 Ms in train must be turned up, and continuous run may be made Roscoe to Los Angeles Yard. If stop is made east of Burbank Jct. retainers may be turned down, if not required beyond.

If all retainers in train not already required, three additional retainers must be used for each helper engine in train on descend-

ing grade.

#### FREIGHT TRAINS

RULE 25. Rear end test will be made in accordance with Rule 25 (b); and in addition will be made by all trains that stop at Mojave and Vincent. Westward trains of 75 cars or more must stop at Vin-

cent. This test will also be made by all trains at Searles.

Trains not required to stop at Vincent must make running air brake test between siding switches. Trainmen will note reduction on caboose gage, and following build up in pressure when brakes are released, give proceed signal. Running test will be made as follows: Engineer, while working steam will make reduction of approximately seven pounds, wait for slack to adjust itself, then add three pounds before releasing.

RULE 33. The maximum tonnage per operative brake between Palmdale and Saugus is 125 Ms; and between Searles and Garlock is 150 Ms.

#### PASSENGER TRAINS

RULE 39. Running test will be made at following points: stopped at Saugus.

Three miles west of Burbank Jct.... Eastward trains. After passing MP 458..... Westward trains.

#### MISCELLANEOUS

4. Helper engines on freight trains must be placed in rear through Tunnel 25.

10. Engines listed must not operate on tracks shown below: Class of Engine Restricted Tracks

AM-MM-AC-Mt-GS-SP . . . San Fernando—Transfer track, beyond 300 feet from switch.

AM-MM-AC-Mt-GS-SP . . . Roscoe—Union Supply track.

A-Mk-F-AM-MM-AC-Mt-

GS-SP ...... All stations between Mojave and Searles— Must not leave main track, except at sidings Neuralia, Cantil, Rand, Garlock.

F class...... Saltdale—Must not go beyond frog on west end.

Flat cars loaded with poles or piling must not be spotted on team track adjacent to main track at Rosamond without authority from chief train dispatcher who will protect by train order. At other stations such loads must not be spotted for unloading on team tracks adjacent to main track when possible to avoid it.

tracks adjacent to main track when possible to avoid it.

Due to impaired overhead and side clearance, the spotting or switching of box cars under the Narrow Gage high line at Owenyo

is prohibited.

Engines equipped with pilot snow plow, except Mt and GS class, are prohibited from entering Los Angeles LAUPT, account impaired platform clearance.

Load limit (car and contents):

Owenyo Branch......200,000 pounds.

17. No sanding of flues permitted between Tunnels 18 and 19, and between east switch Russ and 1000 feet east of east switch Russ.

30. Maintenance and operation between MP 449.78 Saugus, and Burbank Jct., are under the jurisdiction of Los Angeles Division. Train dispatching between Saugus and Burbank Jct. is under the jurisdiction of San Joaquin Division.

Employes operating in and out of Los Angeles LAUPT are required to have a copy of, and be conversant with current book of

rules of LAUPT.

LOCATION OF OVERHEAD AND SIDE STRUCTURES NOT STANDARD CLEARANCE ON MAIN TRACK AND SIDINGS

MP Location Description

426.8 West of Searles ...... Tunnel 29—Overhead
519.4 East of Lone Pine ...... Owens River bridge—Side

#### SPEED RESTRICTIONS

MAXIMUM SPEED PERMITTED CERTAIN ENGINES, SUBJECT TO FURTHER RESTRICTION AS SHOWN IN SPEED RESTRICTIONS TABLE

S and SE class engines must not exceed 15 MPH between MP 417 and Saugus.

Engines listed below must not exceed following speed between Mojave and Searles:

F-4-5 and AC-4-5 Class	AC-6-7-8-9-10-11-12 Class					
Mojave-MP 406.825 MPH	Mojave - MP 406.825 MPH					
MP 406.8 - MP 413.720 MPH	MP 406.8 - MP 413.715 MPH					
MP 413.7 - MP 426.725 MPH	MP 413.7 - MP 426.725 MPH					
MP 426.7 - Searles20 MPH	MP 426.7 - Searles15 MPH					

SPEED RESTRICTIONS FOR OTHER THAN MAIN TRACKS

With Caution Not Exceeding MPH

SPEED RESTRICTIONS: Maximum speed of Passenger trains must not exceed 50 MPH and Freight and Mixed trains 35 MPH except as otherwise provided for herein, or by bulletin, train order or fixed signal.

Maximum speed of any train with an engine not shown in Speed Restriction table, 35 MPH, and is further restricted to maximum speed shown for Freight and Mixed trains if less than 35 MPH.

N.Y.		WITH TRAIN—ENGINE RUNNING FORWARD						LIGHT ENGINE RUNNING FOR		WITH TR/		TRAIN				
age Vo.	TERRITORY	P-8 (if CCB*) P-7-10- 12 GS Mt	E A P-1-3-4- 5-6-11 P-8 (if not CCB*)	T -26 -32 -37 -40	AC-4-5- 7-8-9- 10-11- 12 AC-6 (if	T-1-8-9-23-28- 31-36-57-58 Mk-5-6-7-8-9 F (if CCB*) SP Gas-elec. cars	M AM-2	C-2-4-5-8-9- 10-18-19-28- 27-28-29 Mk-2-4, TW F (if not CCB*) AC-1-2-3-6 (if not CCB*)	C-15-17- 32 Mk-10-11 MM-3	FREIGHT AND MIXED	E P A Mt GS	F (if	M T-1-8-9-23-28- 31-36-57-58 C-2-4-5-8-9-10- 18-19-26-27- 28-29 Mk-5-8-7-8-9 F (if not CCB*) SP	C-15- 17-32 TW Mk-2-4- 10-11 AC AM-2 MM-3	E Mk A F T Mt	AC AM-2 MM-3
, 7	Mojave-MP 381.4.  MP 381.4-MP 414.8.  MP 414.8-MP 417, except  Westward freight trains.  MP 417-MP 420.5 (Vincent), except  Westward freight trains.	30 65 50	30 65 50	30 60 50	30 55 50	30 50 50	30 45 40	30 40 40	30 35 35	20 40 40 20	20 40 40	20 35 35	20 35 35	20 30 30	20 30 30	20 25 25
	MP 417-MP 420.5 (Vincent), except Westward freight trains	30	30	30	30	30	30	30	30	25 20	25	25	25	25 	15 	15 
	MP 420.5-MP 438.17, except Westward passenger trains, MP 426 to MP 422 MP 435.19-MP 436.74 Eastward freight trains and light engines, MP	30 40	30 40 35	30 40 35	30 40 35	30 40 35	30 40 35	30 40 35	30 35 35	20 	25 	25	25 	25 	15 	
	Eastward freight trains and light engines, MP 425.68 to MP 438.17  Westward freight trains and light engines, MP 438.17 to MP 420.5									25 25	25 25	25 25	25 25	25 25	15 15	15 15
	MP 438.17-MP 442.13. MP 442.13-MP 446.22. MP 446.22-MP 448.23. MP 448.23-MP 450.6 (Saugus)	35 30 40 30	35 30 40 30	35 30 40 30	35 30 40 30	35 30 40 30	35 30 40 30	35 30 40 30	35 30 35 30	25 25 25 25 25	25 25 25 25 25	25 25 25 25 25	25 25 25 25 25	25 25 25 25 25	15 15 15 15 15	15 15 15 15
	MP 450.6-Burbank Jct., except MP 451.5-MP 455. MP 455. MP 458.1	50 40 30	50 40 30 40	50 40 30 40	50 40 30 40	50 40 30 40	45 40 30 40	40 40 30 40	35 35 30 35	35 25 20 25 25 25	35 25 30 25	35 25 30 25	35 25 30 25	30 25 30 25	30 25 20 25	25 25 20 25
	Eastward freight trains, MP 458.14 to MP 471.60  *MP 461.05-MP 462.17, over McClay & Brand Blvd., San Fernando. MP 463.8-MP 470.8  Burbank Jct. crossover, west of interlocking tower	25 60 25	25 60 25	25 60 25	25 55 25	25 50 25	25 45 25	25 40 25	25 35 25	25 35 25	25 35 25	25 35 25	25 35 25	25 30 25	25 30 20	25 25 20

Exception: Mk-5-6-7-8-9, and AC-4-5-7-8-9-10-11-12 class engines when running forward light, may make maximum speed of 40 MPH between MP 414.8 and east switch Mojave, but must observe 30 MPH restriction over Lancaster street crossings.

	SPEED RESTR	ICTIONS-BR	ANCHES	
				wa below:
Maximum speed	or passenger, ir	eigur ann mixen	trains is as sin	MIT DETOM .

Page No.	TERRITORY	PASS- ENGER	FREIGHT AND MIXED	LIGHT ENGINE RUNNING FORWARD	ENGINE BACKING	SWITCH ENGINE S-SE CLASS
11	Mojave-Owenyo, except	30 10 30 25	30 10 30	30 10 20	20 10 15	20 10
	MP 557-MP 552 and MP 550-MP 547 MP 529-MP 528.5 Zurich-MP 520.5	25 15 25	30 25 15 25	20 15 20	15 15 15	

<sup>\*</sup>Regulated by city ordinance.

## RATING OF ENGINES—In Ms of 1000 lbs. Back of Tender.

NOMINAL CLASS	ENGINE NUMBERS	Molave to Rosamond Rosamond and Lancaster	Lancaster to Saugus	Rosamond to Mojave	Saugus to Lancaster	Los Angeles to Saugus	Saugus to Los Angeles	Mojave to Searles	Searles to Owenyo	Owenyo to Searles	Searies to Mojave
DES-1,2,3,4,5,6,7 DES-100 to 107 E-23 M-4 M-6, 8 M-9, 11 M-11	1000 to 1022 1300 to 1395 1500 and 1502. 1617 to 1713. 1721 to 1803, 1823 to 1825. 1804 to 1822, 1826 to 1831 and 1836. 1832 to 1835.	2500 3600 3100 4150 4850 5100 5300	400 650 520 750 900 970 1000	950 1300 1500 1650 1700	350 600 470 680 820 890 910	400 650 510 730 930 990 1000	450 700 580 820 1000 1100 1130	690 970 1150 1250 1300	690 970 1150 1250 1300	1250 1700 2000 2150 2250	1250 1700 2000 2150 2250
T-1 T-8, 9 T-23 T-26 T-28, 31 T-32, 40 T-36 T-37 T-57, 58	2242 to 2271 2161, 2174 and 2178. 2301 to 2310. 2283 to 2299. 2311 to 2362. 2363 to 2384. 2103. 2105 and 2106. 2385 and 2386.	3450 2500 5050 4450 5550 5700 3750 5050 4450	620 430 940 800 1050 1050 710 940 830	1100 780 1600 1400 1800 1850 1200 1600 1500	560 390 850 730 950 990 660 870 750	630 420 930 800 1050 1050 710 940 820	710 480 1030 900 1200 1200 780 1050 900	830 560 1200 1000 1350 1350 910 1200 1100	830 560 1200 1000 1350 1350 910 1200 1100	1450 1000 2100 1850 2350 2400 1600 2150 1900	1450 1000 2100 1850 2350 2400 1600 2150 1900
P-1, 3, 5 P-1 P-4 P-6 P-7 P-8, 10 P-8, 10 P-11 P-12	(2408, 2411 to 2413, 2416 to 2418, 2423, 2425 to 2435, 2437 to 2452, 2459 and 2466) 2400, 2403 to 2407 and 2415(2401, 2402, 2409, 2410, 2414, 2419, 2420, 2422, 2424 and 2436) 2453, 2454 and 2458(2476 and 2477) 2461 to 2474, 2478 to 2483 2475, 2484 to 2491(3100 to 3109) 3120 to 3129	4600 4800 5000 5650 6000 6250 6250 4900 6600	800 820 870 1000 1100 1100 1100 850 1150	1400 1500 1550 1800 1900 1950 2050 1550 2050	740 750 800 940 1000 980 980 770 1050	800 840 900 1000 1100 1100 1100 850 1200	890 930 1100 1150 1250 1250 1250 950 1350				
C-5.8,9.10,26 to 29 C-15, 32 C-17 C-18 C-19 TW-1 TW-2, 3 TW-4, 6 TW-8	2513 to 2599, 2624 to 2860, 3440 to 3469. 2500, 2505 to 2507. 2510 and 2511. 3400 to 3409. 3410 to 3426. 2900 to 2913. 2932 to 2952. 2926 to 2931 and 2957. 2914 to 2923.	6100 3900 4800 5600 5850 4650 3750 3550 5150	1150 750 960 1100 1150 900 700 650 990	2000 1300 1600 1850 1900 1500 1200 1150 1700	1050 690 880 1000 1050 820 640 600 911	1200 740 950 1100 1100 890 690 640 980	1300 820 1050 1200 1250 980 770 720 1050	1480 960 1200 1400 1450 1100 900 840 1250	1480 960 1200 1480 1450 1100 900 840 1250	2600 1650 2050 2400 2500 2000 1550 1500 2200	2600 1650 2050 2400 2500 2000 1550 1500 2200
A-3 A-6 Mk-2, 4 Mk-5,6 Mk-7, 8, 9 Mk-10 Mk-11	3029 3025, 3036, 3052 and 3057. 3000 to 3003. 3201 to 3240. 3241 to 3277. 3300 to 3324. 3295. 3297 and 3298.	3600 3600 4400 6900 7800 8550 6550 6300	570 580 750 1250 1500 1650 1300 1250	1100 1150 1350 2200 2500 2800 2150 2100	520 530 690 1200 1350 1500 1200 1150	580 600 700 1300 1450 1650 1250 1200	650 690 800 1400 1600 1850 1400 1350	1700 1850 2100 1600 1550	*1650 *1900 *2100 *1600 *1570	*2900 *3300 *3650 *2800 *2700	3000 3300 3650 2800 2700
F-1 F-3 F-4, 5 AM-2 MM-3 AC-1, 2, 3 AC-4, 5 AC-6 to 12	3600 to 3652. 3653 to 3667. 3668 to 3769. 3900 to 3911. 3930 and 3931. 4000 to 4048. 4100 to 4125. 3800 to 3811, 4126 to 4294.	8900 10200 10200 10150 11800 12300 16000 17000	1700 1950 1950 1950 2300 2450 3200 3400	2900 3350 3500 3300 3900 4000 5300 5550	1550 1750 1750 1800 2050 2200 2900 3100	1750 2000 2100 1950 2250 2500 3200 3400	1950 2200 2300 2150 2450 2700 3500 3700	3000 3700 3900	*3100	*5300	5200 6700 7000
Mt-1, 3, 4, 5 Mt-2 GS-1, 2 GS-3, 4, 5, 6 SP-1, 2, 3	4300 to 4376 4385 to 4390 4400 to 4415 4416 to 4469 5000 to 5048	8350 8800 9000 9200 12000	1500 1550 1550 1600 2350	2600 2900 2750 2900 3950	1350 1400 1400 1450 2100	1550 1600 1600 1650 2300	1750 1800 1800 1850 2500		se engine rate east		
Empty and	(Less than 45 Ms	6 3 0	3 3 0	3 3 0	3 3 0	3 3 0	3 3 0				

ENGINES FOR WHICH NO RATING IS SHOWN IN THE RATING OF ENGINES TABLE WILL NOT BE PERMITTED TO OPERATE IN THAT TERRITORY UNLESS AUTHORIZED BY SUPERINTENDENT.

#### MILEAGE

M			

MAIN LINES	
End Western Division to Goshen Jct. C. P. Ry. End Western Division to Fresno. S. P. R. R. Goshen Jct. to Saugus. S. P. R. R. Fresno to Famoso via Exeter. S. P. R. R.	40.10 0.52 210.05 103.95
Total main lines	354.62
BRANCHES	
Arvin S. P. Co. Magunden to Arvin. Clovis S. P. R. Fresno to Friant Coalinga. S. P. R. Armona to Coalinga. Fresno Interurban. F. I. Ry. Co. Barton to Belmont Ave. Keeler. S. P. R. Laws to Keeler. McKittrick S. P. R. Bakersfield to McKittrick Minkler-Southern A. T. & S. F. Porterville to Ducor. Oil City S. P. R. Oil Jct. to Oil City. Owenyo. S. P. R. Mojave to Owenyo. Richgrove S. P. R. Richgrove to Jovista. Riverdale S. P. R. R. Ingle to Goshen Jct. Stratford S. P. R. Rossi to Stratford Success S. P. Co. Porterville to Succes. Visalia S. P. R. R. Goshen Jct. to Exeter.	16.89 24.14 40.21 16.89 71.33 47.61 12.53 6.76 143.15 4.16 64.48 8.26 7.76 16.77
Total Branches	480.94
Total San Joaquin Division	835.56

#### SPEED TABLE

TIME PER MILE	MILES PER HOUR
36" 37"	 . 100
38" 39" 40"	 . 94.7 . 92.3 . 90
41" 42"	 . 87.8 . 85.7
43" 44" 45"	 . 83.7 . 81.8 . 80
46" 47"	 . 78.3 . 76.6
48" 49" 50"	 . 75 . 73.5 . 72
51" 52"	 . 70.6
53" 54" 55"	 . 67.9 . 66.6 . 65.4
56" 57"	 . 64.2
58" 59" 1' 00"	 . 62 . 61 . 60
1' 01" 1' 02"	 . 59
1' 03" 1' 04" 1' 05"	 . 57.1 . 56.2 . 55.3
1' 06"	 . 54.5
1' 08" 1' 09" 1' 10"	 . 52.9 . 52.1 . 51.4
1' 11" 1' 12"	 . 50.7 . 50
1' 13" 1' 14" 1' 15"	 . 49.3 . 48.6 . 48
1' 16" 1' 17"	 . 47.3 . 46.7
1' 18" 1' 19" 1' 20"	 . 46 . 45.5 . 45
1' 25" 1' 30"	 . 42.3 . 40
1' 35" 1' 40" 1' 45"	 . 37.9 . 36 . 34.3
1′ 50″ 1′ 55″	 . 32.7 . 31.3
2' 00" 2' 15" 2' 30"	 . 30 . 26.6 . 24
2' 45" 3' 00"	 . 21.8
3′ 30″ 4′ 00″ 5′ 00″	 . 17.1 . 15 . 12
6′ 00″ 7′ 00″	 . 10
7′ 30″ 8′ 00″ 10′ 00″	 . 8 . 7.5 . 6

